


H9HK SERIES HEATER KITS

INSTALLATION INSTRUCTIONS

For installation in 208/240V, 480V, & 575V Light Commercial Packaged Air Conditioners & Packaged Heat Pumps.

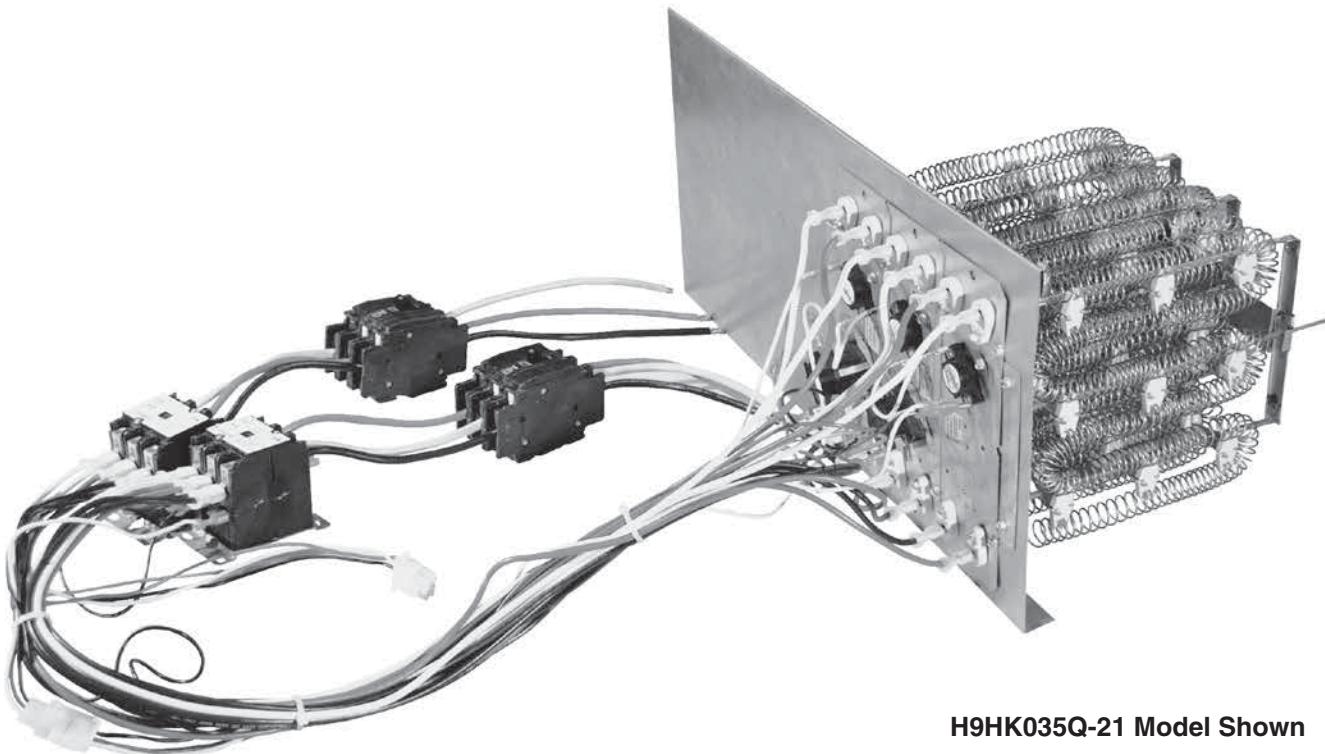

H9HK035Q-21 Model Shown

IMPORTANT

ATTENTION INSTALLERS:

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. All installations must be in accordance with these instructions and with all applicable national and local codes and standards.

Please read all instructions carefully before starting the installation. Return these instructions to the customer's package for future reference.

DO NOT DESTROY. PLEASE READ CAREFULLY & KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.

TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION.....	2
GENERAL INFORMATION.....	2
Clearances to Combustibles.....	3
Wiring Diagrams.....	3
Clearances	3
ELECTRICAL SUPPLY	3
Installation Preparations	3
Terminal Blocks.....	3
Circuit Options.....	3
Single Branch Circuit Electrical Connection	3
Multiple Branch Circuit Electrical Connection.....	3
Circuit Breakers.....	3
Breaker Removal.....	4
HEAT KIT INSTALLATION.....	4
AIRFLOW.....	6
FIGURES & TABLES.....	6
Table 3. Heater Kit Model Cross Reference	6
Electrical Data.....	7
Table 4. MCA / MOP Data (Single Circuit)	7
Table 5. MCA / MOP Data (Multiple Circuit).....	8
Electrical Diagrams	9
Figure 13. Single & Dual Power Supply Connections	9
Figure 14. W.D. for 9 kW, 240 V, 3-Phase	10
Figure 15. W.D. for 9 kW, 480 V, 3-Phase	11
Figure 16. W.D. for 10 kW, 575 V, 3-Phase	12
Figure 17. W.D. for 18 kW, 240 V, 3-Phase	13
Figure 18. W.D. for 18 kW, 480 V, 3-Phase	14
Figure 19. W.D. for 20 kW, 575 V, 3-Phase	15
Figure 20. W.D. for 30 & 35 kW, 240 V, 3-Phase.....	16
Figure 21. W.D. for 30 & 35 kW, 480 V, 3-Phase.....	17
Figure 22. W.D. for 30 kW, 575 V, 3-Phase	18
Figure 23. W.D. for 40 kW, 575 V, 3-Phase	19

IMPORTANT SAFETY INFORMATION

INSTALLER: Please read all instructions before servicing this equipment. Pay attention to all safety warnings and any other special notes highlighted in the manual. Safety markings are used frequently throughout this manual to designate a degree or level of seriousness and should not be ignored. **WARNING** indicates a potentially hazardous situation that if not avoided, could result in personal injury or death. **CAUTION** indicates a potentially hazardous situation that if not avoided, may result in minor or moderate injury or property damage.

! WARNING:

RISK OF ELECTRICAL SHOCK

Shut off all electrical power to the unit before performing any maintenance or service on the system. Failure to follow this warning can cause serious injury, fire, electrical shock, or death.

- The installer performing this work assumes all responsibility when installing this kit. These instructions are primarily intended to assist qualified individuals experienced in the proper installation of these components. Some local codes may require licensed installation/service personnel for this type of equipment. Safety should always be the deciding factor when installing this product and using common sense plays an important role as well. Improper installation of the components or failure to follow safety warnings could result in serious injury, death, or property damage.
- Unless noted otherwise in these instructions, only factory authorized parts or accessory kits may be used with this product. Improper installation, service, adjustment, or maintenance may cause fire, electrical shock or other hazardous conditions which may result in personal injury or property damage.
- Please read all instructions carefully before starting the installation. If a problem occurs, check the instructions and follow recommendations given.
- The information shown in these instructions must be followed during the installation of this kit. Unqualified individuals should not attempt to interpret these instructions or install this equipment. If you do not possess mechanical skills or tools, call your local dealer for assistance.
- Use caution when handling the appliance or removing components. Personal injury can occur from sharp metal edges present in all sheet metal constructed equipment.

GENERAL INFORMATION

H9HK heater kits are approved for use in P7TQ packaged air conditioners and Q7TQ packaged heat pumps when applied and installed according to these instructions. Use the model identification code in [Figure 1, \(page 2\)](#) and [Table 1, \(page 3\)](#) for approved H9HK Heat kit applications in air conditioner and heat pump systems. Refer to the National Electric Code (ANSI/NFPA 70) or in Canada the Canadian Electric Code Part 1 (CSA C.22.1) and applicable local codes

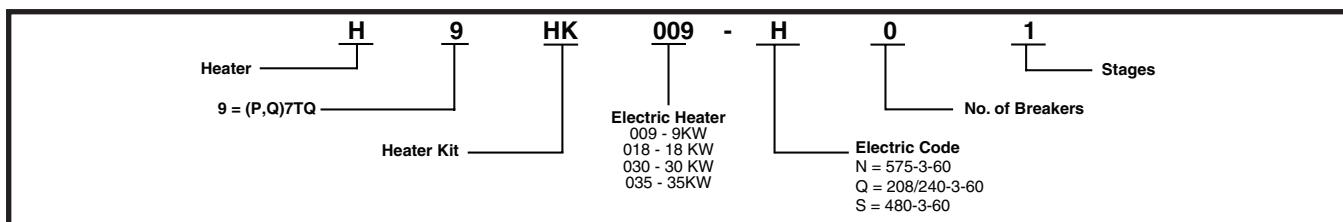


Figure 1. Heater Kit Identification Code

HEATER KITS	DESCRIPTION	PART NUMBER
3 PHASE 208/240V	H9HK009Q-01 (9kw)	1011669
	H9HK018Q-11 (18kw)	1011672
	H9HK030Q-21 (30kw)	1011675
	H9HK035Q-21 (35kw)	1011678
3 PHASE 480V	H9HK009S-01 (9kw)	1011670
	H9HK018S-01 (18kw)	1011673
	H9HK030S-01 (30kw)	1011676
	H9HK035S-01 (35kw)	1011679
3 PHASE 575V	H9HK009N-01 (9kw)	1011671
	H9HK018N-01 (18kw)	1011674
	H9HK030N-01 (30kw)	1011677
	H9HK035N-01 (35kw)	1011680

Table 1. Heater Kits & Part Numbers

for overcurrent protection and disconnect requirements. **NOTE:** If any of the original wiring supplied with the unit must be replaced, it must be replaced with material of the same gauge and temperature rating.

Clearances to Combustibles

All units are approved for zero clearance to combustibles when installed according to these instructions and other instructions included with the unit and other approved accessories.

Wiring Diagrams

Wiring Diagrams are shipped with each H9HK Heater kit assembly. Attach the heater kit wiring diagram label over the bottom half of Sheet #2 of the unit wiring diagram label on the control panel access door. For proper adherence, make sure the surface is clean and free of oil before applying.

Clearances

All H9HK Electric Heater kits are approved for use in installations with zero-clearance to combustibles at any blower speed allowed on the units blower performance charts for both Horizontal and Downflow applications when installed according to these instructions and other instructions included with the unit and other approved accessories. See note (in bold type) for vertical duct applications in Heat Kit Installation section on [page 4](#).

ELECTRICAL SUPPLY

All wiring must comply with the current revision of the National Electric Code and must be sized for the minimum ampacities as listed on the unit data label or in [Table 1](#). Refer to the detailed wiring diagrams for proper connections: [Figure 13 \(page 9\)](#), [Figure 14 \(page 10\)](#), [Figure 15 \(page 11\)](#), [Figure 16 \(page 12\)](#), [Figure 17 \(page 13\)](#), [Figure 18 \(page 14\)](#), [Figure 19 \(page 15\)](#), [Figure 20 \(page 16\)](#), [Figure 21 \(page 17\)](#), [Figure 22 \(page 18\)](#), and [Figure 23 \(page 19\)](#).

If the unit was previously installed without electric heat, the existing supply wiring may not be sufficient to handle the increased load. See the unit rating label or [Table 4, \(page 7\)](#) or [Table 5, \(page 8\)](#) for minimum circuit ampacities and maximum overcurrent protection ratings.

Installation Preparations

Before proceeding with the electrical connections, make sure that the voltage, frequency, and phase of the supply source are the same as those specified on the unit rating label. Also verify that the service provided by the utility is sufficient to handle the additional load imposed by this equipment.

Terminal Blocks

Approved H9HK heater kits are shipped ready to install using single or dual circuit electrical supply and existing factory installed terminal blocks. If dual circuit supply is desired, follow instructions included under Multiple Branch Circuit Electrical Connections section.

NOTE: Use of the 3 pole terminal block found in the main control panel is for the unit's refrigerant cooling and heat pump circuit only. This circuit includes:

- Compressors
- Blower motors
- OD fan motors
- Low Voltage transformer (all unit electrical loads)

Circuit Options

P7TQ & Q7TQ units installed with electric heat may be wired for single or multiple circuit supply connections.

Single Branch Circuit Electrical Connection

Units are factory ready for addition of H9HK heater kits. See unit rating label or [Table 4, \(page 7\)](#) for single point power circuit Minimum Circuit Ampacity (MCA) and Maximum Over-Current Protection of branch circuit wiring.

Field wiring will be routed from the branch circuit disconnect to this 3 pole terminal block for both heating and cooling operation.

Multiple Branch Circuit Electrical Connection

For Dual Point Power Circuit connections see the unit rating plate or electrical data in [Table 5, \(page 8\)](#) for proper high voltage branch circuit requirements. Both 3 pole terminal blocks provided in the unit will be used for converting to dual supply connections.

The 3 pole terminal block located in the electric heat vestibule is for connection of the electric heater kit branch circuit wiring. Field wiring will be routed from the electric heat branch circuit disconnect to this 3 pole terminal block for heating operation.

The factory supplied red, yellow, and black wires connected to the electric heat terminal block from the main unit 3 pole terminal block must be removed. These 3 wires (if long enough) may be used for connection between the unit main control panel 3 pole terminal block and the second branch circuit power supply disconnect for cooling and blower operation. See [Figure 13 \(page 9\)](#).

Circuit Breakers

If circuit breakers are used for any circuit, they must be used for all electric heat circuits. Use one breaker for each circuit. See [Table 3, \(page 6\)](#). If circuit breakers are not being used, proceed to the Heat Kit Installation section on [page 4](#).

IMPORTANT NOTE:

Circuit breakers (if installed) in the unit with the addition of heater kits are for short circuit protection of the internal heater element circuit wiring and DO NOT serve as a unit disconnect. The circuit breakers DO NOT provide over-current protection of the supply wiring.

- Whether or not circuit breakers are used in the units, overcurrent protection of the unit supply wire must be provided at the branch circuit distribution panel and must be sized as shown in [Table 3, \(page 6\)](#) or on the unit rating label and according to the National Electric Code, Canadian Electrical Code and applicable local codes.
- NOTE:** In most cases the overcurrent protection specified on the unit rating label is less than the 60 amp rating of the circuit breakers used in the units. This is because the function of the overcurrent protection required at the distribution panel (field supplied) and the unit mounted breakers is different.

Breaker Removal

Insert a screwdriver into the hole (in the white release tab) and pull down. **NOTE:** The white release tab is located at the base of the breaker under the line side (right) terminals.

HEAT KIT INSTALLATION

Rooftop installations with vertical ducts must be provided with a 90-degree elbow installed in the supply duct to comply with U. L. (Underwriters Laboratories) codes for use with electric heat so the elements are not directly over a supply grille.



Figure 2. Compressor Access Panel

1. Remove Compressor Access panel. See [Figure 2](#).
2. Remove electric heat vestibule cover by pulling straight out, perpendicular to the unit. See [Figure 3](#).

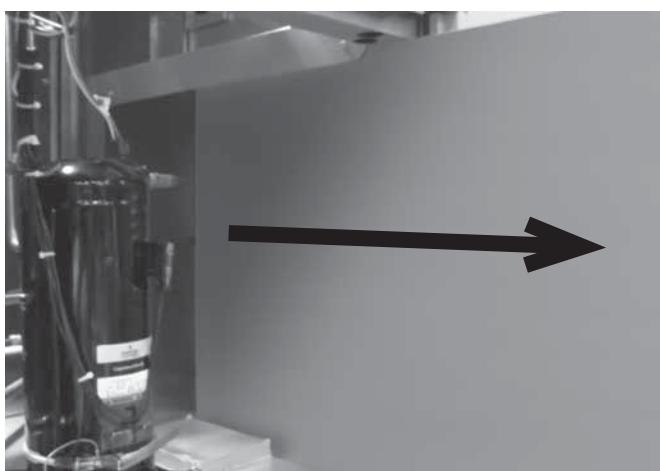


Figure 3. Electric Heat Kit Access Panel

3. Remove electric heat access plate. Retain all screws and foam wire guards for later use. See [Figure 4](#).
4. Install the DIN rail mounting bracket inside of the unit and tightly secure it with two screws. See [Figure 5](#). **NOTE:** This step needs to be performed only if circuit breakers are included with your kit.



Figure 4. Electric Heat Access Plate

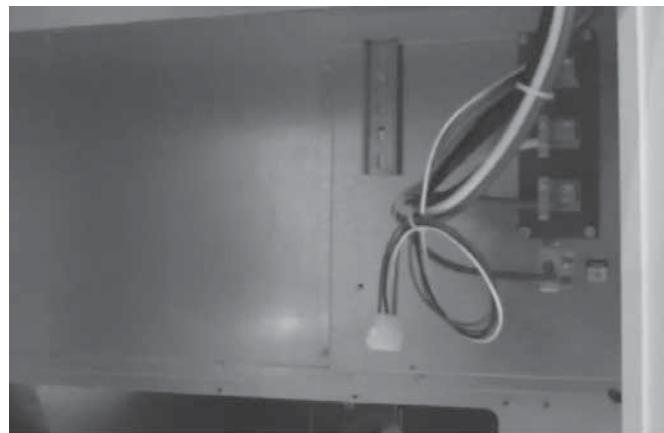


Figure 5. DIN Rail Location

5. Mount circuit breakers (if included with your kit) onto the DIN rail. **NOTE:** Secure circuit breaker(s) to bracket by hooking the rear top groove over the din rail and pushing in on the bottom until it snaps into place. Refer to [Table 3, \(page 6\)](#) for quantity.
6. Attach Black (T1), Yellow (T2), and Red (T3) power leads from the circuit breaker(s) to L1, L2, and L3 on the 3 pole terminal block.
7. Mount element control contactor (1 or 2 depending on kit) to the control panel with two screws. Make sure L1/L2/L3 wiring point to the left. See [Figure 6](#).

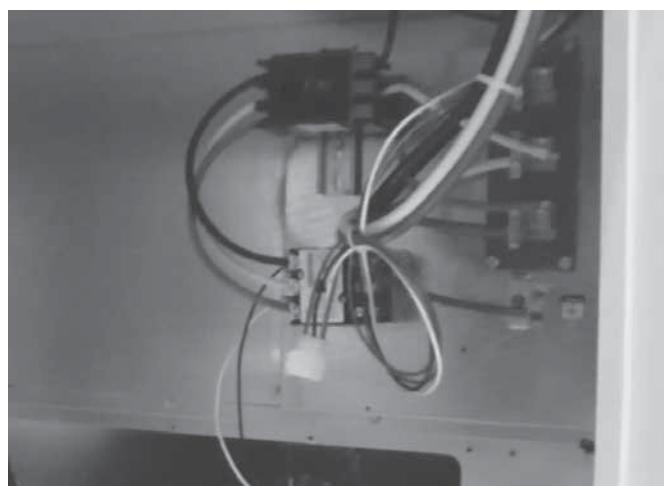


Figure 6. Single Circuit Breaker & Contactor

8. Attach Black (T1), Yellow (T2), and Red (T3) of contactor to circuit breaker L1, L2, and L3 as shown in [Figure 7](#) or attach directly to 3 pole terminal block L1, L2, and L3 if no breaker is used.

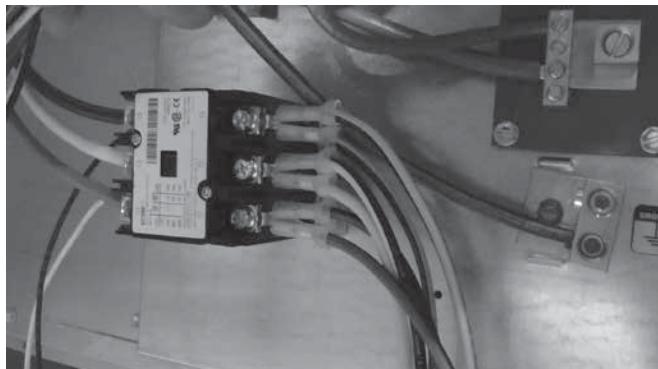


Figure 7. Element Line Voltage Connections

9. Carefully slide electric heat kit into place by aligning the formed "J" hooks at the top of the element mounting plate to the element mounting bracket located under the blower mounting deck. See [Figure 8](#) and [Figure 9](#).



Figure 8. Bracket Location

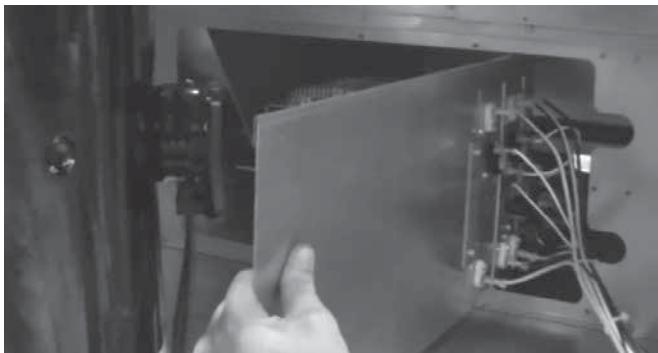


Figure 9. Installation of Heater Elements

10. Secure the element assembly by aligning the two clearance holes in the bottom flange of the element mounting plate to the bottom pan and then one in the rear of the element assembly support bracket (excluding 575V kits) as shown in [Figure 10](#) and [Figure 11](#).
11. Route all wiring out the two wire passage holes and foam wire guards. See [Figure 12](#). **NOTE:** Power wires can exit through either opening but control wiring should exit the top.
12. Attach the high voltage Black (L1), Yellow (L2), and Red (L3) element wires to T1, T2, and T3 on the 3 pole control contactor.



Figure 10. Element Support Bracket

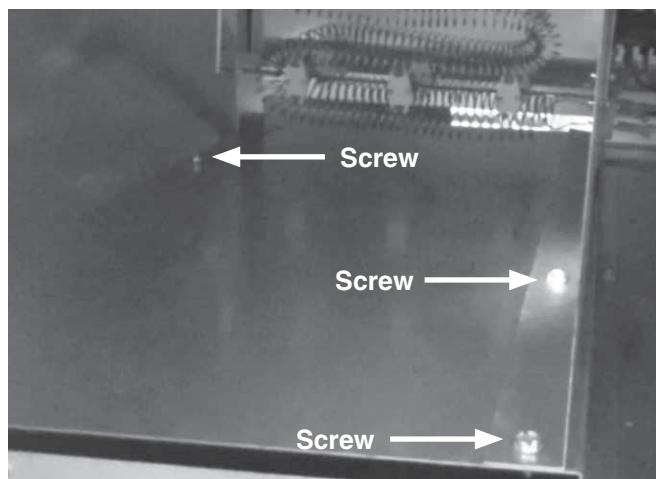


Figure 11. Securement Screw Locations (x3)

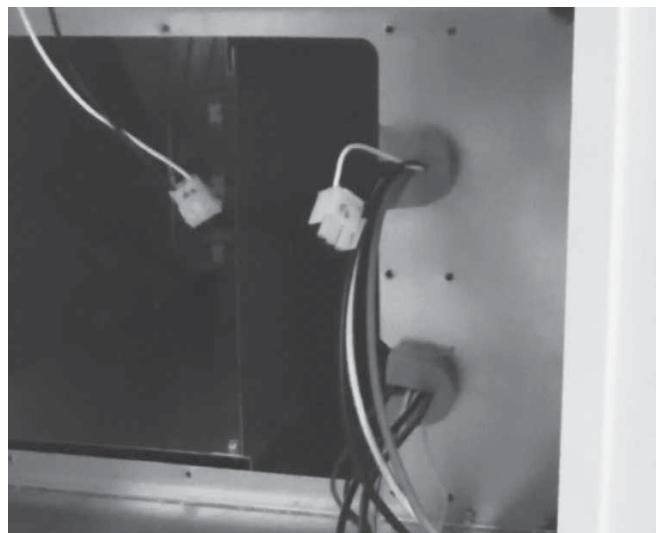


Figure 12. Wire Passage Foam Grommets

13. Connect and securely lock the low voltage 3 pin plug from the electric element assembly to the mating plug from the 3 pole contactor.
14. Connect and securely lock the low voltage 6 pin plug from the electric element assembly to the mating plug from the main unit control panel.

15. Replace the electric heat access plate using screws removed in Step 3. **NOTE:** Make sure the wires are not pinched and foam guards are in place.
16. Replace the electric heat vestibule cover removed in Step 2 and secure with screw.
17. Replace the compressor access panel.

AIRFLOW

The maximum external static pressure (ESP) for the unit is listed on the unit rating label.

The blower speed is preset at the factory for optimum operation in Heating and Cooling modes. It may be necessary for some applications to change the factory set speed due to the addition of electric heat kits. To change the blower speed see the "Blower Speed" section in the Installation Instructions shipped with the unit. If a lower blower speed is desired, then the heater element high temperature limits must be checked for proper operation. Nuisance tripping and cycling of the limits may result with too little of airflow. Limit operation should be checked with return air temperatures between 72° F and 78° F. If a higher blower speed is desired from the factory then no other testing is required.

IMPORTANT NOTE:

When installing H9HK heater kits In P7TQ/Q7TQ Series packaged units (on duct systems where the unit ESP is greater than that marked on the unit rating label) the heater kit may require the addition of a high static drive kit to increase blower performance. For blower data See

the unit blower performance tables in the Installation Instructions shipped with the unit. For accessory description and part number info refer to the Technical Sales literature.

Nominal heater kit temperature rise data shown in [Table 2](#) was calculated using the formula below.

$$\text{Temp Rise: } \Delta T = (\text{Btu/h}) / (\text{CFM} * 1.08)$$

NOTE: Generally the heat rise should be near values shown. Anything greater than 3-5 degrees above that shown should be avoided.

MODEL NUMBER	NOMINAL RATED CFM	* TEMPERATURE RISE °F (°C)			
		9 KW	18 KW	30 KW	35 KW
P7TQ072-*	2550	11° F (6° C)	22° F (12° C)	37° F (21° C)	43° F (24° C)
P7TQ090-*	3150	9° F (5° C)	18° F (10° C)	30° F (17° C)	35° F (19° C)
P7TQ120-*	3450	8° F (4° C)	16° F (9° C)	27° F (15° C)	32° F (18° C)

* Temperature Rise (°F) calculation = (kW * 3413) / 1.08 / Nominal CFM.
NOTE: For 208-230V electric heat kits operating @ 208 Volts, the Kw rating is derated 25%, therefore temperature rise will be lower than the values in the table.

Table 2. Heat Rise & Range

FIGURES & TABLES

NOMINAL TONNAGE	UNIT	NOMINAL KW	HEATER KIT MODEL	HEATER KIT PART NUMBER	BREAKERS	WIRING DIAGRAM NUMBER	LIMIT
6, 7.5, & 10 Ton 208/230V / 3Ph.	P7TQ(072/090/120-C) Q7TQ(072/090/120-C)	9	H9HK009Q-01	1011669	NONE	Figure 14	155° F
		18	H9HK018Q-11	1011672	1	Figure 17	155° F
		30	H9HK030Q-21	1011675	2	Figure 20	210° F
		35	H9HK035Q-21	1011678	2	Figure 20	210° F
6, 7.5, & 10 Ton 460V / 3Ph.	P7TQ(072/090/120-D) Q7TQ(072/090/120-D)	9	H9HK009S-01	1011670	NONE	Figure 15	155° F
		18	H9HK018S-01	1011673	NONE	Figure 18	155° F
		30	H9HK030S-01	1011676	NONE	Figure 21	210° F
		35	H9HK035S-01	1011679	NONE	Figure 21	210° F
6, 7.5, & 10 Ton 575V / 3Ph.	P7TQ(072/090/120-N) Q7TQ(072/090/120-N)	9	H9HK009N-01	1011671	NONE	Figure 16	170° F
		18	H9HK018N-01	1011674	NONE	Figure 19	170° F
		30	H9HK030N-01	1011677	NONE	Figure 22	155° F
		35	H9HK035N-01	1011680	NONE	Figure 23	155° F

Table 3. Heater Kit Model Cross Reference

Electrical Data

SINGLE CIRCUIT WITH NO ELECTRIC HEAT							
COOLING TONNAGE (2),(3)	VOLTAGE (1)	2 HP MOTOR			3 HP ECM MOTOR (OPTIONAL)		
		TOTAL LINE CURRENT	MCA	MOP	TOTAL LINE CURRENT	MCA	MOP
6	208V - 230V	26.4	30.8	45	29.3	33.7	50
	460V	12.8	14.9	20	14.3	16.4	20
	575V	9.78	11.4	15	N/A	N/A	N/A
7 1/2	208V - 230V	36.8	40.1	50	39.7	43.0	50
	460V	17.7	19.2	25	19.2	20.7	25
	575V	13.2	14.3	15	N/A	N/A	N/A
10	208V - 230V	42.6	46.6	60	45.5	49.5	60
	460V	21.1	23.1	30	22.6	24.6	30
	575V	15.8	17.2	20	N/A	N/A	N/A

SINGLE CIRCUIT WITH ELECTRIC HEAT									
COOLING TONNAGE (2),(3)	VOLTAGE (1)	2 HP MOTOR							
		MCA				MOP			
		9 KW	18KW	30KW	35KW	9 KW	18KW	30KW	
6	208V - 230V	31 - 34.6	52.9 - 59.9	82.5 - 94.1	98.3 - 112.1	45 - 45	60 - 60	90 - 100	100 - 125
	460V	18.5	30.8	46.9	56.0	20	35	50	60
	575V	15.5	28.1	40.6	53.3	20	30	45	60
7 1/2	208V - 230V	40.1 - 40.1	52.9 - 59.9	82.5 - 94.1	98.3 - 112.1	50 - 50	60 - 60	90 - 100	100 - 125
	460V	19.2	30.8	46.9	56.0	25	35	50	60
	575V	15.5	28.1	40.6	53.3	20	30	45	60
10	208V - 230V	46.6 - 46.6	52.9 - 59.9	82.5 - 94.1	98.3 - 112.1	60 - 60	60 - 60	90 - 100	100 - 125
	460V	23.1	30.8	46.9	56.0	30	35	50	60
	575V	17.2	28.1	40.6	53.3	20	30	45	60

HIGH STATIC DRIVE: SINGLE CIRCUIT WITH ELECTRIC HEAT									
COOLING TONNAGE (2),(3)	VOLTAGE (1)	3 HP ECM MOTOR (OPTIONAL)							
		MCA				MOP			
		9 KW	18KW	30KW	35KW	9 KW	18KW	30KW	
6	208V - 230V	34.6 - 38.3	56.5 - 63.5	86.1 - 97.8	101.9 - 115.8	50 - 50	60 - 70	90 - 100	110 - 125
	460V	20.4	32.6	48.8	57.9	25	35	50	60
	575V	---	---	---	---	---	---	---	---
7 1/2	208V - 230V	43.0 - 43.0	56.5 - 63.5	86.1 - 97.8	101.9 - 115.8	50 - 50	60 - 70	90 - 100	110 - 125
	460V	20.7	32.6	48.8	57.9	25	35	50	60
	575V	---	---	---	---	---	---	---	---
10	208V - 230V	49.5 - 49.5	56.5 - 63.5	86.1 - 97.8	101.9 - 115.8	60 - 60	60 - 70	90 - 100	110 - 125
	460V	24.6	32.6	48.8	57.9	30	35	50	60
	575V	---	---	---	---	---	---	---	---

NOTES:

1) To achieve the rated unit performance, unit voltage should be within 2% of nominal.

2) For C series units:

Nominal Unit Input Voltage = 208-230 Volt, 60 Hertz, 3 Phase

Minimum allowed unit voltage = 187V

Maximum allowed voltage = 253V

3) For D series units:

Nominal Unit Input Voltage = 460 Volt, 60 Hertz, 3 Phase

Minimum allowed unit voltage = 414V

Maximum allowed voltage = 506V

FLA = Full Load Amps; MCA = Minimum Circuit Ampacity; RLA = Rated Load Amps;

MOP = Maximum Over-Current Protection; LRA = Locked Rotor Amps

Table 4. MCA / MOP Data (Single Circuit)

MULTIPLE CIRCUITS																		
FACTORY UNIT ELECTRICAL DATA																		
COOLING TONNAGE	UNIT VOLTAGE	COOLING CIRCUIT								HEATING CIRCUIT								
		9 KW		18 KW		30 KW		35 KW		9 KW		18 KW		30 KW		35 KW		
		MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	
6	208-230 V	30.8 - 30.8	45 - 45	30.8 - 30.8	45 - 45	30.8 - 30.8	45 - 45	30.8 - 30.8	45 - 45	23.5 - 27.1	30 - 30	45.4 - 52.3	50 - 60	75.0 - 86.6	80 - 90	90.7 - 104.6	100 - 110	
	460 V	14.9	20	14.9	20	14.9	20	14.9	20	18.6	15	27.1	30	43.3	50	52.3	60	
	575 V	11.4	15	11.4	15	11.4	15	11.4	15	16.3	15	26	30	37.7	50	50.2	60	
7.5	208-230 V	40.1 - 40.1	50 - 50	40.1 - 40.1	50 - 50	40.1 - 40.1	50 - 50	40.1 - 40.1	50 - 50	23.5 - 27.1	30 - 30	45.4 - 52.3	50 - 60	75.0 - 86.6	80 - 90	90.7 - 104.6	100 - 110	
	460 V	19.2	25	19.2	25	19.2	25	19.2	25	18.6	15	27.1	30	43.3	50	52.3	60	
	575 V	14.3	15	14.3	15	14.3	15	14.3	15	16.3	15	26	30	37.7	50	50.2	60	
10	208-230 V	46.6 - 46.6	60 - 60	46.6 - 46.6	60 - 60	46.6 - 46.6	60 - 60	46.6 - 46.6	60 - 60	23.5 - 27.1	30 - 30	45.4 - 52.3	50 - 60	75.0 - 86.6	80 - 90	90.7 - 104.6	100 - 110	
	460 V	23.1	30	23.1	30	23.1	30	23.1	30	18.6	15	27.1	30	43.3	50	52.3	60	
	575 V	17.2	20	17.2	20	17.2	20	17.2	20	16.3	15	26	30	37.7	50	50.2	60	

HIGH STATIC DRIVE ELECTRICAL DATA																		
COOLING TONNAGE	UNIT VOLTAGE	COOLING CIRCUIT								HEATING CIRCUIT								
		9 KW		18 KW		30 KW		35 KW		9 KW		18 KW		30 KW		35 KW		
		MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	MCA	MOP	
6	208-230 V	33.7 - 33.7	50 - 50	33.7 - 33.7	50 - 50	33.7 - 33.7	50 - 50	33.7 - 33.7	50 - 50	23.5 - 27.1	30 - 30	45.4 - 52.3	50 - 60	75.0 - 86.6	80 - 90	90.7 - 104.6	100 - 110	
	460 V	16.4	20	16.4	20	16.4	20	16.4	20	18.6	15	27.1	30	43.3	50	52.3	60	
	575 V	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
7.5	208-230 V	43.0 - 43.0	50 - 50	43.0 - 43.0	50 - 50	43.0 - 43.0	50 - 50	43.0 - 43.0	50 - 50	23.5 - 27.1	30 - 30	45.4 - 52.3	50 - 60	75.0 - 86.6	80 - 90	90.7 - 104.6	100 - 110	
	460 V	20.7	25	20.7	25	20.7	25	20.7	25	18.6	15	27.1	30	43.3	50	52.3	60	
	575 V	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
10	208-230 V	49.5 - 49.5	60 - 60	49.5 - 49.5	60 - 60	49.5 - 49.5	60 - 60	49.5 - 49.5	60 - 60	23.5 - 27.1	30 - 30	45.4 - 52.3	50 - 60	75.0 - 86.6	80 - 90	90.7 - 104.6	100 - 110	
	460 V	24.6	30	24.6	30	24.6	30	24.6	30	18.6	15	27.1	30	43.3	50	52.3	60	
	575 V	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	

NOTES:

1) To achieve the rated unit performance, unit voltage should be within 2% of nominal.

2) For C series units:

Nominal Unit Input Voltage = 208-230 Volt, 60 Hertz, 3 Phase
 Minimum allowed unit voltage = 187V
 Maximum allowed voltage = 253V

3) For D series units:

Nominal Unit Input Voltage = 460 Volt, 60 Hertz, 3 Phase
 Minimum allowed unit voltage = 414V
 Maximum allowed voltage = 506V


FLA = Full Load Amps; MCA = Minimum Circuit Ampacity; RLA = Rated Load Amps;

MOP = Maximum Over-Current Protection; LRA = Locked Rotor Amps

Table 5. MCA / MOP Data (Multiple Circuit)

Electrical Diagrams

SINGLE BRANCH CIRCUIT POWER SUPPLY

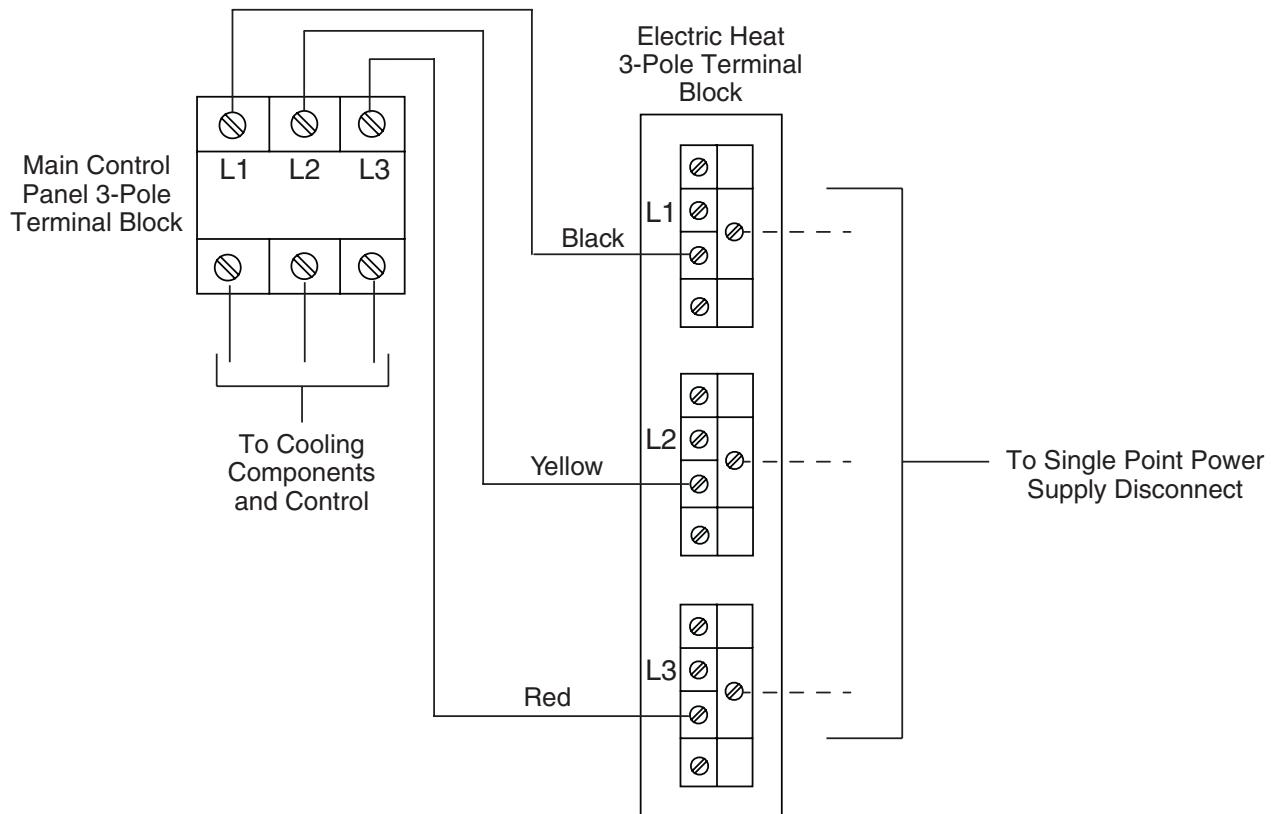

DUAL BRANCH CIRCUIT POWER SUPPLY

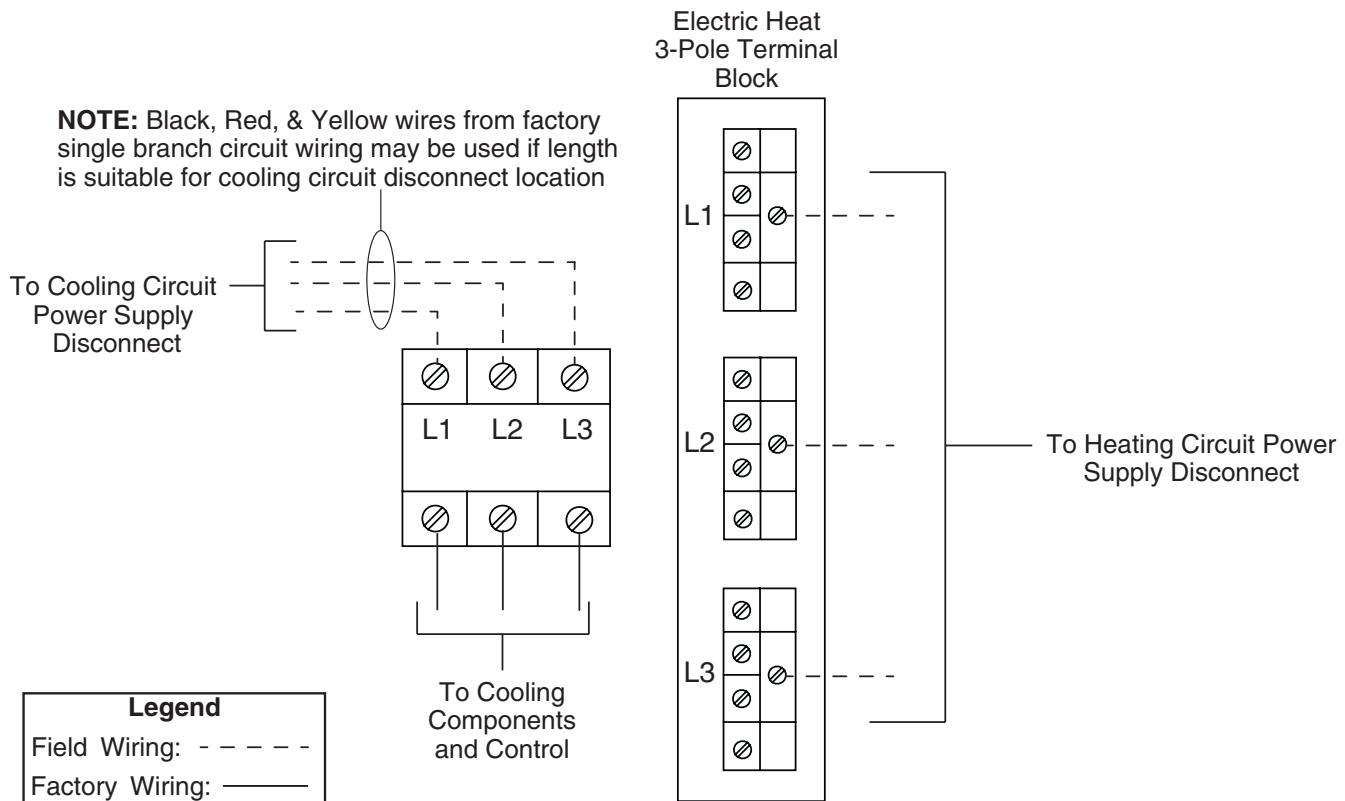


Figure 13. Single & Dual Power Supply Connections

9 kW, 1-Stage, 208 / 240 VAC, 3-Phase Heater Kit

85

86

87

88

89

90

91

92

93

94

FROM TERMINAL STRIP

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

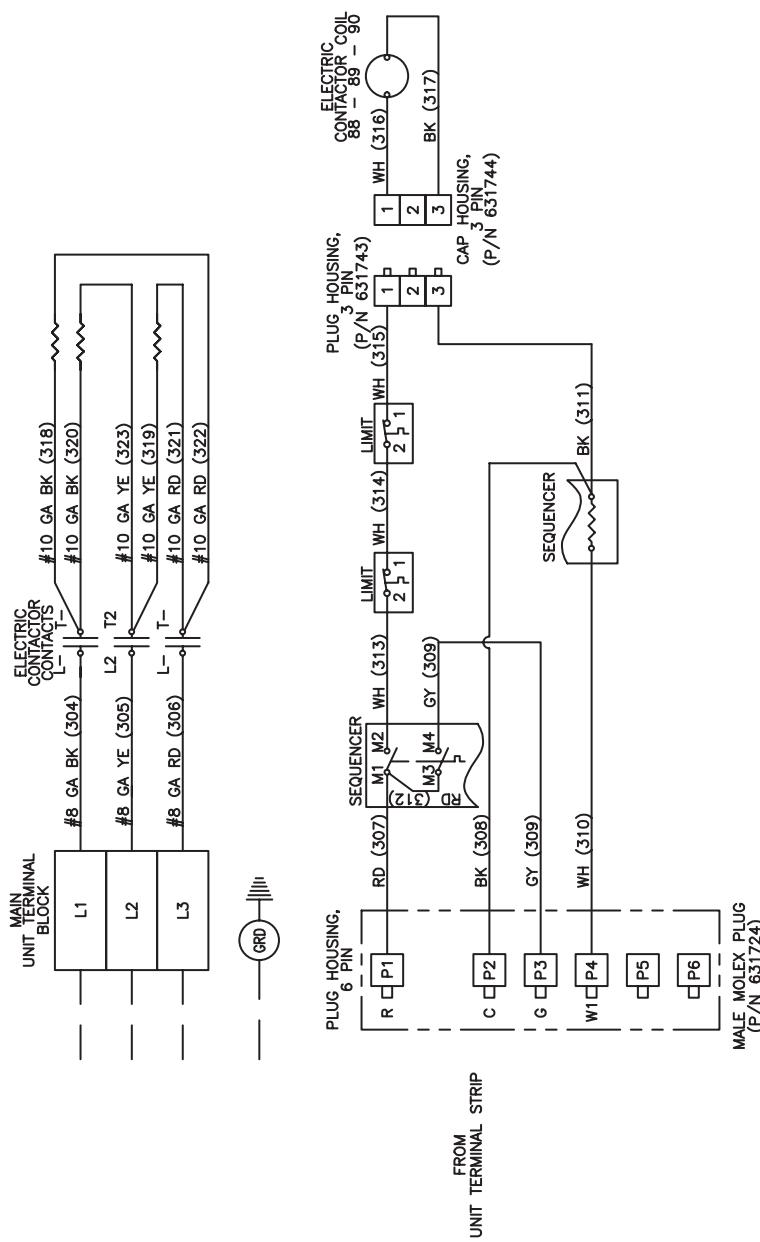


Figure 14. W.D. for 9 kW, 240 V, 3-Phase

NOTES

1. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE UNIT MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL OF THE SAME GAUGE SIZE AND TEMPERATURE RATING.
2. USE COOPER CONDUCTORS WITH A MINIMUM TEMPERATURE RATING OF 60° C. FOR SUPPLY CONNECTIONS.



1012102A
(Replaces 10121020) (05/17)

9 kW, 1-Stage, 480 VAC, 3-Phase Heater Kit

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

10 kW, 1-Stage, 575 VAC, 3-Phase Heater Kit

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

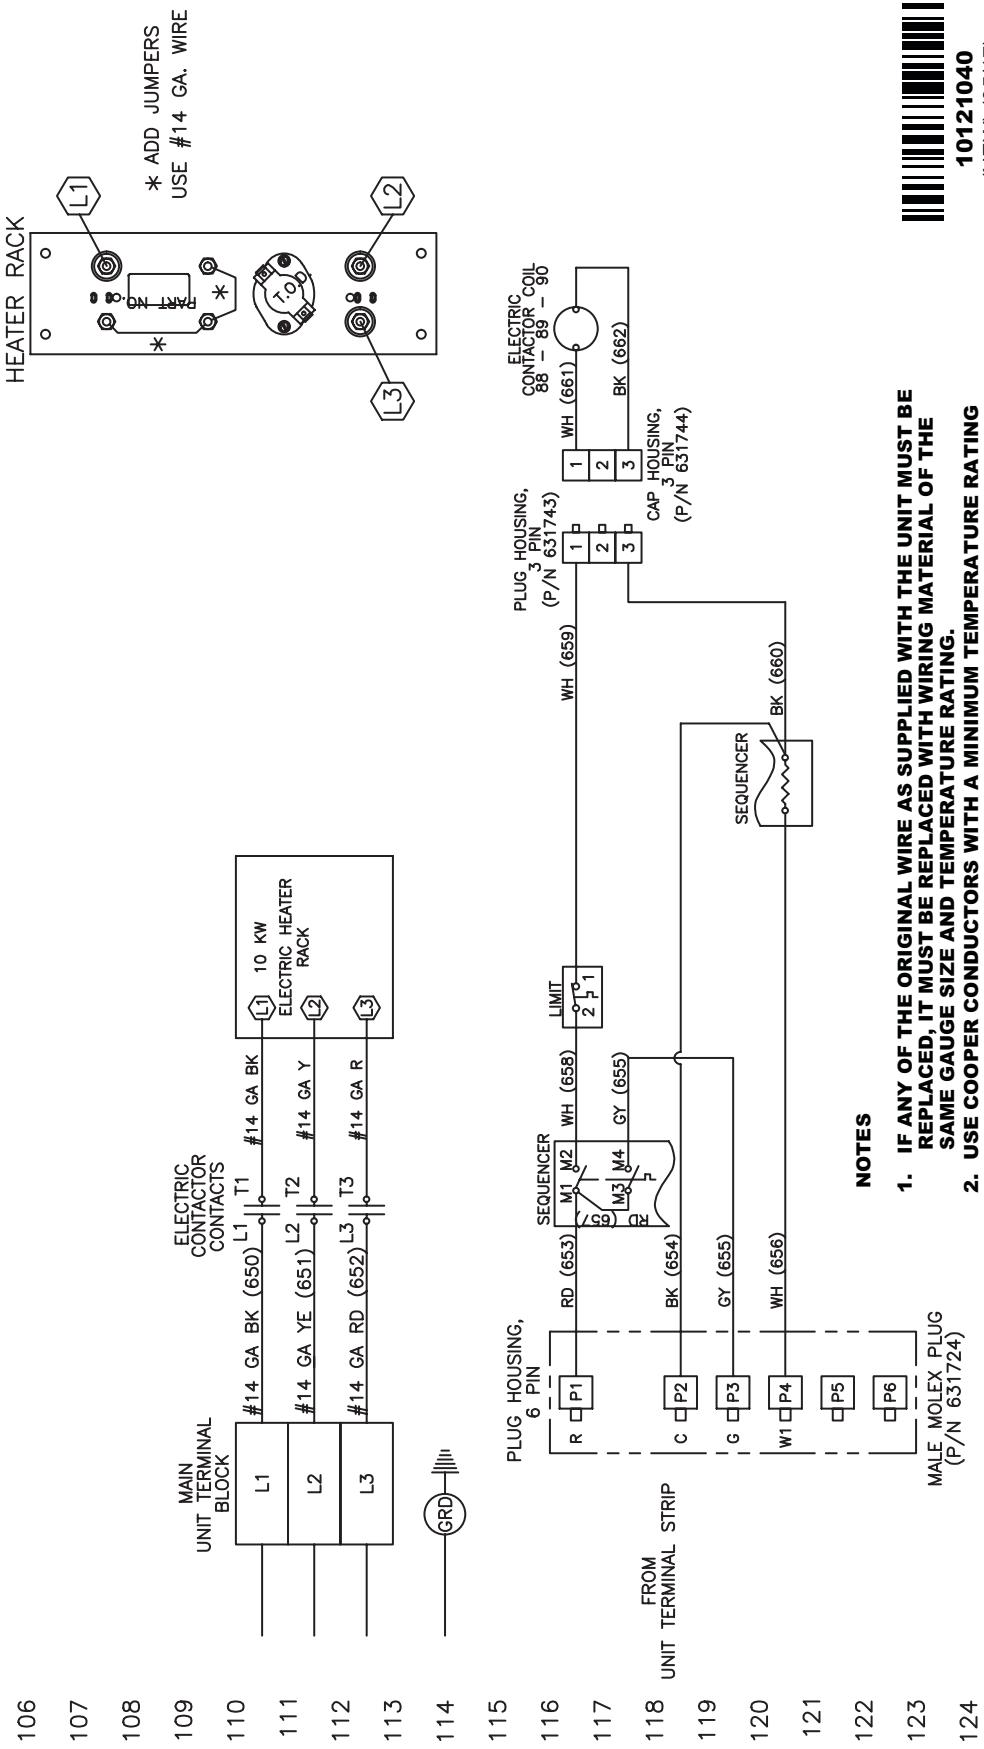


Figure 16. W.D. for 10 kW, 575 V, 3-Phase

18 kW, 1-Stage, 208 / 240 VAC, 3-Phase Heater Kit

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

105

106

107

108

109

105A

106A

107A

108A

109A

105B

106B

107B

108B

109B

105C

106C

107C

108C

109C

105D

106D

107D

108D

109D

105E

106E

107E

108E

109E

105F

106F

107F

108F

109F

105G

106G

107G

108G

109G

105H

106H

107H

108H

109H

105I

106I

107I

108I

109I

105J

106J

107J

108J

109J

105K

106K

107K

108K

109K

105L

106L

107L

108L

109L

105M

106M

107M

108M

109M

105N

106N

107N

108N

109N

105O

106O

107O

108O

109O

105P

106P

107P

108P

109P

105Q

106Q

107Q

108Q

109Q

105R

106R

107R

108R

109R

105S

106S

107S

108S

109S

105T

106T

107T

108T

109T

105U

106U

107U

108U

109U

105V

106V

107V

108V

109V

105W

106W

107W

108W

109W

105X

106X

107X

108X

109X

105Y

106Y

107Y

108Y

109Y

105Z

106Z

107Z

108Z

109Z

105AA

106AA

107AA

108AA

109AA

105BB

106BB

107BB

108BB

109BB

105CC

106CC

107CC

108CC

109CC

105DD

106DD

107DD

108DD

109DD

105EE

106EE

107EE

108EE

109EE

105FF

106FF

107FF

108FF

109FF

105GG

106GG

107GG

108GG

109GG

105HH

106HH

107HH

108HH

109HH

105II

106II

107II

108II

109II

105JJ

106JJ

107JJ

108JJ

109JJ

105KK

106KK

107KK

108KK

109KK

105LL

106LL

107LL

108LL

109LL

105MM

106MM

107MM

108MM

109MM

105NN

106NN

107NN

108NN

109NN

105OO

106OO

107OO

108OO

109OO

105PP

106PP

107PP

108PP

109PP

105QQ

106QQ

107QQ

108QQ

109QQ

105RR

106RR

107RR

108RR

109RR

105SS

106SS

107SS

108SS

109SS

105TT

106TT

107TT

108TT

109TT

105UU

106UU

107UU

108UU

109UU

105VV

106VV

107VV

108VV

109VV

105WW

106WW

107WW

108WW

109WW

105XX

106XX

107XX

108XX

109XX

105YY

106YY

107YY

108YY

109YY

105ZZ

106ZZ

107ZZ

108ZZ

109ZZ

105AA

106AA

107AA

108AA

109AA

105BB

106BB

107BB

108BB

109BB

105CC

106CC

107CC

108CC

109CC

105DD

106DD

107DD

108DD

109DD

105EE

106EE

107EE

108EE

109EE

105FF

106FF

107FF

108FF

109FF

105GG

106GG

107GG

108GG

109GG

105HH

106HH

107HH

108HH

109HH

105II

106II

107II

108II

109II

105JJ

106JJ

107JJ

108JJ

109JJ

105KK

106KK

107KK

108KK

109KK

105LL

106LL

107LL

108LL

109LL

18 kW, 1-Stage, 480 VAC, 3-Phase Heater Kit

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

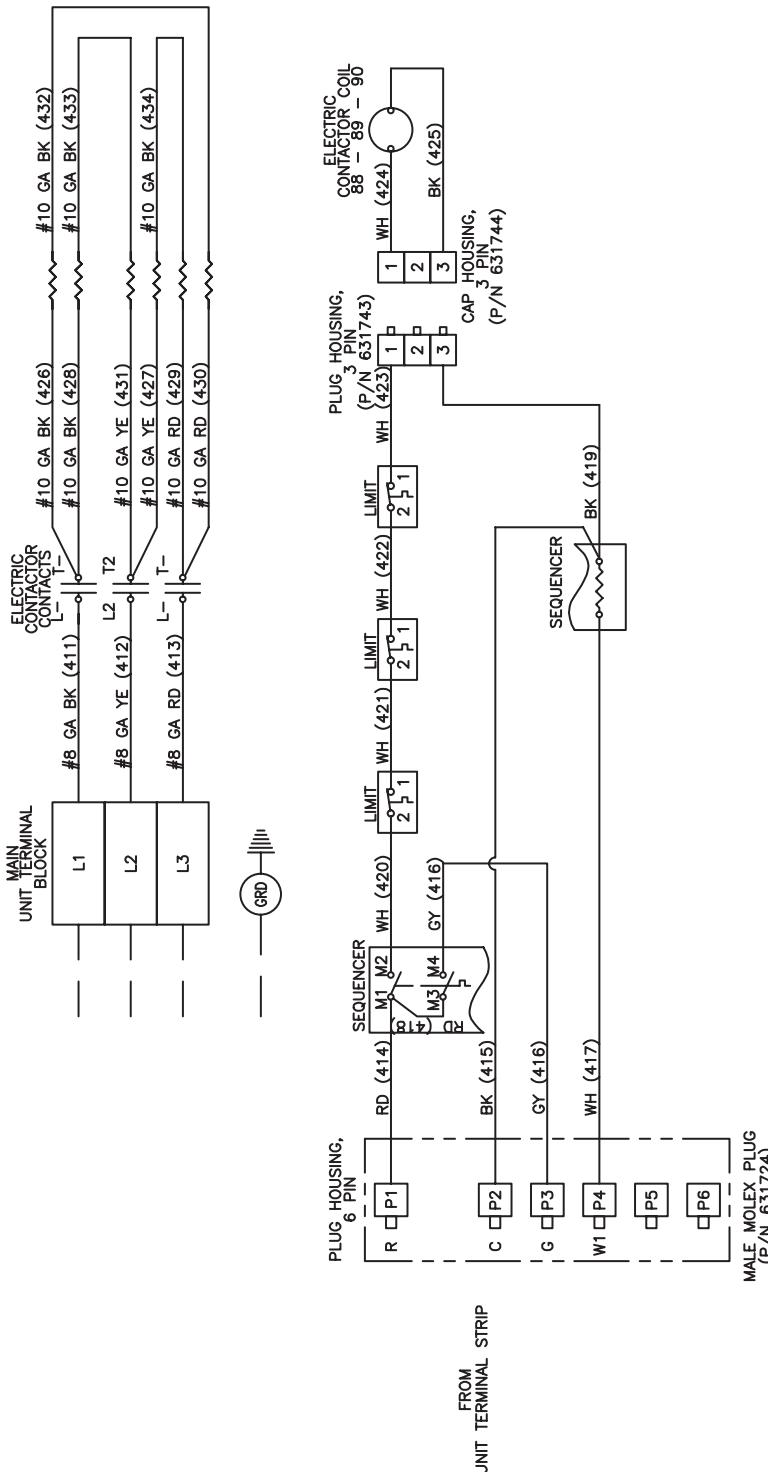


Figure 18. W.D. for 18 kW, 480 V, 3-Phase

1. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE UNIT MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL OF THE SAME GAUGE SIZE AND TEMPERATURE RATING.
2. USE COOPER CONDUCTORS WITH A MINIMUM TEMPERATURE RATING OF 60° C. FOR SUPPLY CONNECTIONS.



1012106A
(Replaces 10121060) (05/17)

20 kW, 1-Stage, 575 VAC, 3-Phase Heater Kit

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

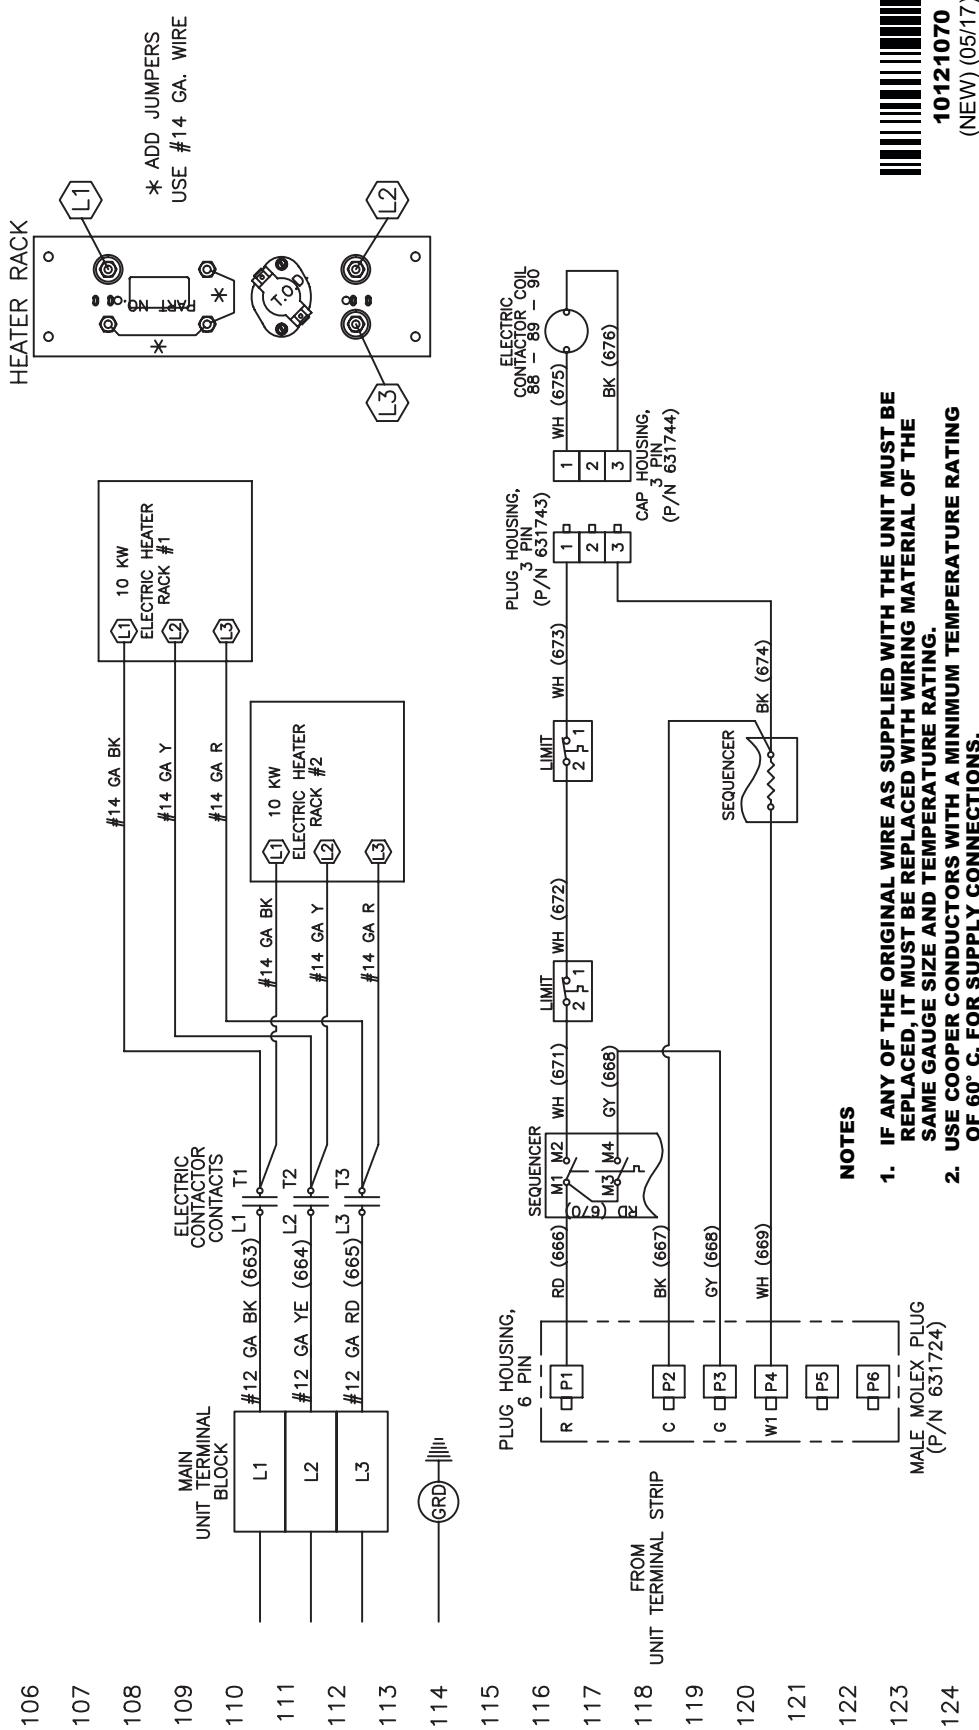


Figure 19. W.D. for 20 kW, 575 V, 3-Phase

30 & 35 kW, 1-Stage, 208 / 240 VAC, 3-Phase Heater Kit

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104



105

106

107

108

109

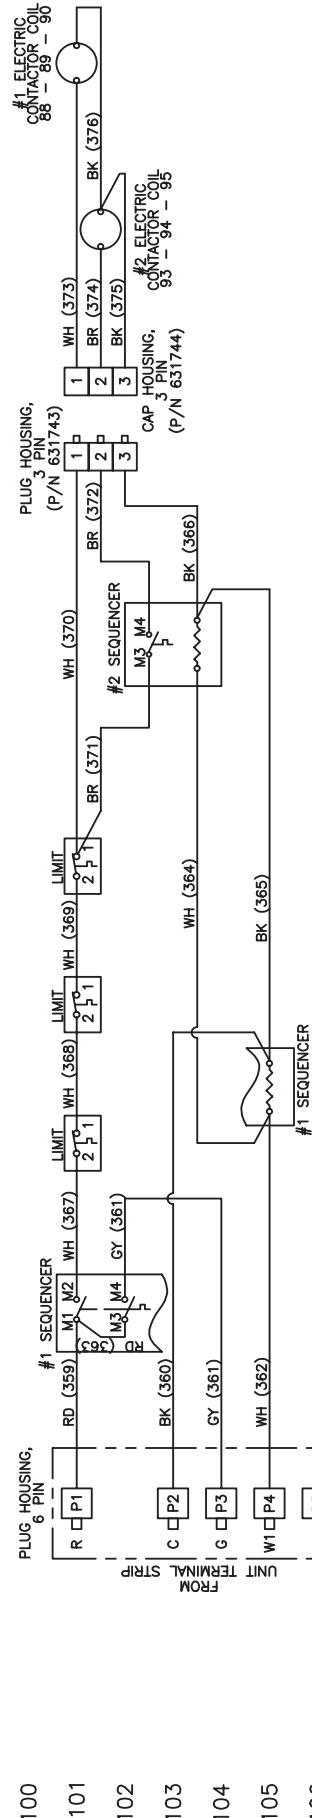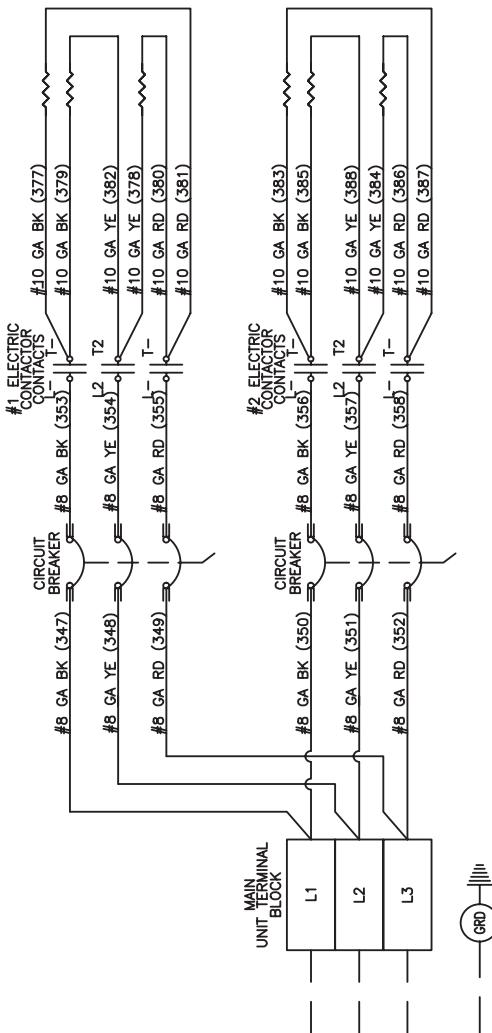

NOTES

1. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE UNIT MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL OF THE SAME GAUGE SIZE AND TEMPERATURE RATING.
2. USE COOPER CONDUCTORS WITH A MINIMUM TEMPERATURE RATING OF 60° C. FOR SUPPLY CONNECTIONS.



1012108A
(Replaces 10121080) (05/17)

Figure 20. W.D. for 30 & 35 kW, 240 V, 3-Phase

30 & 35 kW, 1-Stage, 480 VAC, 3-Phase Heater Kit

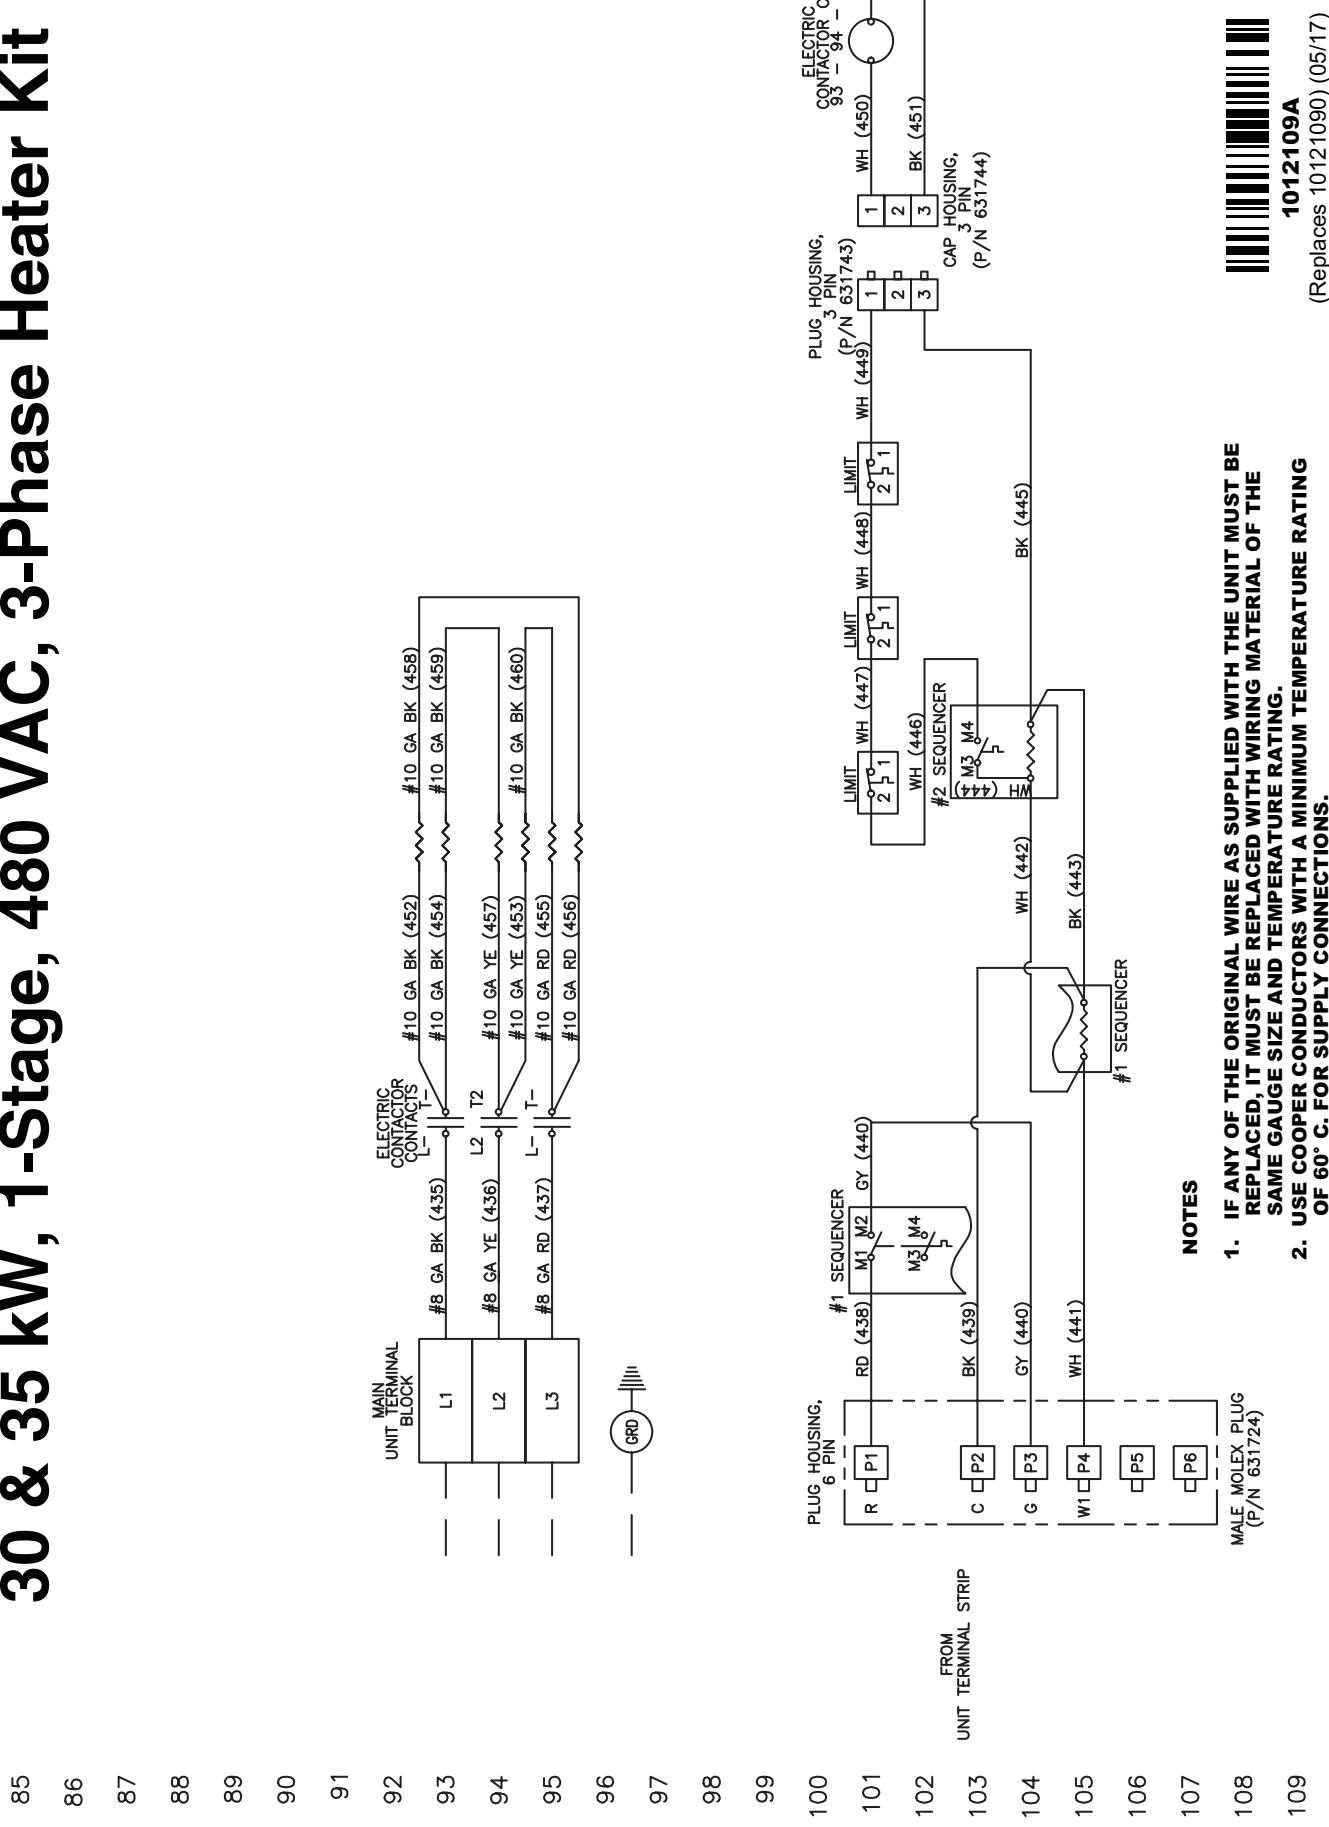


Figure 21. W.D. for 30 & 35 kW, 480 V, 3-Phase



1012109A
(Replaces 10121090) (05/17)

1. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE UNIT MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL OF THE SAME GAUGE SIZE AND TEMPERATURE RATING.

2. USE COOPER CONDUCTORS WITH A MINIMUM TEMPERATURE RATING OF 60° C. FOR SUPPLY CONNECTIONS.

30 kW, 1-Stage, 575 VAC, 3-Phase Heater Kit

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124


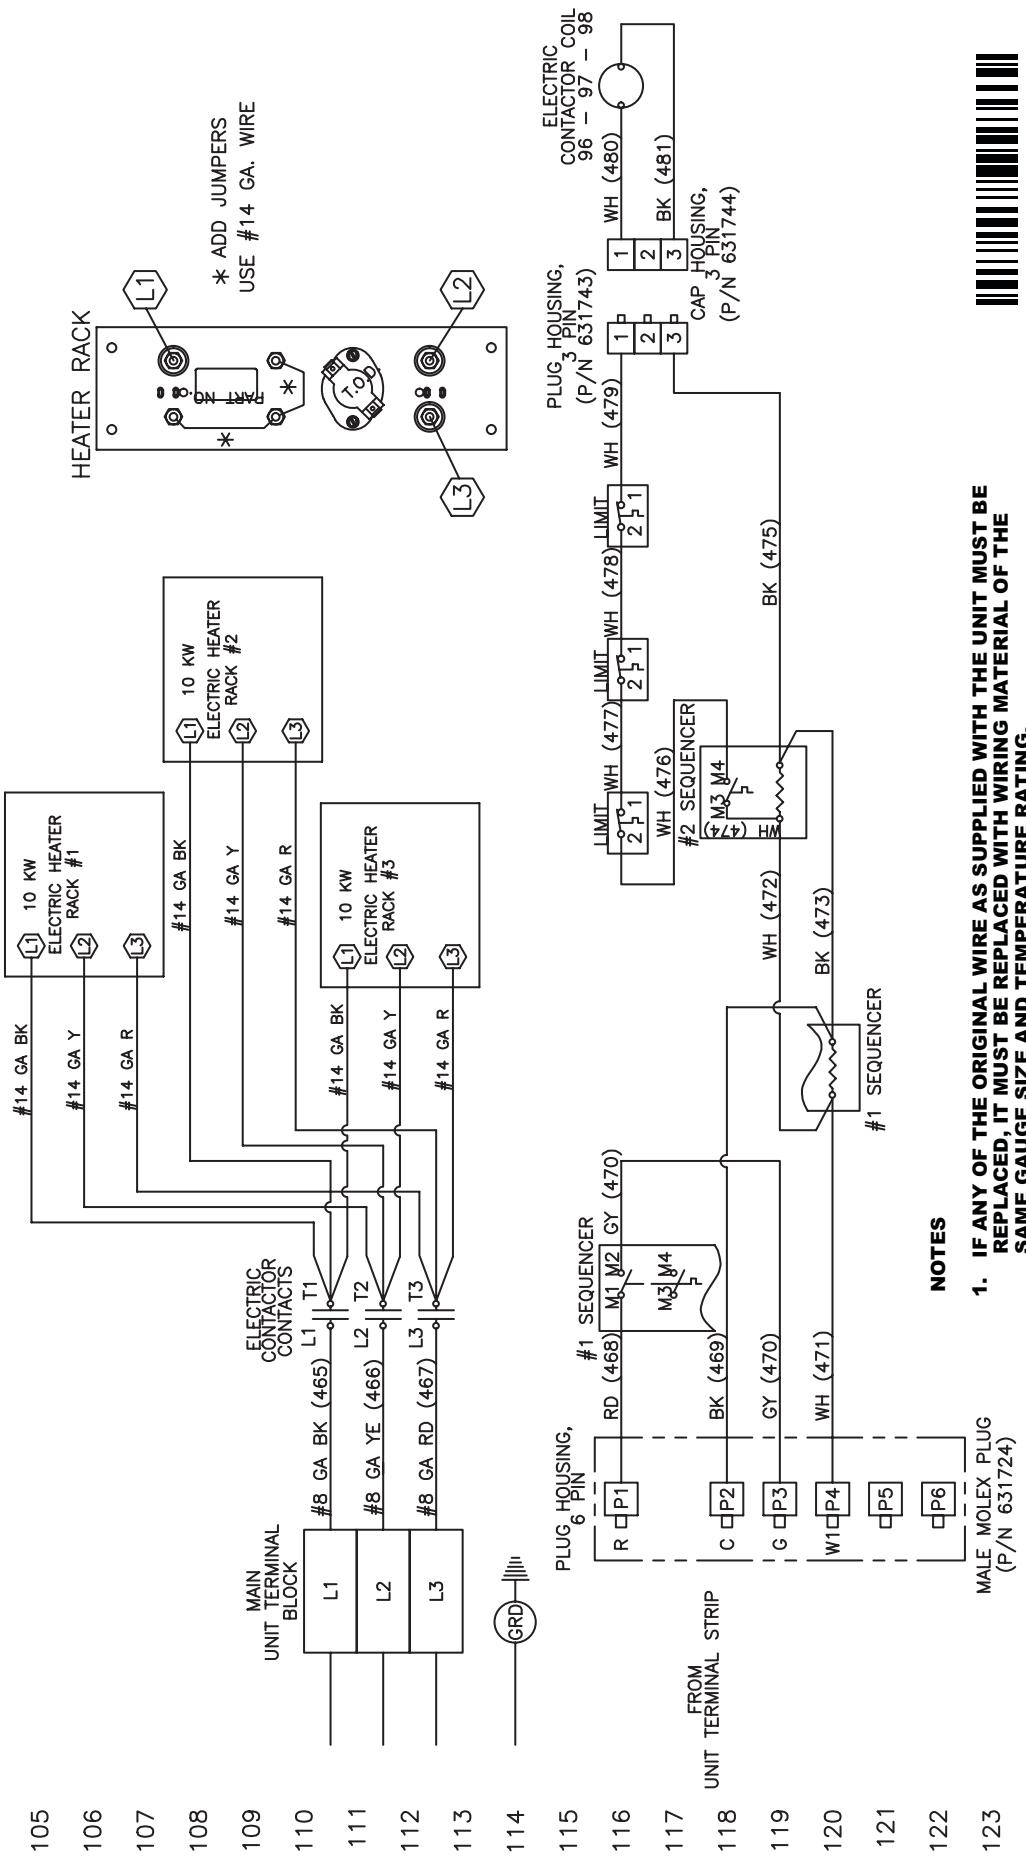


Figure 22. W.D. for 30 kW, 575 V, 3-Phase

40 kW, 1-Stage, 575 VAC, 3-Phase Heater Kit

- 100
 101
 102
 103
 104
 105
 106
 107
 108
 109
 110
 111
 112
 113
 114
 115
 116
 117
 118
 119
 120
 121
 122
 123
 124

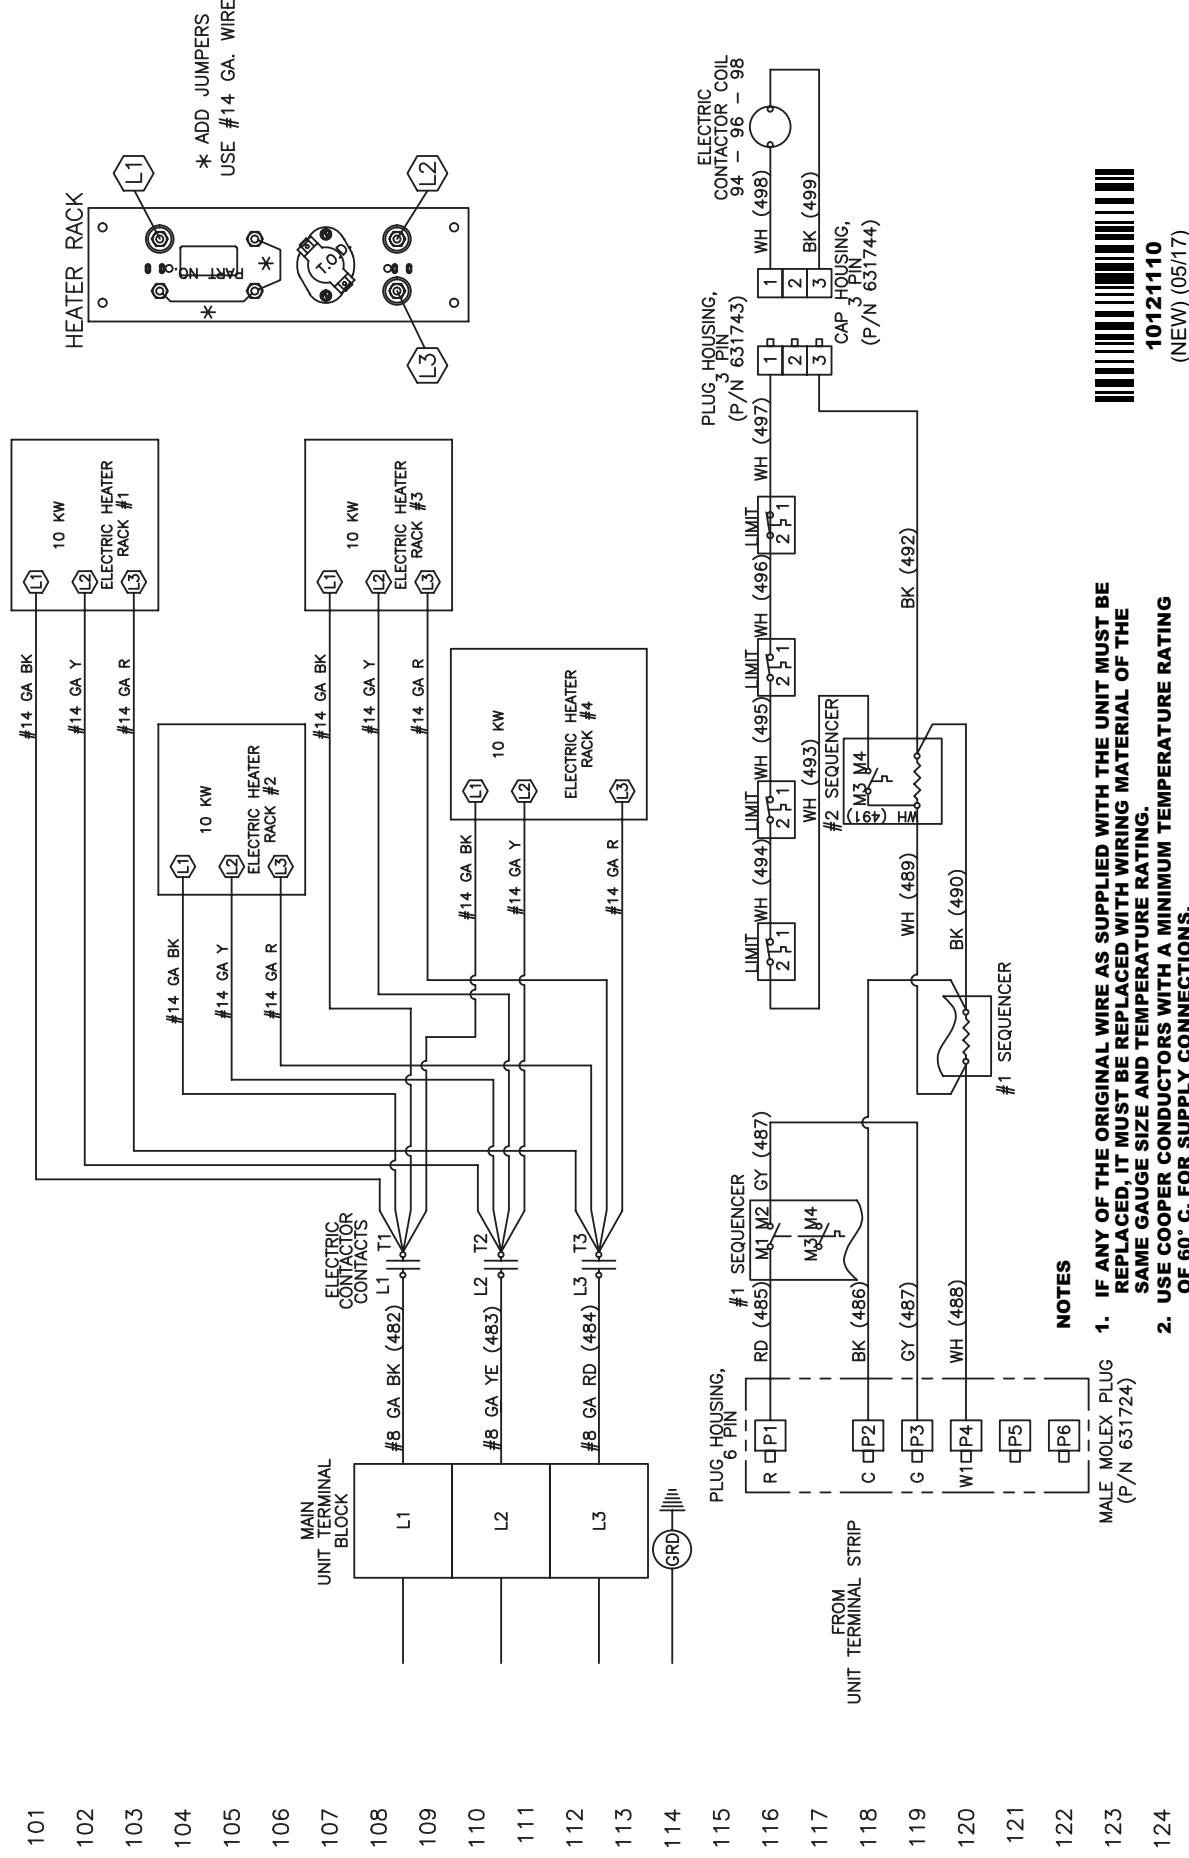

10121110
(NEW) (05/17)



**INSTALLER: PLEASE LEAVE THESE
INSTALLATION INSTRUCTIONS WITH
THE HOMEOWNER**

