

WIRING DIAGRAM

Large Package 2 Stage Heat Pump

Voltage 208/230

Single Phase 60 Hz

 

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150V to ground.
4. For replacement wires use conductors suitable for 105°C.
5. Thermostat connections are class 2.

1. Couper le courant avant de faire letretine.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plusde 150V a la terre.
4. Remplacement pour utiliser les fils conducteurs adapté à 105°C.

24 VDC OUTPUT TO
A COMPATIBLE THERMOSTAT
SEE II FOR DETAILS

624736 Fault Codes	
Diagnostic Description	Red LED (AN2)
Control Fault (No Power)	Off
Blower/Communications Fault	Flash
Normal Operation	On

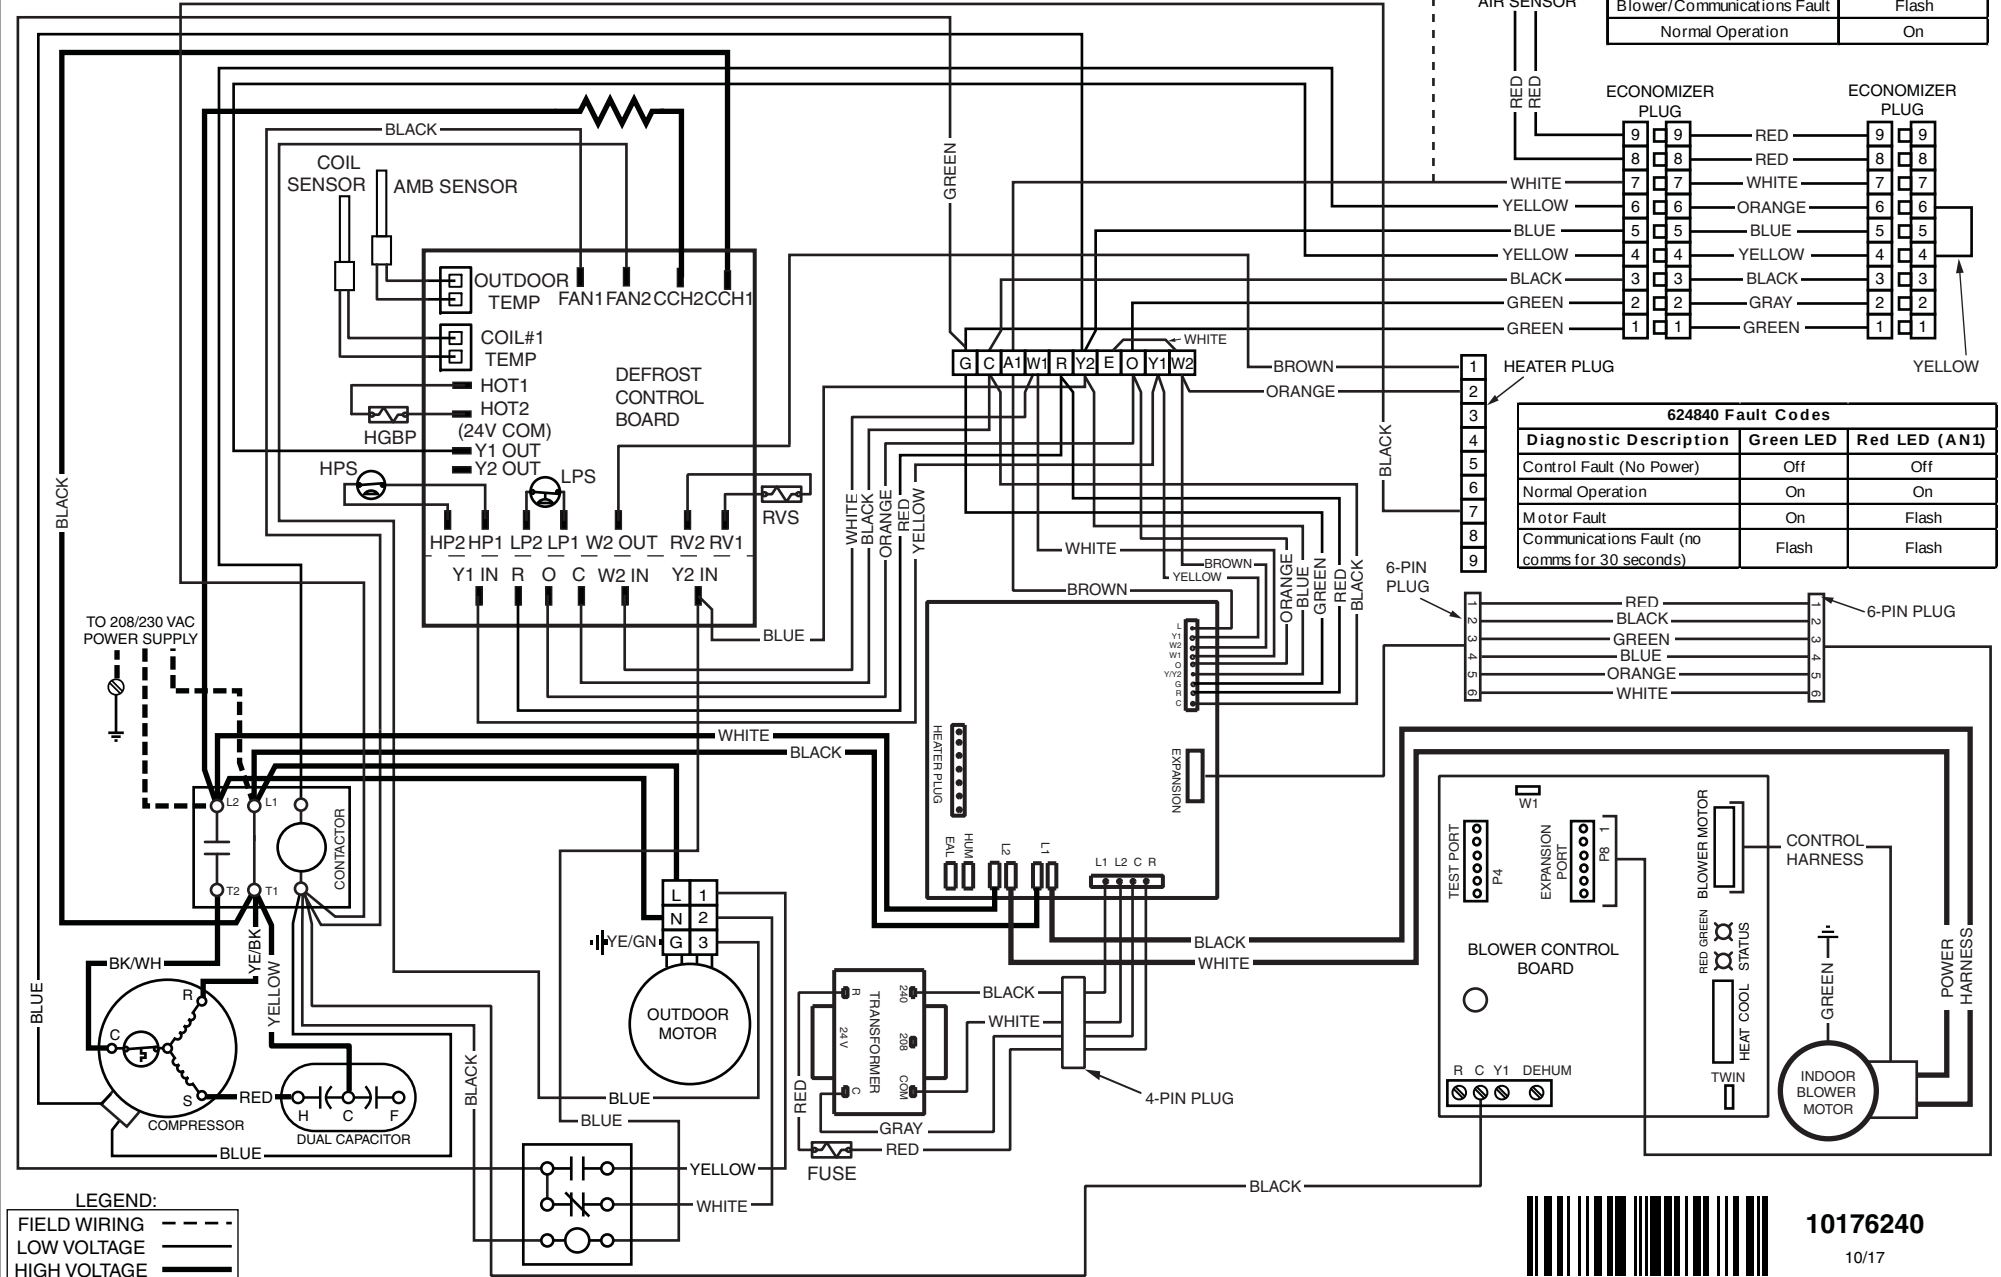

10176240

10/17