

INSTALLATION INSTRUCTIONS

***SA1QE4M1SN - 24K, 30K, 36K, 42K, 48K, & 60K (2, 2.5, 3, 3.5, 4, & 5 TON) SERIES SINGLE PHASE MODELS WITH QUICK CONNECT COUPLINGS**

IMPORTANT

ATTENTION INSTALLERS:

It is your responsibility to know this product better than your customer. This includes being able to install the product according to strict safety guidelines and instructing the customer on how to operate and maintain the equipment for the life of the product. Safety should always be the deciding factor when installing this product and using common sense plays an important role as well. Pay attention to all safety warnings and any other special notes highlighted in the manual. Improper installation of the unit or failure to follow safety warnings could result in serious injury, death, or property damage.

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. Please read all instructions carefully before starting the installation. Return these instructions to the customer's package for future reference.

DO NOT DESTROY. PLEASE READ CAREFULLY & KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.

- IMPORTANT SAFETY INFORMATION..... 2**
- AIR CONDITIONER INSTALLATION..... 3**
 - General Information 3
 - Before You Install this Unit..... 3
 - Locating the Air Conditioner..... 3
 - Packaging Removal..... 3
 - Ground Level 3
 - Roof Mount 3
 - Connecting Refrigerant Tubing Between the Indoor & Outdoor Unit 4
- ELECTRICAL WIRING 4**
 - Pre-Electrical Checklist 4
 - Line Voltage 4
 - Grounding 5
 - Thermostat Connections..... 5
- START UP & ADJUSTMENTS 5**
 - Pre-Start Check List..... 5
 - Start-Up Procedures 5
 - Air Circulation - Indoor Blower..... 5
 - System Cooling 6
 - System Heating (optional) 6
- AIR CONDITIONER MAINTENANCE..... 6**
 - Panel Removal..... 6
 - Panel Installation..... 6
- REFRIGERANT CHARGING 7**
 - Charging the Unit in AC mode (TXV Matches) 7
 - Charging Charts & Application Notes 7
 - Table 4. Charging Table for 2 Ton Models 8
 - Table 5. Charging Table for 2.5 Ton Models 8
 - Table 6. Charging Table for 3 Ton Models 9
 - Table 7. Charging Table for 3.5 Ton Models 9
 - Table 8. Charging Table for 4 Ton Models 10
 - Table 9. Charging Table for 5 Ton Models 10
 - Figure 4. Charging Chart for 2 Through 5 Ton Models 11
- WIRING DIAGRAMS..... 12**
 - Figure 5. W.D. for 2 - 4 Ton Models 12
 - Figure 6. W.D. for 5 Ton Models 13
- INSTALLATION CHECKLIST..... 16**
- REPLACEMENT PARTS..... 16**

IMPORTANT SAFETY INFORMATION

INSTALLER: Please read all instructions before servicing this equipment. Pay attention to all safety warnings and any other special notes highlighted in the manual. Safety markings are used frequently throughout this manual to designate a degree or level of seriousness and should not be ignored.

WARNING indicates a potentially hazardous situation that if not avoided, could result in personal injury or death.

CAUTION indicates a potentially hazardous situation that if not avoided, may result in minor or moderate injury or property damage.

WARNING:

ELECTRICAL SHOCK OR FIRE HAZARD

To avoid risk of electrical shock, personal injury, or death, disconnect all electrical power to the unit before performing any maintenance or service. The unit may have more than one electrical supply.

Label all wires prior to disconnection when servicing the unit. Wiring errors can cause improper and dangerous operation

WARNING:

Unless noted otherwise in these instructions, only factory authorized parts or accessory kits may be used with this product. Improper installation, service, adjustment, or maintenance may cause explosion, fire, electrical shock or other hazardous conditions which may result in personal injury or property damage

WARNING:

*SA1QE4M1SN split system air conditioners are shipped charged with R410A refrigerant and ready for installation. If repairs make it necessary for evacuation and charging, it should only be attempted by qualified trained personnel thoroughly familiar with this equipment. Under no circumstances should the owner attempt to install and/or service this equipment. Failure to comply with this warning could result in property damage, personal injury, or death.

WARNING:

The information listed in this manual must be followed during the installation, service, and operation of this unit. Unqualified individuals should not attempt to interpret these instructions or install this equipment. Failure to follow safety recommendations could result in possible damage to the equipment, serious personal injury or death.

CAUTION:

This unit uses refrigerant R-410A. DO NOT use any other refrigerant in this unit. Use of another refrigerant will damage the unit.

- The installer must comply with all local codes and regulations which govern the installation of this type of equipment. Local codes and regulations take precedence over any recommendations contained in these instructions. Consult local building codes and the National Electrical Code (ANSI CI) for special installation requirements.
- All electrical wiring must be completed in accordance with local, state and national codes and regulations and with the National Electric Code (ANSI/NFPA 70) or in Canada the Canadian Electric Code Part 1 CSA C.22.1.
- This equipment contains liquid and gaseous refrigerant under high pressure. DO NOT USE ANY PORTION OF THE CHARGE FOR PURGING OR LEAK TESTING. Installation or servicing should only be performed by qualified trained personnel thoroughly familiar with this type equipment.
- Fully annealed, refrigerant grade copper tubing should be used when installing the system. Refrigerant suction line tubing should be fully insulated.
- Installation of equipment may require brazing operations. Installer should comply with safety codes and wear appropriate safety equipment (safety glasses, work gloves, fire extinguisher, etc.) when performing brazing operations.
- Follow all precautions in the literature, on tags, and on labels provided with the equipment. Read and thoroughly understand the instructions provided with the equipment prior to performing the installation and operational checkout of the equipment.
- This unit is designed for outdoor installations only and should be positioned as shown on [page 3](#).
- Refrigerant and electrical line should be routed through suitably waterproofed openings to prevent water from leaking into the structure.
- Use caution when handling this appliance or removing components. Personal injury can occur from sharp metal edges present in all sheet metal constructed equipment.

AIR CONDITIONER INSTALLATION

General Information

The *SA1QE4M1SN series air conditioner is designed only for outdoor rooftop or ground level installations. This unit has been tested for capacity and efficiency in accordance with AHRI Standards and will provide many years of safe and dependable comfort, providing it is properly installed and maintained. Abuse, improper use, and/or improper maintenance can shorten the life of the appliance and create unsafe hazards.

To achieve optimum performance and minimize equipment failure, it is recommended that periodic maintenance be performed on this unit. The ability to properly perform maintenance on this equipment requires certain mechanical skills and tools.

Before You Install this Unit

- ✓ The cooling load of the area to be conditioned must be calculated and a system of the proper capacity selected. It is recommended that the area to be conditioned be completely insulated and vapor sealed.
- ✓ Check the electrical supply and verify the power supply is adequate for unit operation. The system must be wired and provided with circuit protection in accordance with local building codes. If there is any question concerning the power supply, contact the local power company.
- ✓ The indoor section (air handler, furnace, etc) should be installed before routing the refrigerant tubing. Refer to the indoor unit's installation instructions for installation details.
- ✓ All units are securely packed at the time of shipment and upon arrival should be carefully inspected for damage prior to installing the equipment at the job site. Verify coil fins are straight. If necessary, comb fins to remove flattened or bent fins. Claims for damage (apparent or concealed) should be filed immediately with the carrier.
- ✓ Please consult your dealer for maintenance information and availability of maintenance contracts. Please read all instructions before installing the unit.

Locating the Air Conditioner

- Survey the job site to determine the best location for mounting the outdoor unit.
- Sufficient clearance for unobstructed airflow through the outdoor coil must be maintained in order to achieve rated performance. See [Figure 1](#) for minimum clearances to obstructions.
- Overhead obstructions ([Figure 1](#)), poorly ventilated areas, and areas subject to accumulation of debris should be avoided.
- Consideration should be given to availability of electric power, service access, noise, and shade.

Packaging Removal

NOTE: To prevent damage to the tubing connections, carefully remove the carton and user's manual from the equipment. Discard the shipping carton.

Ground Level

Ground level installations must be located according to local building codes or ordinances and these requirements:

- Clearances must be in accordance with those shown in [Figure 1](#).
- A suitable mounting pad ([Figure 1](#)) must be provided and separate from the building foundation. The pad must be level and strong enough to support the weight of the unit. The slab height must be a minimum of 2" (5 cm) above grade and with adequate drainage.

Roof Mount

- The method of mounting should be designed so that it does not overload roof structures or transmit noise to the interior of the structure. The roof must be structurally capable of handling the weight of the unit.
- Full perimeter support is required under the unit. Support must be made of weather resistant materials and installed prior to unit installation.
- The support must be built to raise the unit 6" above the roof.

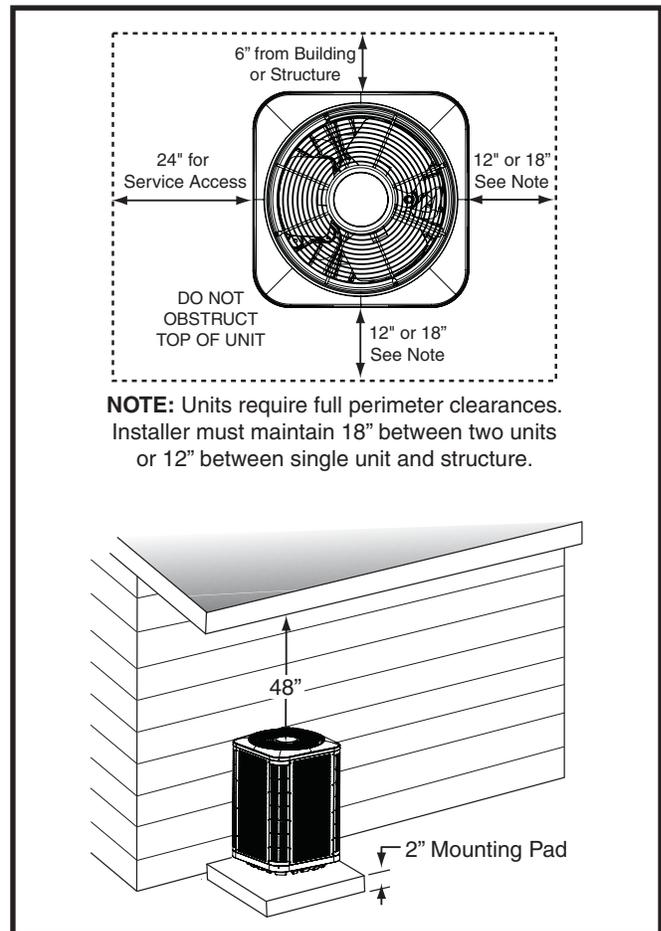


Figure 1. Clearance Requirements

Connecting Refrigerant Tubing Between the Indoor & Outdoor Unit

CAUTION:

When servicing, cover or seal openings to minimize the exposure of the refrigerant system to air to prevent accumulation of moisture and other contaminants.

After outdoor and indoor unit placement has been determined, route refrigerant tubing between the equipment in accordance with sound installation practices.

- Refrigerant tubing should be routed in a manner that minimizes the length of tubing and the number of bends in the tubing. If precise forming of refrigerant lines is required, a copper tubing bender is recommended. Avoid sharp bends and contact of the refrigerant lines with metal surfaces.
- Refrigerant tubing should be supported in a manner that the tubing will not vibrate or abrade during system operation.
- Tubing should be kept clean of foreign debris during installation.
- Every effort should be made by the installer to ensure that the field installed refrigerant containing components of the system have been installed in accordance with these instructions and sound installation practices to insure reliable system operation and longevity.
- The maximum recommended interconnecting refrigerant line lengths is 75 ft. and the vertical elevation difference between the indoor and outdoor sections should not exceed 20 ft.
- Optional equipment such as liquid line solenoid valves, low ambient, etc., should be installed in strict accordance with the manufacturer's installation instructions.
- These units are equipped with single shot quick connect couplings. Together with the indoor section and line set, only four coupling connections are required to provide a 100% sealed system.
 - Route the suction line and liquid line between indoor and outdoor sections, remove protector caps and plugs
 - Lubricate entire surface of the diaphragm O-ring and threads of the male coupling using the lubricant supplied with the line set and a small brush.
 - Make sure the coupling halves are held in proper alignment with each other prior to starting the threads of female coupling nut onto the male half. Thread coupling halves together by hand until a definite resistance is felt.
 - Using a marker, mark a line from the coupling union nut to the bulkhead then tighten an addition wrench flat (60°). See [Table 1](#) for torque values. Repeat for all couplings.

| COUPLING SIZE | TORQUE | MALE COUPLING | FEMALE COUPLING NUT | FEMALE COUPLING BODY |
|----------------|----------------------------|---------------|---------------------|----------------------|
| 3/8" (10mm) | 10-12 Ft-Lbs (14-16 Nm) | 3/4" | 1 1/16" | 5/8" |
| 3/4" (19mm) | 35-45 Ft-Lbs (47-61 Nm) | 1-1/8" | 1-5/16" | 1" |
| 7.8" (22mm) | 10-12 Ft-Lbs (14-16 Nm) | 1-1/8" | 1-5/16" | 1" |

Table 1. Torque Values

ELECTRICAL WIRING

WARNING:

ELECTRICAL SHOCK OR FIRE HAZARD

To avoid risk of electrical shock, personal injury, or death, disconnect all electrical power to the unit before performing any maintenance or service. The unit may have more than one electrical supply.

Label all wires prior to disconnection when servicing the unit. Wiring errors can cause improper and dangerous operation.

- All electrical connections must be in compliance with all applicable local codes and ordinances, and with the current revision of the National Electric Code (ANSI/NFPA 70).
- For Canadian installations the electrical connections and grounding shall comply with the current Canadian Electrical Code (CSA C22.1 and/or local codes).

Pre-Electrical Checklist

- ✓ Verify that the voltage, frequency, and phase of the supply source match the specifications on the unit rating plate.
- ✓ Verify that the service provided by the utility is sufficient to handle the additional load imposed by this equipment. Refer to the unit wiring label for proper voltage wiring.
- ✓ Verify factory wiring is in accordance with the unit wiring diagram. Inspect for loose connections. See [Figure 5, \(page 12\)](#) & [Figure 6, \(page 13\)](#).

Line Voltage

- A wiring diagram is located on the inside cover of the electrical box of the outdoor unit. The installer should become familiar with the wiring diagram before making any electrical connections to the outdoor unit.
- **An electrical disconnect must be located within sight of and readily accessible to the unit.** This switch shall be capable of electrically de-energizing the outdoor unit.
- Line voltage to the unit should be supplied from a dedicated branch circuit containing the correct fuse or circuit breaker for the unit. Incoming field wiring and minimum size of electrical conductors and circuit protection must be in compliance with information listed on the outdoor unit data label. Any other wiring methods must be acceptable to authority having jurisdiction.
- The outdoor unit requires both power and control circuit electrical connections. Refer to the wiring diagrams [Figure 5](#) & [Figure 6](#) for identification and location of outdoor unit field wiring interfaces. Make all electrical connections in accordance with all applicable codes and ordinances.

- Overcurrent protection must be provided at the branch circuit distribution panel and sized as shown on the unit rating label and according to applicable local codes. See the unit rating plate for minimum circuit ampacity and maximum overcurrent protection limits.
- Provide power supply for the unit in accordance with the unit wiring diagram, and the unit rating plate. Connect the line-voltage leads to the terminals on the contactor inside the control compartment.
- Use only copper wire for the line voltage power supply to this unit as listed in Table 2. Use proper code agency listed conduit and a conduit connector for connecting the supply wires to the unit. Use of rain tight conduit is recommended.
- 208/230 Volt units are shipped from the factory wired for 230 volt operation. For 208V operation, remove the lead from the transformer terminal marked 240V and connect it to the terminal marked 208V.
- Optional equipment requiring connection to the power or control circuits must be wired in strict accordance of the NEC (ANSI/NFPA 70), applicable local codes, and the instructions provided with the equipment.

Grounding

WARNING:

The unit cabinet must have an uninterrupted or unbroken electrical ground to minimize personal injury if an electrical fault should occur. Do not use gas piping as an electrical ground!

This unit must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code (ANSI/NFPA 70) or the CSA C22.1 Electrical Code. Use the grounding lug provided in the control box for grounding the unit.

| COPPER WIRE SIZE — AWG (1% VOLTAGE DROP) | | | | |
|---|-----|-----|----|----------------------------|
| SUPPLY WIRE LENGTH-FEET | | | | SUPPLY CIRCUIT AMPACITY |
| 200 | 150 | 100 | 50 | |
| 6 | 8 | 10 | 14 | 15 |
| 4 | 6 | 8 | 12 | 20 |
| 4 | 6 | 8 | 10 | 25 |
| 4 | 4 | 6 | 10 | 30 |
| 3 | 4 | 6 | 8 | 35 |
| 3 | 4 | 6 | 8 | 40 |
| 2 | 3 | 4 | 6 | 45 |
| 2 | 3 | 4 | 6 | 50 |
| 2 | 3 | 4 | 6 | 55 |
| 1 | 2 | 3 | 4 | 60 |

Wire Size based on N.E.C. for 60° type copper conductors.

Table 2. Copper Wire Size

| THERMOSTAT WIRE GAUGE | MAXIMUM RECOMMENDED THERMOSTAT WIRE LENGTH (FT) |
|--------------------------|--|
| 24 | 25 |
| 22 | 45 |
| 20 | 70 |
| 18 | 110 |

Table 3. Thermostat Wire Gauge

Thermostat Connections

- Thermostat connections should be made in accordance with the instructions supplied with the thermostat and the indoor equipment.
- The outdoor unit is designed to operate from a 24 VAC Class II control circuit. The control circuit wiring must comply with the current provisions of the NEC (ANSI/NFPA 70) and with applicable local codes having jurisdiction.
- The low voltage wires must be properly connected to the units low voltage terminal block. Recommended wire gauge and wire lengths for typical thermostat connections are listed in Table 3.
- The thermostat should be mounted about 5 feet above the floor on an inside wall. DO NOT install the thermostat on an outside wall or any other location where its operation may be adversely affected by radiant heat from fireplaces, sunlight, or lighting fixtures, and convective heat from warm air registers or electrical appliances. Refer to the thermostat manufacturer's instruction sheet for detailed mounting and installation information.

START UP & ADJUSTMENTS

Pre-Start Check List

- ✓ Verify the indoor unit is level and allows proper condensate drainage.
- ✓ Verify the outdoor coil and top of the unit are free from obstructions and debris, and all equipment access/control panels are in place.
- ✓ Verify air filters are cleaned and properly installed.
- ✓ Verify duct work is sealed to prevent air leakage.
- ✓ Verify line voltage power leads are securely connected and the unit is properly grounded.
- ✓ Verify low voltage wires are securely connected to the correct leads on the low voltage terminal strip.
- ✓ Verify power supply branch circuit overcurrent protection is sized properly.
- ✓ Verify the thermostat is wired correctly.

Start-Up Procedures

The thermostat's function mode should be set to OFF and the fan mode should be set to AUTO. Close all electrical disconnects to energize the system.

Air Circulation - Indoor Blower

1. Set the thermostat system mode on OFF and the fan mode to ON.
2. Verify the blower runs continuously. Check the air delivery at the supply registers and adjust register openings for balanced air distribution. If insufficient air is detected, examine ductwork for leaks or obstructions.
3. Set the thermostat fan mode to AUTO and verify the blower stops running.

System Cooling

1. Set the thermostat's system mode to COOL and the fan mode to AUTO. Gradually lower the thermostat temperature setpoint below room temperature and verify the outdoor unit and indoor blower energize.
 2. Verify blower wheel is spinning in direction indicated by arrow. Feel the air being circulated by the indoor blower and verify that it is cooler than ambient temperature. Listen for any unusual noises. If unusual sounds occur, determine the source of the noise and correct as necessary.
 3. Verify HI and LO refrigerant pressures.
 4. Allow the system to operate for several minutes and then set the temperature selector above room temperature. Verify the fan and compressor cycle off with the thermostat.
- NOTE:** The blower should also stop unless fan mode is set to the ON position.

System Heating (optional)

1. Set the thermostat's system mode to HEAT and the temperature mode above room temperature.
2. Verify the optional heating equipment (furnace or electric heat) and indoor blower energize. Feel the air being circulated by the indoor blower and verify that it is warmer than ambient temperature. Listen for any unusual noises. If unusual sounds occur, determine the source of the noise and correct as necessary.

AIR CONDITIONER MAINTENANCE

WARNING:

To prevent electrical shock, personal injury, or death, disconnect all electrical power to the unit before performing any maintenance or service. The unit may have more than one electrical supply.

Proper maintenance is important to achieve optimum performance from the air conditioner. The ability to properly perform maintenance on this equipment requires certain mechanical skills and tools. If you do not possess these skills, contact your dealer for maintenance. Consult your local dealer about the availability of maintenance contracts. Routine maintenance should include the following:

- Inspect and clean or replace air filters at the beginning of each heating and cooling season, or more frequently if required.
- Inspect the condensate drain and outdoor coil at the beginning of each cooling season. Remove any debris. Clean the outdoor coil and louvers as necessary using a mild detergent and water. Rinse thoroughly with water.
- Inspect the electrical connections for tightness at the beginning of each heating and cooling season. Service as necessary.

CAUTION:

The unit should never be operated without a filter in the return air system. Replace disposable filters with the same type and size.

- Do not attempt to add additional oil to motors unequipped with oil tubes. The compressor is hermetically sealed at the factory and does not require lubrication.

Panel Removal

1. Remove screws securing the panel.
2. Slide the panel up towards the top pan in order to clear the bottom flange from the base pan. See Figure 2.
3. Swing the bottom of the panel out and pull the panel down to remove it from the unit.

Panel Installation

1. Insert the top corners of side panel flanges into the corner post channels as shown in Detail A in Figure 3.
2. Slide the panel up into the top pan. (You may need to push on the center of the panel at the top in order to clear the top pan edge).
3. Swing the panel in and push down until the panel is resting on the top edge of the base pan wall as shown in Detail B.
4. Insert screws into the panel to secure it to the unit.

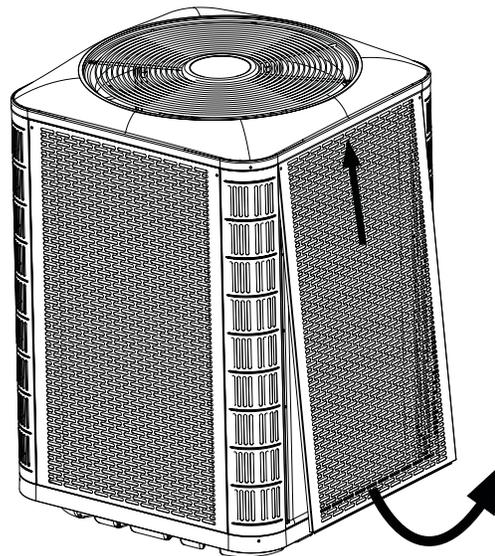


Figure 2. Panel Removal

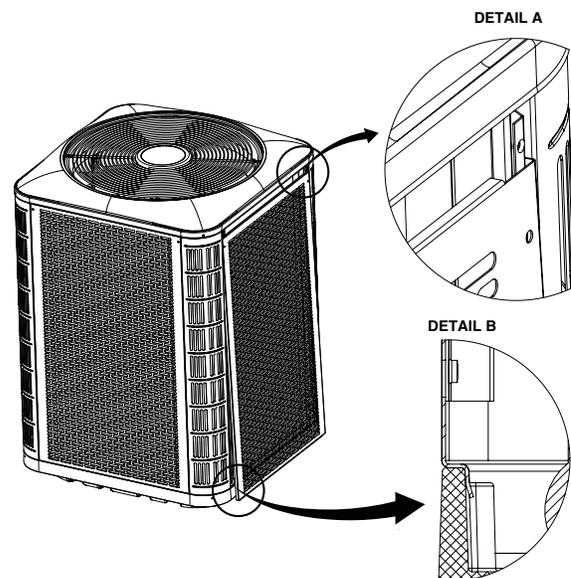


Figure 3. Panel Installation

REFRIGERANT CHARGING

WARNING:

***SA1QE4M1SN Split System Air Conditioners are shipped charged with R410A refrigerant and ready for installation. If repairs make it necessary for evacuation and charging, it should only be attempted by qualified trained personnel thoroughly familiar with this equipment. Under no circumstances should the owner attempt to install and/or service this equipment. Failure to comply with this warning could result in property damage, personal injury, or death.**

- After refrigerant line connections are completed, it is required that you leak check and evacuate the indoor section and all line connections (using proper methods) before finalizing the full system refrigerant charge.
- To achieve rated capacity and efficiency, the compressor must be exposed to refrigerant for at least 24 hours prior to running and then the compressor must be run for a minimum of 12 hours.
- The refrigerant charging charts are applicable only to matched assemblies of this equipment and listed airflows for the indoor coil. If system is matched with an indoor unit that has a restrictor, refer to [Table 4, \(page 8\)](#), [Table 5, \(page 8\)](#), [Table 6, \(page 9\)](#), [Table 7, \(page 9\)](#), [Table 8, \(page 10\)](#), & [Table 9, \(page 10\)](#) for correct system charging. If system is matched with an indoor unit that has a TXV, refer to [Figure 4, \(page 11\)](#).
- **Refer to the unit's Quick Reference Data sheet to determine if additional refrigerant will need to be weighed-in to attain the base refrigerant amount for the system match that is being installed. Please note that the charge additions provided in the QRD are estimates based on test data and should only be used as a starting point. Complete the steps in the charging procedure to obtain the final system charge.**
- Use of SA1QE4M1SN outdoor units with non-AHRI listed indoor coils are not recommended and deviations from rated airflows or non-listed combinations may require modification to the expansion device and refrigerant charging procedures for proper and efficient system operation.
- The refrigerant charge can be checked and adjusted through the service ports provided external to the outdoor unit. Use only gage line sets which have a "Schrader" depression device present to actuate the valve.
- A high-pressure switch is factory-installed and located in the liquid line internal to the outdoor unit. The switch is designed to protect the system when very high pressures occur during abnormal conditions. Under normal conditions, the switch is closed. If the liquid pressure rises above 575 psig, then the switch will open and de-energize the outdoor unit. The switch will close again once the liquid pressure decreases to 460 psig. Please note that the switch interrupts the thermostat inputs to the unit. Thus, when the switch opens and then closes, there may be a 5 minute short cycling delay before the outdoor unit will energize.

Charging the Unit in AC mode (TXV Matches)

(With outdoor temperatures above 65° F)

1. With the system operating at steady-state, measure the liquid refrigerant pressure (in psig) at the outdoor unit service valve.
2. Measure the liquid refrigerant temperature (in Fahrenheit) at the service valve.
3. Determine the required liquid refrigerant pressure from [Figure 4, \(page 11\)](#).
 - If the pressure measured in Step 1 is greater than the required liquid refrigerant pressure determined in Step 3, then there is too much charge in the system. Remove refrigerant and repeat Steps 1 through 3 until the system is correctly charged.
 - If the pressure measured in Step 1 is less than the required liquid refrigerant pressure determined in Step 3, there is too little charge in the system. Add refrigerant and repeat Steps 1 through 3 until the system is correctly charged.

Charging Charts & Application Notes

(Cooling Mode Only)

- **This unit's cooling system contains refrigerant under high pressure. Always use safe and environmentally sound methods when handling refrigerant handling or servicing the unit. Review the factory literature and safety warnings prior to servicing.**
- When repairing system leaks, always use a nitrogen (inert) gas to protect the refrigerant system and pressure check the repair before re-charging. Always replace the filter-dryers when performing any repair to the refrigeration system with one capable of acid removal. After completing the repairs, evacuate the system to 350 - 500 microns and weigh in the refrigerant to the amount specified on the unit rating label.
- The charging charts are valid for a variety of indoor, return air conditions and are most influenced by the outdoor ambient temperature, outdoor fan operation and the unit operating voltage.
- Before using the charging charts, make sure the unit is in a stable operating mode. As shown in [Figure 4, \(page 11\)](#), the ideal system sub-cooling can vary over the range of operation. Reference the chart to determine the ideal amount of sub-cooling for a given liquid pressure. Units charged to other values will not perform at the rated unit efficiency (EER) or rated Coefficient of Performance (COP) in heating mode.
- To inspect a systems operation using quality instruments, match the measured liquid temperature to the units table. The measured liquid pressure reading should be within 3% of the table value for most installations.
- For systems that are operating with more than a 5% deviation, inspect the unit for the proper voltage and phase balance and the refrigeration system for leaks.
- Units that are operating at less than 95% of the nominal voltage or with a 2% phase imbalance may see a more significant deviation than the amount stated above.
- **DO NOT** use the charts in systems that have a fan cycling under low-ambient control. Refer to the low-ambient kit instructions for more information (If applicable).

Legend

- Shaded boxes indicate flooded conditions.
- Rated design values. The suction pressure will vary from design value if indoor air flow, entering dry bulb, or entering wet bulb temperatures are lower than design.

NOTES:

1. All pressures are listed psig and all temperatures in °F
2. Discharge temperatures GREATER than charted values indicate an UNDERCHARGED system.
3. Discharge temperatures LESS than charted values indicate an OVERCHARGED system.
4. In Heating Mode, charge should be weighed in. It is strongly recommended to verify charge in cooling mode at ambient above 70° F

| *SA1QE4M1SN24K SERIES | | | | | | | | | | | | | | | | |
|------------------------------|---------------------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|
| SUCT. PRESS. | OUTDOOR TEMPERATURE (°F) | | | | | | | | | | | | | | | |
| | 70 | | 75 | | 80 | | 85 | | 90 | | 95 | | 100 | | 105 | |
| | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. |
| 134 | 248 | 119 | | | | | | | | | | | | | | |
| 136 | 249 | 122 | 272 | 123 | | | | | | | | | | | | |
| 138 | 250 | 125 | 273 | 126 | 295 | 127 | | | | | | | | | | |
| 140 | 251 | 129 | 273 | 129 | 296 | 130 | 319 | 131 | | | | | | | | |
| 142 | 252 | 132 | 274 | 132 | 297 | 133 | 319 | 134 | 342 | 135 | | | | | | |
| 144 | | | 275 | 135 | 298 | 136 | 320 | 137 | 343 | 138 | 365 | 140 | | | | |
| 146 | | | | | 299 | 139 | 321 | 140 | 344 | 141 | 366 | 142 | 389 | 144 | | |
| 148 | | | | | | | 322 | 143 | 345 | 144 | 367 | 145 | 390 | 146 | 412 | 148 |
| 150 | | | | | | | 323 | 146 | 345 | 147 | 368 | 148 | 391 | 149 | 413 | 150 |
| 152 | | | | | | | | | 346 | 149 | 369 | 150 | 391 | 152 | 414 | 153 |
| 154 | | | | | | | | | | | 370 | 153 | 392 | 154 | 415 | 156 |
| 156 | | | | | | | | | | | | | 393 | 157 | 416 | 158 |
| 158 | | | | | | | | | | | | | | | 416 | 161 |
| 160 | | | | | | | | | | | | | | | | |

Table 4. Charging Table for 2 Ton Models (Orifice Matches)

| *SA1QE4M1SN30K SERIES | | | | | | | | | | | | | | | | |
|------------------------------|---------------------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|
| SUCT. PRESS. | OUTDOOR TEMPERATURE (°F) | | | | | | | | | | | | | | | |
| | 70 | | 75 | | 80 | | 85 | | 90 | | 95 | | 100 | | 105 | |
| | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. |
| 128 | 244 | 121 | | | | | | | | | | | | | | |
| 130 | 245 | 124 | 267 | 125 | | | | | | | | | | | | |
| 132 | 245 | 128 | 268 | 128 | 290 | 128 | | | | | | | | | | |
| 134 | 246 | 132 | 269 | 132 | 291 | 132 | 313 | 132 | | | | | | | | |
| 136 | 247 | 136 | 269 | 136 | 292 | 135 | 314 | 136 | 337 | 136 | | | | | | |
| 138 | | | 270 | 139 | 293 | 139 | 315 | 139 | 337 | 139 | 360 | 139 | | | | |
| 140 | | | | | 293 | 143 | 316 | 142 | 338 | 142 | 360 | 142 | 383 | 143 | | |
| 142 | | | | | | | 317 | 146 | 339 | 146 | 361 | 146 | 384 | 146 | 406 | 146 |
| 144 | | | | | | | 317 | 149 | 340 | 149 | 362 | 149 | 384 | 149 | 407 | 149 |
| 146 | | | | | | | | | 341 | 152 | 363 | 152 | 385 | 152 | 407 | 152 |
| 148 | | | | | | | | | | | 364 | 155 | 386 | 155 | 408 | 155 |
| 150 | | | | | | | | | | | | | 387 | 158 | 409 | 158 |
| 152 | | | | | | | | | | | | | | | 410 | 161 |
| 154 | | | | | | | | | | | | | | | | |

Table 5. Charging Table for 2.5 Ton Models (Orifice Matches)

Legend

- Shaded boxes indicate flooded conditions.
- Rated design values. The suction pressure will vary from design value if indoor air flow, entering dry bulb, or entering wet bulb temperatures are lower than design.

NOTES:

1. All pressures are listed psig and all temperatures in °F
2. Discharge temperatures GREATER than charted values indicate an UNDERCHARGED system.
3. Discharge temperatures LESS than charted values indicate an OVERCHARGED system.
4. In Heating Mode, charge should be weighed in. It is strongly recommended to verify charge in cooling mode at ambient above 70° F

| *SA1QE4M1SN36K SERIES | | | | | | | | | | | | | | | | |
|------------------------------|---------------------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|
| SUCT. PRESS. | OUTDOOR TEMPERATURE (°F) | | | | | | | | | | | | | | | |
| | 70 | | 75 | | 80 | | 85 | | 90 | | 95 | | 100 | | 105 | |
| | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. |
| 129 | 232 | 124 | | | | | | | | | | | | | | |
| 131 | 233 | 127 | 255 | 125 | | | | | | | | | | | | |
| 133 | 233 | 131 | 255 | 129 | 278 | 127 | | | | | | | | | | |
| 135 | 234 | 135 | 256 | 132 | 278 | 131 | 300 | 129 | | | | | | | | |
| 137 | 234 | 140 | 257 | 136 | 279 | 134 | 301 | 132 | 323 | 131 | | | | | | |
| 139 | | | 257 | 141 | 279 | 138 | 302 | 135 | 324 | 134 | 346 | 132 | | | | |
| 141 | | | | | 280 | 142 | 302 | 139 | 324 | 137 | 347 | 135 | 369 | 134 | | |
| 143 | | | | | | | 303 | 143 | 325 | 140 | 347 | 139 | 369 | 137 | 392 | 135 |
| 145 | | | | | | | 303 | 146 | 326 | 144 | 348 | 142 | 370 | 140 | 392 | 138 |
| 147 | | | | | | | | | 326 | 147 | 348 | 145 | 371 | 143 | 393 | 142 |
| 149 | | | | | | | | | | | 349 | 148 | 371 | 146 | 393 | 144 |
| 151 | | | | | | | | | | | | | 372 | 149 | 394 | 147 |
| 153 | | | | | | | | | | | | | | | 395 | 149 |
| 155 | | | | | | | | | | | | | | | | |

Table 6. Charging Table for 3 Ton Models (Orifice Matches)

| *SA1QE4M1SN42K SERIES | | | | | | | | | | | | | | | | |
|------------------------------|---------------------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|--------------------|-------------------|
| SUCT. PRESS. | OUTDOOR TEMPERATURE (°F) | | | | | | | | | | | | | | | |
| | 70 | | 75 | | 80 | | 85 | | 90 | | 95 | | 100 | | 105 | |
| | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. |
| 128 | 238 | 120 | | | | | | | | | | | | | | |
| 130 | 239 | 125 | 260 | 124 | | | | | | | | | | | | |
| 132 | 239 | 129 | 261 | 128 | 282 | 127 | | | | | | | | | | |
| 134 | 240 | 133 | 261 | 132 | 282 | 131 | 304 | 130 | | | | | | | | |
| 136 | 240 | 137 | 262 | 136 | 283 | 135 | 304 | 134 | 326 | 134 | | | | | | |
| 138 | | | 262 | 140 | 284 | 139 | 305 | 138 | 326 | 137 | 348 | 137 | | | | |
| 140 | | | | | 284 | 143 | 306 | 142 | 327 | 141 | 348 | 141 | 370 | 140 | | |
| 142 | | | | | | | 306 | 145 | 327 | 144 | 349 | 144 | 370 | 144 | 392 | 144 |
| 144 | | | | | | | 307 | 149 | 328 | 148 | 349 | 147 | 371 | 147 | 392 | 147 |
| 146 | | | | | | | | | 329 | 151 | 350 | 151 | 371 | 150 | 393 | 150 |
| 148 | | | | | | | | | | | 350 | 154 | 372 | 154 | 393 | 153 |
| 150 | | | | | | | | | | | | | 372 | 157 | 394 | 156 |
| 152 | | | | | | | | | | | | | | | 394 | 160 |
| 154 | | | | | | | | | | | | | | | | |

Table 7. Charging Table for 3.5 Ton Models (Orifice Matches)

Legend

- Shaded boxes indicate flooded conditions.
- Rated design values. The suction pressure will vary from design value if indoor air flow, entering dry bulb, or entering wet bulb temperatures are lower than design.

NOTES:

1. All pressures are listed psig and all temperatures in °F
2. Discharge temperatures GREATER than charted values indicate an UNDERCHARGED system.
3. Discharge temperatures LESS than charted values indicate an OVERCHARGED system.
4. In Heating Mode, charge should be weighed in. It is strongly recommended to verify charge in cooling mode at ambient above 70° F

| *SA1QE4M1SN48K SERIES | | | | | | | | | | | | | | | | |
|------------------------------|--------------------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|
| SUCT. PRESS. | OUTDOOR TEMPERATURE (°F) | | | | | | | | | | | | | | | |
| | 70 | | 75 | | 80 | | 85 | | 90 | | 95 | | 100 | | 105 | |
| | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. |
| 128 | 241 | 136 | | | | | | | | | | | | | | |
| 130 | 241 | 139 | 264 | 137 | | | | | | | | | | | | |
| 132 | 242 | 143 | 264 | 141 | 287 | 139 | | | | | | | | | | |
| 134 | 243 | 147 | 265 | 145 | 287 | 143 | 310 | 141 | | | | | | | | |
| 136 | 245 | 151 | 266 | 149 | 288 | 147 | 310 | 145 | 333 | 143 | | | | | | |
| 138 | | | 267 | 152 | 289 | 150 | 311 | 148 | 333 | 146 | 356 | 144 | | | | |
| 140 | | | | | 290 | 154 | 312 | 152 | 334 | 150 | 356 | 148 | 379 | 146 | | |
| 142 | | | | | | | 312 | 155 | 334 | 153 | 357 | 151 | 379 | 150 | 402 | 148 |
| 144 | | | | | | | 313 | 159 | 335 | 157 | 357 | 155 | 380 | 153 | 402 | 151 |
| 146 | | | | | | | | | 335 | 160 | 358 | 158 | 380 | 156 | 403 | 155 |
| 148 | | | | | | | | | | | 358 | 162 | 380 | 160 | 403 | 158 |
| 150 | | | | | | | | | | | | | 381 | 163 | 403 | 161 |
| 152 | | | | | | | | | | | | | | | 403 | 165 |
| 154 | | | | | | | | | | | | | | | | |

Table 8. Charging Table for 4 Ton Models (Orifice Matches)

| *SA1QE4M1SN60K SERIES | | | | | | | | | | | | | | | | |
|------------------------------|--------------------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|-------------|------------|
| SUCT. PRESS. | OUTDOOR TEMPERATURE (°F) | | | | | | | | | | | | | | | |
| | 70 | | 75 | | 80 | | 85 | | 90 | | 95 | | 100 | | 105 | |
| | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. | LIQ. PRESS. | DIS. TEMP. |
| 122 | 243 | 133 | | | | | | | | | | | | | | |
| 124 | 244 | 136 | 267 | 136 | | | | | | | | | | | | |
| 126 | 245 | 140 | 268 | 140 | 291 | 139 | | | | | | | | | | |
| 128 | 246 | 143 | 269 | 143 | 292 | 143 | 315 | 143 | | | | | | | | |
| 130 | 247 | 147 | 270 | 147 | 293 | 146 | 315 | 146 | 338 | 146 | | | | | | |
| 132 | | | 270 | 150 | 293 | 150 | 316 | 150 | 339 | 150 | 362 | 150 | | | | |
| 134 | | | | | 294 | 153 | 317 | 153 | 340 | 153 | 363 | 153 | 386 | 153 | | |
| 136 | | | | | | | 318 | 156 | 341 | 156 | 364 | 157 | 387 | 157 | 410 | 157 |
| 138 | | | | | | | 319 | 160 | 341 | 160 | 364 | 160 | 387 | 160 | 410 | 160 |
| 140 | | | | | | | | | 342 | 163 | 365 | 163 | 388 | 163 | 411 | 163 |
| 142 | | | | | | | | | | | 366 | 166 | 389 | 166 | 412 | 166 |
| 144 | | | | | | | | | | | | | 390 | 169 | 412 | 169 |
| 146 | | | | | | | | | | | | | | | 413 | 172 |
| 148 | | | | | | | | | | | | | | | | |

Table 9. Charging Table for 5 Ton Models (Orifice Matches)

*SA1QE4M1SN Charging Chart

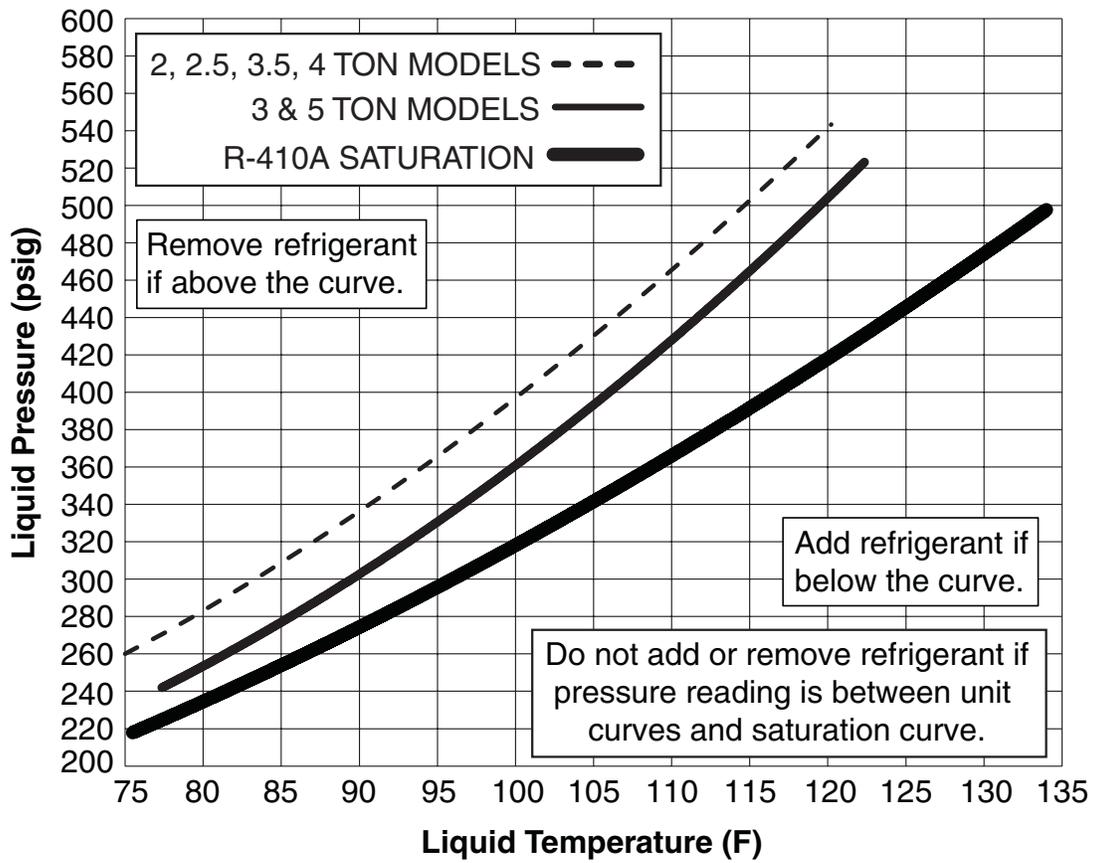


Figure 4. Charging Chart for 2 Through 5 Ton Models (TXV Matches)

WIRING DIAGRAMS

WIRING DIAGRAM



Split System Air Conditioner (Outdoor Section)

Single Phase

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 volts to ground.
4. For replacement wires use conductors suitable for 105 deg C.
5. For ampacities and overcurrent protection, see unit rating plate.
6. Connect to 24 vac/40ca/class 2 circuit. See furnace/airhandler installation instructions for control circuit and optional relay/transformer kits.
7. Anti-Short Cycle Timer (ASCT) may or may not be installed in the unit. If desired, ASCT is factory installed on select models only or may be field installed as shown using manufacturer's approved kit. If not present, connect Yellow and Black wires per Note 6.

1. Couper le courant avant de faire letretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt a la terre.

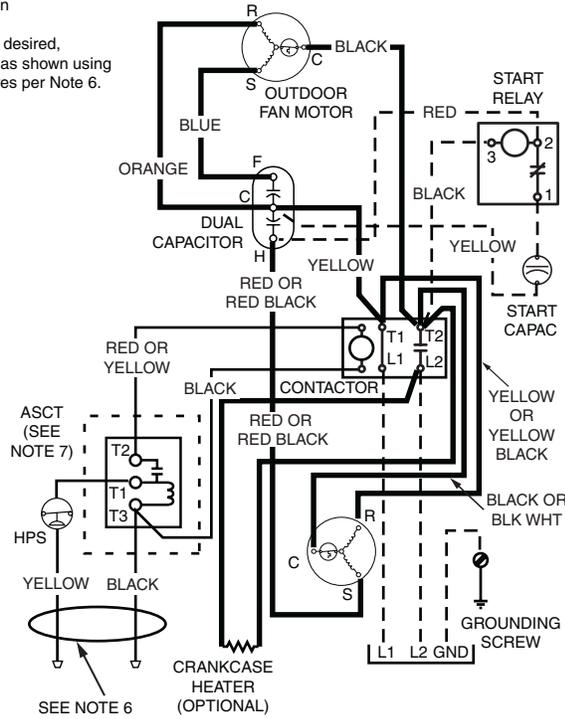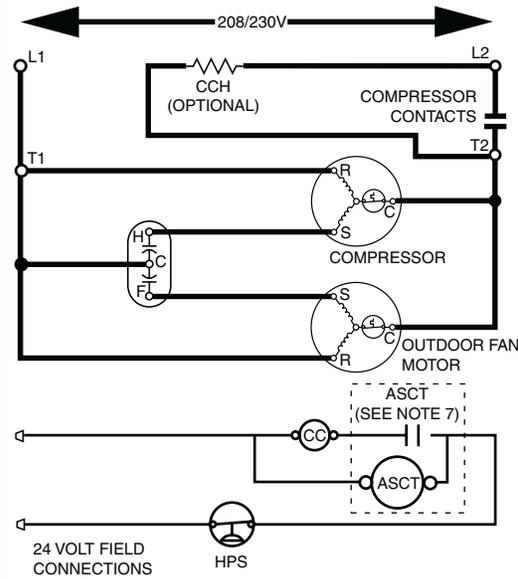

CC - Contactor Coil
 CCH - Cranks case Heater
 HPS - High Pressure Switch

| LEGEND: | |
|--------------|-----|
| FIELD WIRING | --- |
| LOW VOLTAGE | — |
| HIGH VOLTAGE | — |



710388B
 (Replaces 710388A)
 0109

Figure 5. W.D. for 2 - 4 Ton Models

WIRING DIAGRAM

Split System Air Conditioner (Outdoor Section) With ECM Outdoor Motor

208/230V

Single Phase / 60 Hz.

- NOTES:**
1. Disconnect all power before servicing.
 2. For supply connections use copper conductors only.
 3. Not suitable on systems that exceed 150 volts to ground.
 4. For replacement wires use conductors suitable for 105 °C.
 5. For ampacities and overcurrent protection, see unit rating plate.
 6. Connect to 24 vac/40vac/class 2 circuit. See furnace/air handler installation instructions for control circuit and optional relay/transformer kits.
 7. Anti-Short Cycle Timer (ASCT) may or may not be installed in the unit. If desired, ASCT is factory installed on select models only or may be field installed as shown using manufacturer's approved kit. If not present, connect Yellow and Black wires per Note 6.

1. Couper le courant avant de faire leretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt a la terre.

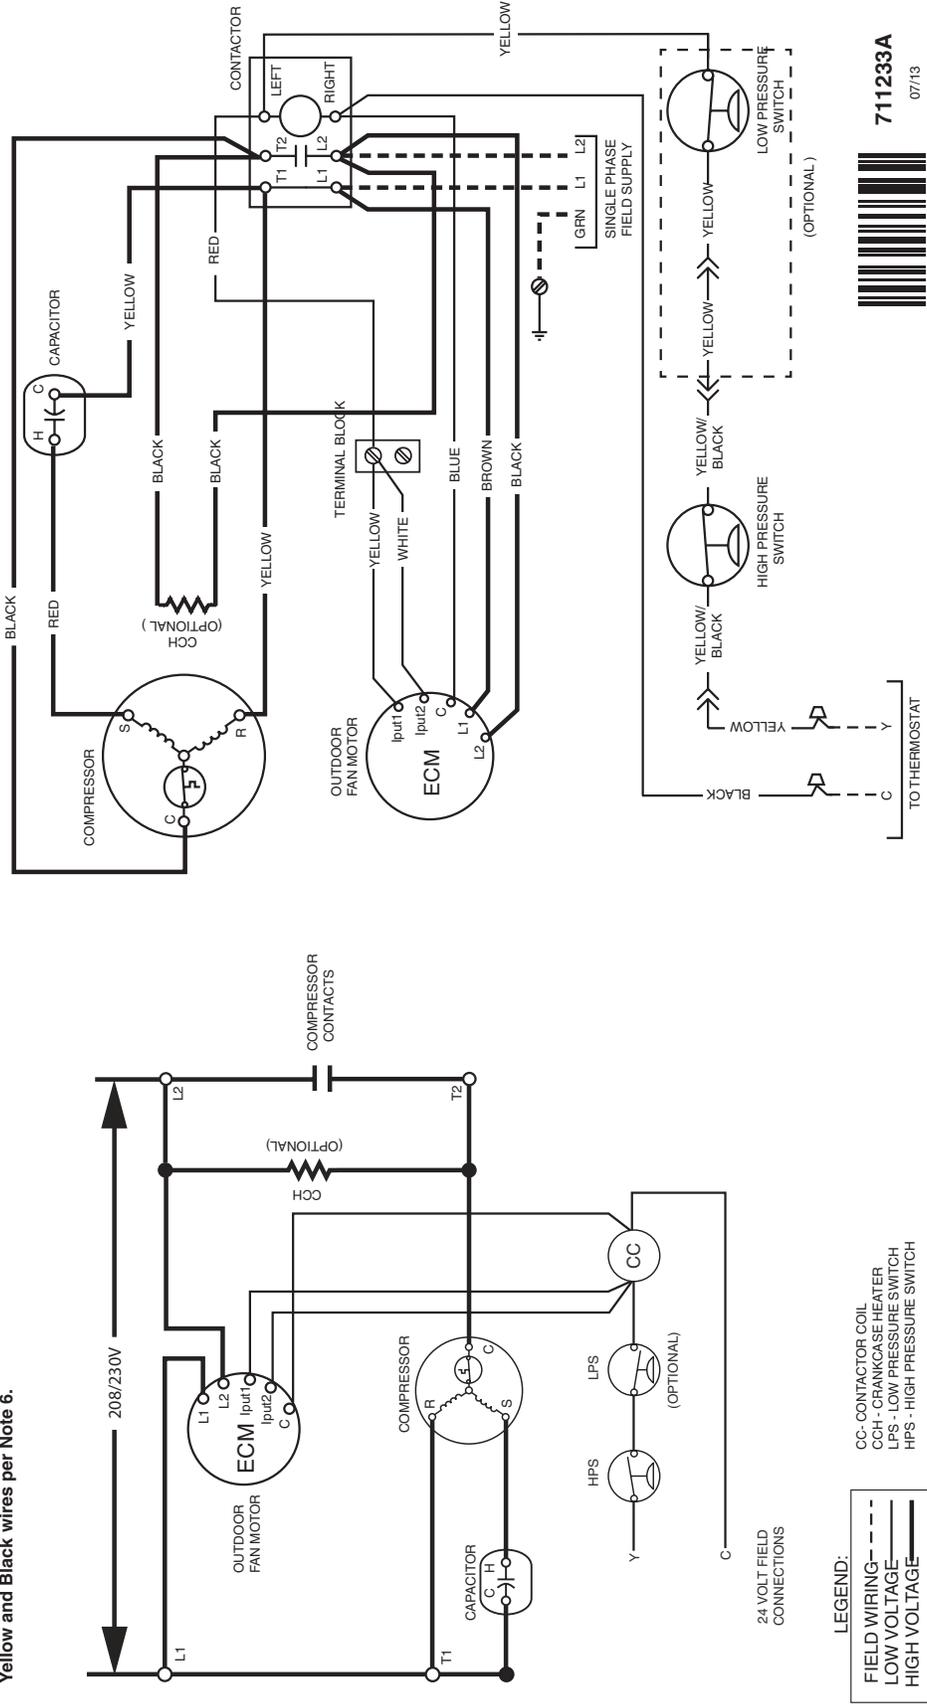


Figure 6. W.D. for 5 Ton Models

INSTALLATION CHECKLIST

| | | |
|---|--------|----|
| INSTALLATION ADDRESS: | | |
| CITY: | STATE: | |
| UNIT MODEL # | | |
| UNIT SERIAL # | | |
| INSTALLER NAME: | | |
| CITY: | STATE: | |
| Unit installed minimum clearances shown on page 3 ? | YES | NO |
| Has the owner's information been reviewed with the customer? | YES | NO |
| Has the literature package been left with the unit? | YES | NO |

| |
|---|
| PROPOSITION 65 WARNING: |
| WARNING: This product contains chemicals known to the state of California to cause cancer. |
| WARNING: This product contains chemicals known to the state of California to cause birth defects or other reproductive harm. |

| ELECTRICAL SYSTEM | | |
|--|-----|----|
| Electrical connections tight? | YES | NO |
| Line voltage polarity correct? | YES | NO |
| Rated Voltage: VOLTS | | |
| Max. deviation of voltage from avg. volts: VOLTS | | |
| Has the thermostat been calibrated? | YES | NO |
| Is the thermostat level? | YES | NO |
| Is the heat anticipator setting correct? (If Applicable) | YES | NO |

| REFRIGERATION SYSTEM | | |
|--|-----|----|
| Was unit given 24 hr warm up period for crankcase heaters? | YES | NO |
| Stage-1 Liquid Pressure (high side)..... | | |
| Stage-1 Suction Pressure (low side)..... | | |

REPLACEMENT PARTS

Replacement parts are available through your distributor. Please have the complete model and serial number of the unit when ordering replacement parts.

ELECTRICAL:

- Capacitors
- Compressors
- Contactors
- Pressure Switches
- Relays
- Temperature Limit Switches
- Thermostats
- Time Delay Relays
- Transformers

MOTORS:

- Blower Motor
- Fan Motor

COMPONENTS:

- Blower Assembly
- Cabinet Panels
- Expansion Valves
- Fan Grille
- Filter/Driers



10183350
(NEW)