

SMALL PACKAGED HEAT PUMP - SINGLE PHASE 2 TON AND 3 TON

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150V to ground.
4. For replacement wires use conductors suitable for 105°C.
5. Low Pressure Switch jumpered from LP1 to LP2 (on select models)
6. See Installation Instructions for blower motor airflow setting and terminal locations.
7. Select units have factory installed HUD thermostat to limit electric heat.

If Hud application see low voltage section in the unit Installation Instructions.

- 