


WIRING DIAGRAM

Split System Heat Pump (Outdoor Section)

Single Phase

- NOTES:**
- 1. Disconnect all power before servicing.
 - 2. For supply connections use copper conductors only.
 - 3. Not suitable on systems that exceed 150 volts to ground
 - 4. For replacement wires use conductors suitable for 105° C.
 - 5. For ampacities and overcurrent protection, see unit rating plate.
 - 6. Connect to 24 vac/40va/class 2 circuit. See furnace/air handler installation instructions for control circuit and optional relay/transformer kits.

- 1. Couper le courant avant de faire letretien.**
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt a la terre.

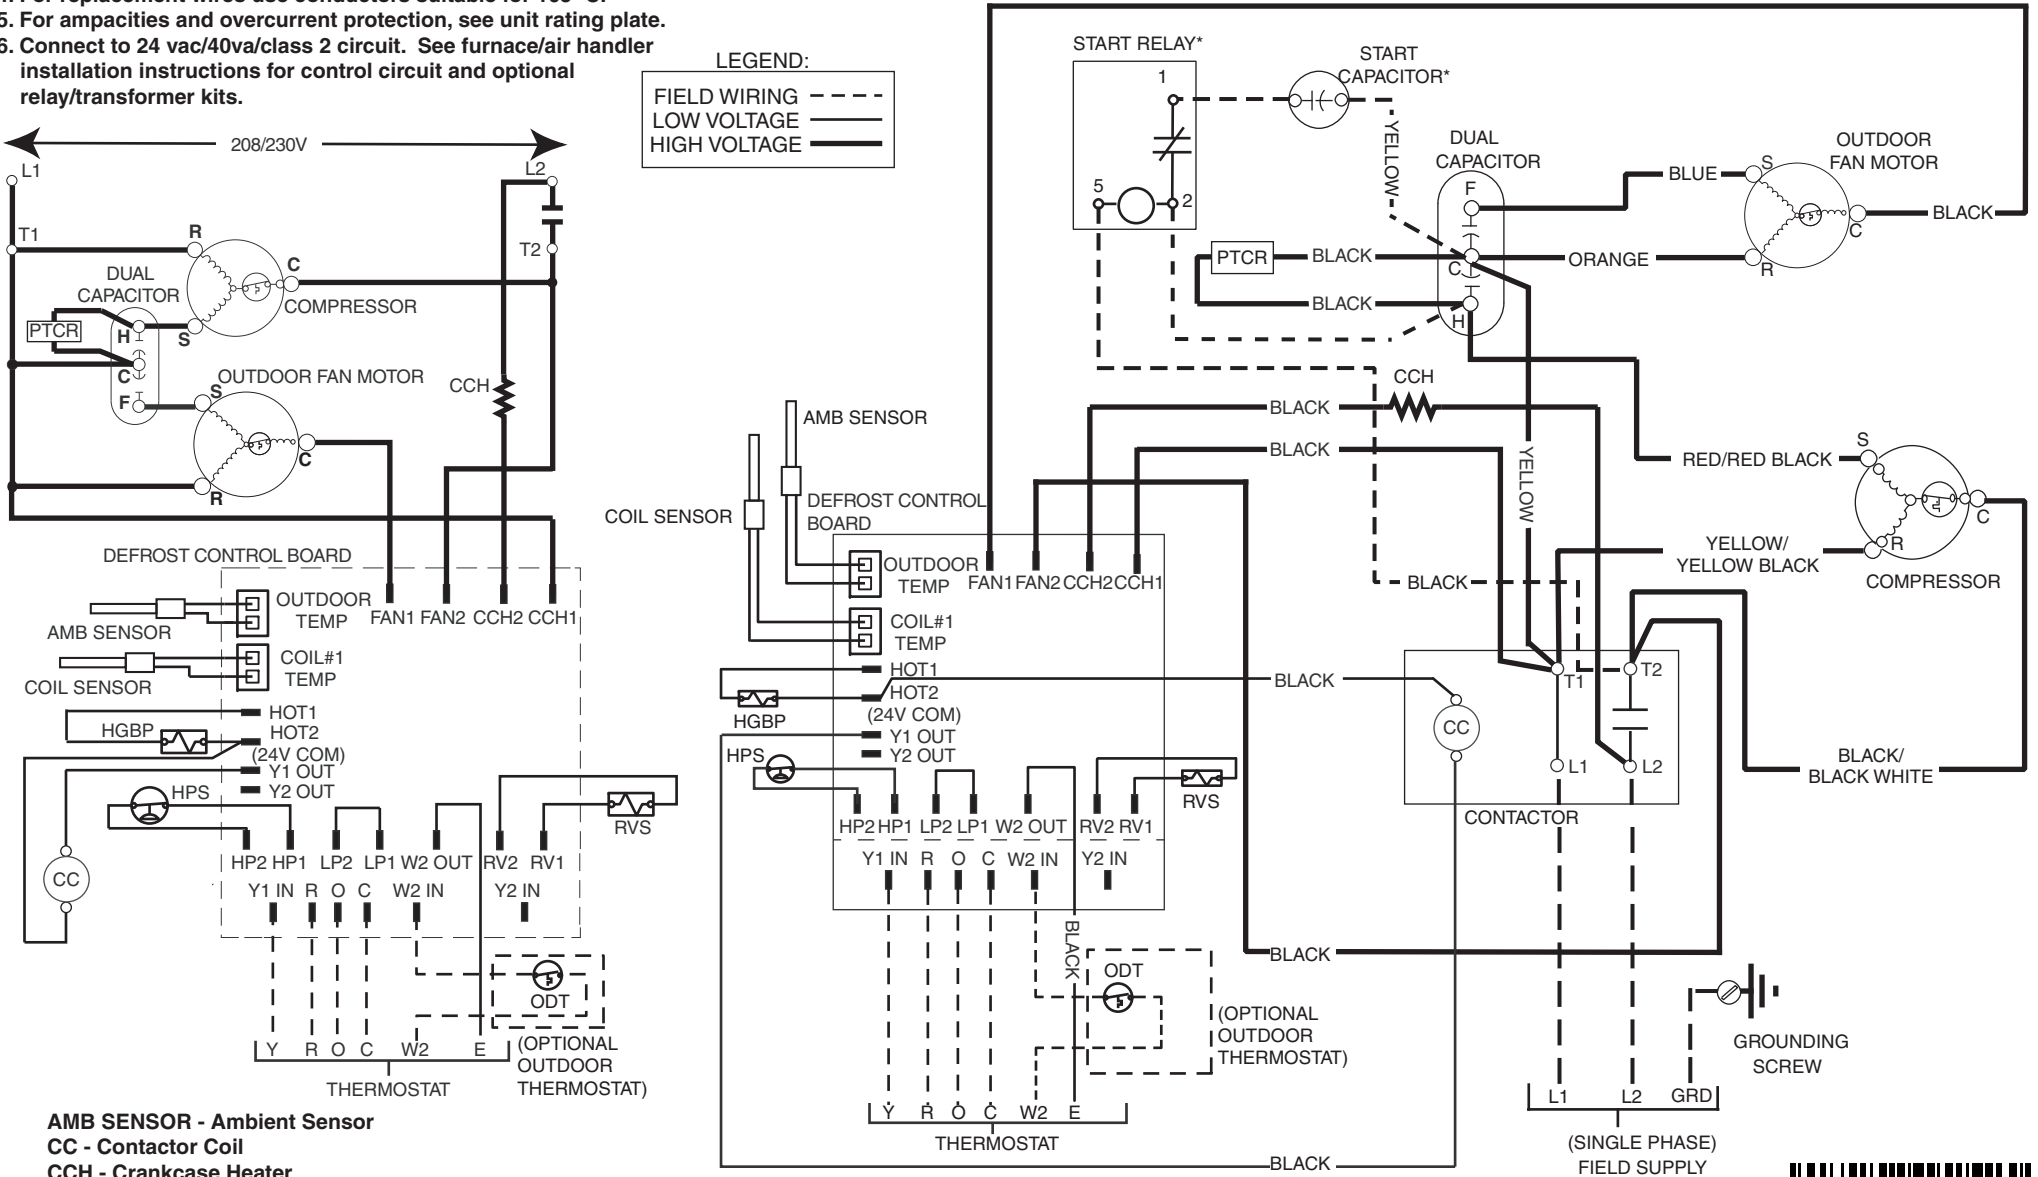

- AMB SENSOR - Ambient Sensor**
CC - Contactor Coil
CCH - Crankcase Heater
HPS - High Pressure Switch
HGBP - Hot Gas By Pass Valve
RVS - Reversing Valve Solenoid
*** HARD START KIT (OPTIONAL)**



10272300
(Replaces 10066150)