

WIRING DIAGRAM

Gas Direct Ignition Furnace, Heating & A/C Ready, Model All Models.

NOTES:

1. Incoming power must be polarized. Observe color coding. (See furnace data plate for electrical information.)
2. If any of the original wires (as supplied with the appliance) must be replaced, use 18°C.Thermoplastic type wire or its equivalent.
3. A wire from "Y" on the thermostat to the furnace is required.

OBSOLETE

