

WIRING DIAGRAM

Two Stage Split System Heat Pump (Outdoor Section) With PSC Fan Motor


208/230V

Single Phase / 60 Hz.

NOTES:


1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 volts to ground.
4. For replacement wires use conductors suitable for 105 °C
5. For ampacities and overcurrent protection, see unit rating plate.
6. Connect to 24 vac/40va/class 2 circuit. See furnace/airhandler installation instructions for control circuit and optional relay/transformer kits.
7. Caution: The Low Voltage wiring shall NOT be grounded to this unit.

1. Couper le courant avant de faire le r  t  .
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt    la terre.

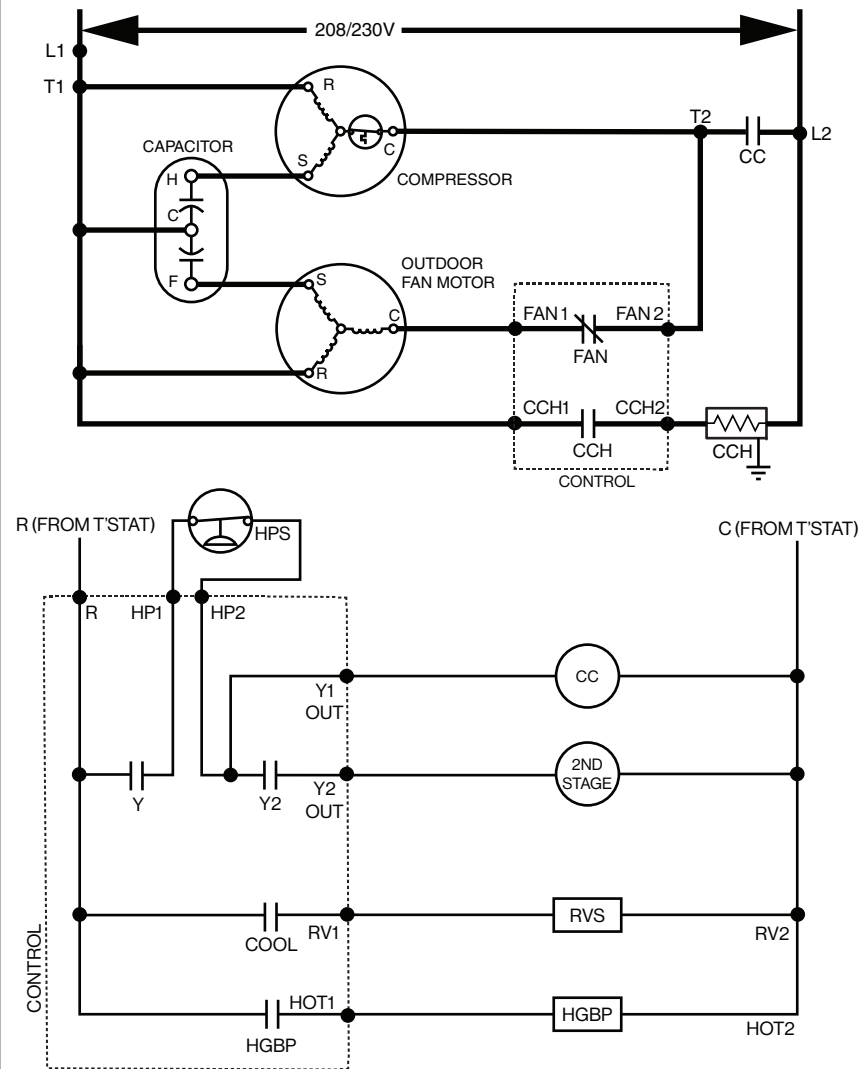

LEGEND:

FIELD WIRING	---
LOW VOLTAGE	---
HIGH VOLTAGE	---

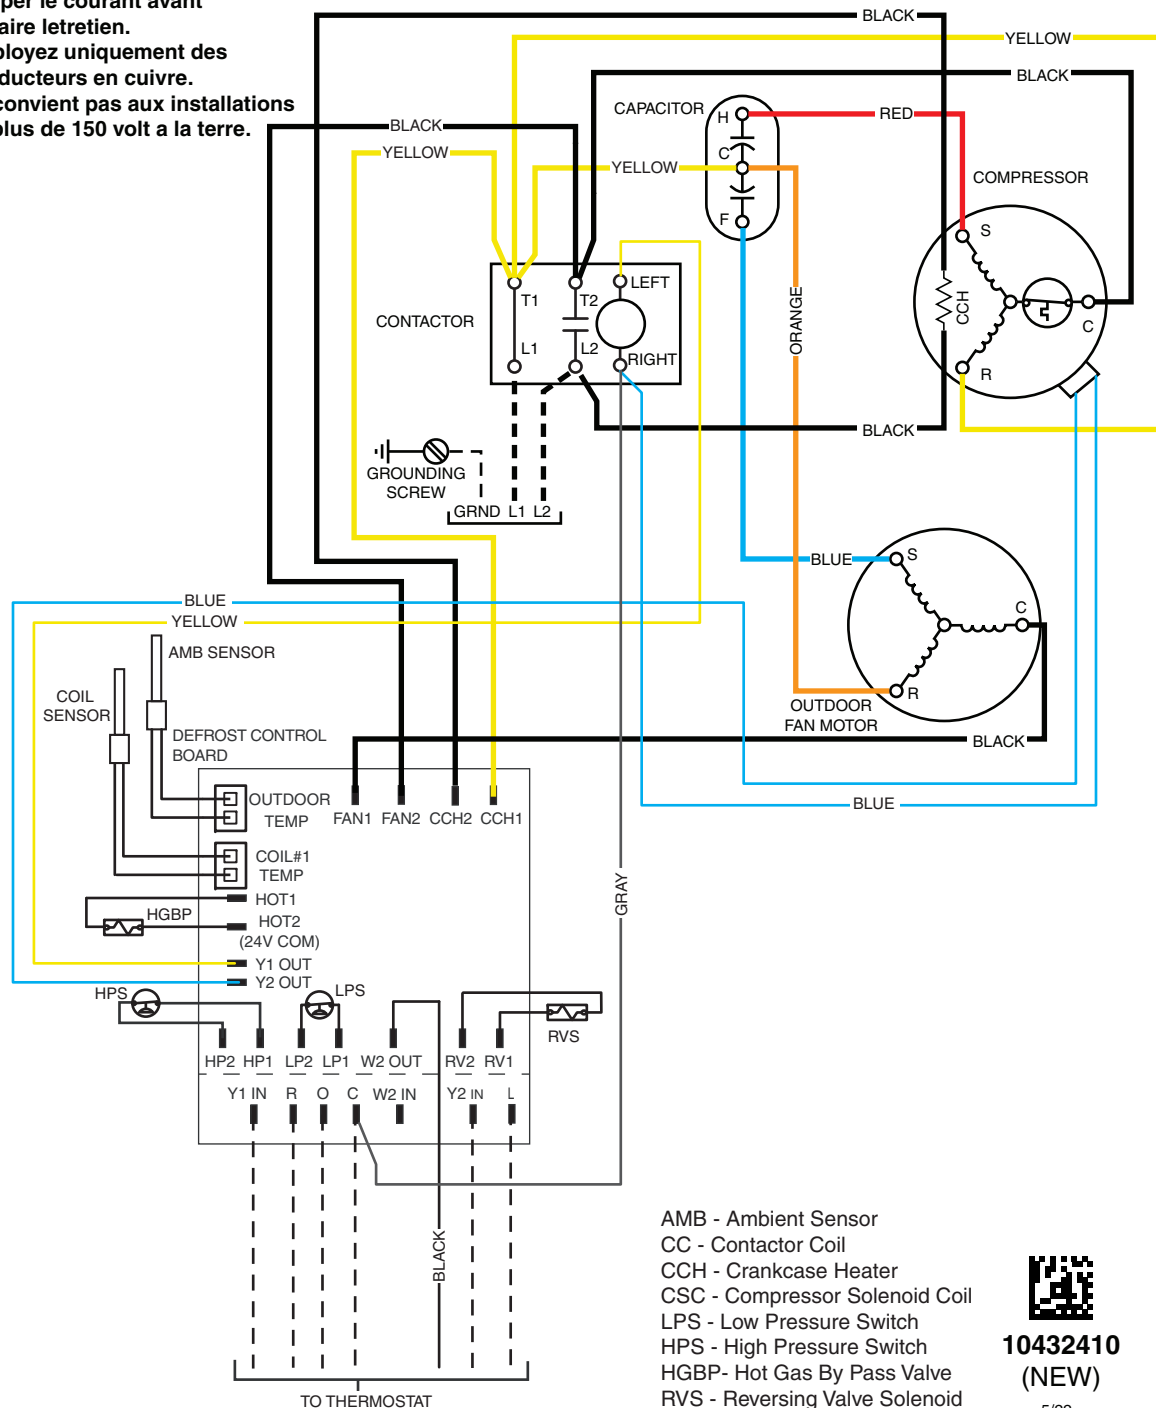

AMB - Ambient Sensor
 CC - Contactor Coil
 CCH - Crankcase Heater
 CSC - Compressor Solenoid Coil
 LPS - Low Pressure Switch
 HPS - High Pressure Switch
 HGBP - Hot Gas By Pass Valve
 RVS - Reversing Valve Solenoid



10432410
(NEW)