

WIRING DIAGRAM


Split System Heat Pump (Outdoor Section)

Single Phase

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 volts to ground
4. For replacement wires use conductors suitable for 105° C.
5. For ampacities and overcurrent protection, see unit rating plate.
6. Connect to 24 vac/40va/class 2 circuit. See furnace/air handler installation instructions for control circuit and optional relay/transformer kits.
7. Caution: The Low Voltage wiring shall NOT be grounded to this unit.


1. Couper le courant avant de faire letrretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt a la terre.

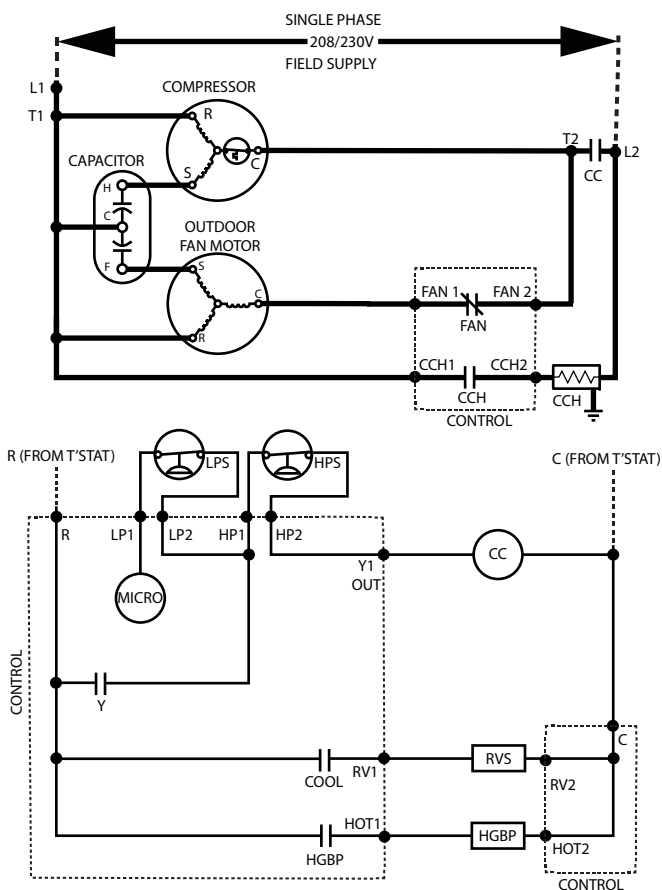

AMB - Ambient Sensor
CC - Contactor Coil
CCH - Crankcase Heater
HPS - High Pressure Switch
HGBP - Hot Gas By Pass Valve
LPS - Low Pressure Switch
RVS - Reversing Valve Solenoid

LEGEND:

FIELD WIRING - - - - -
LOW VOLTAGE - - - - -
HIGH VOLTAGE ————

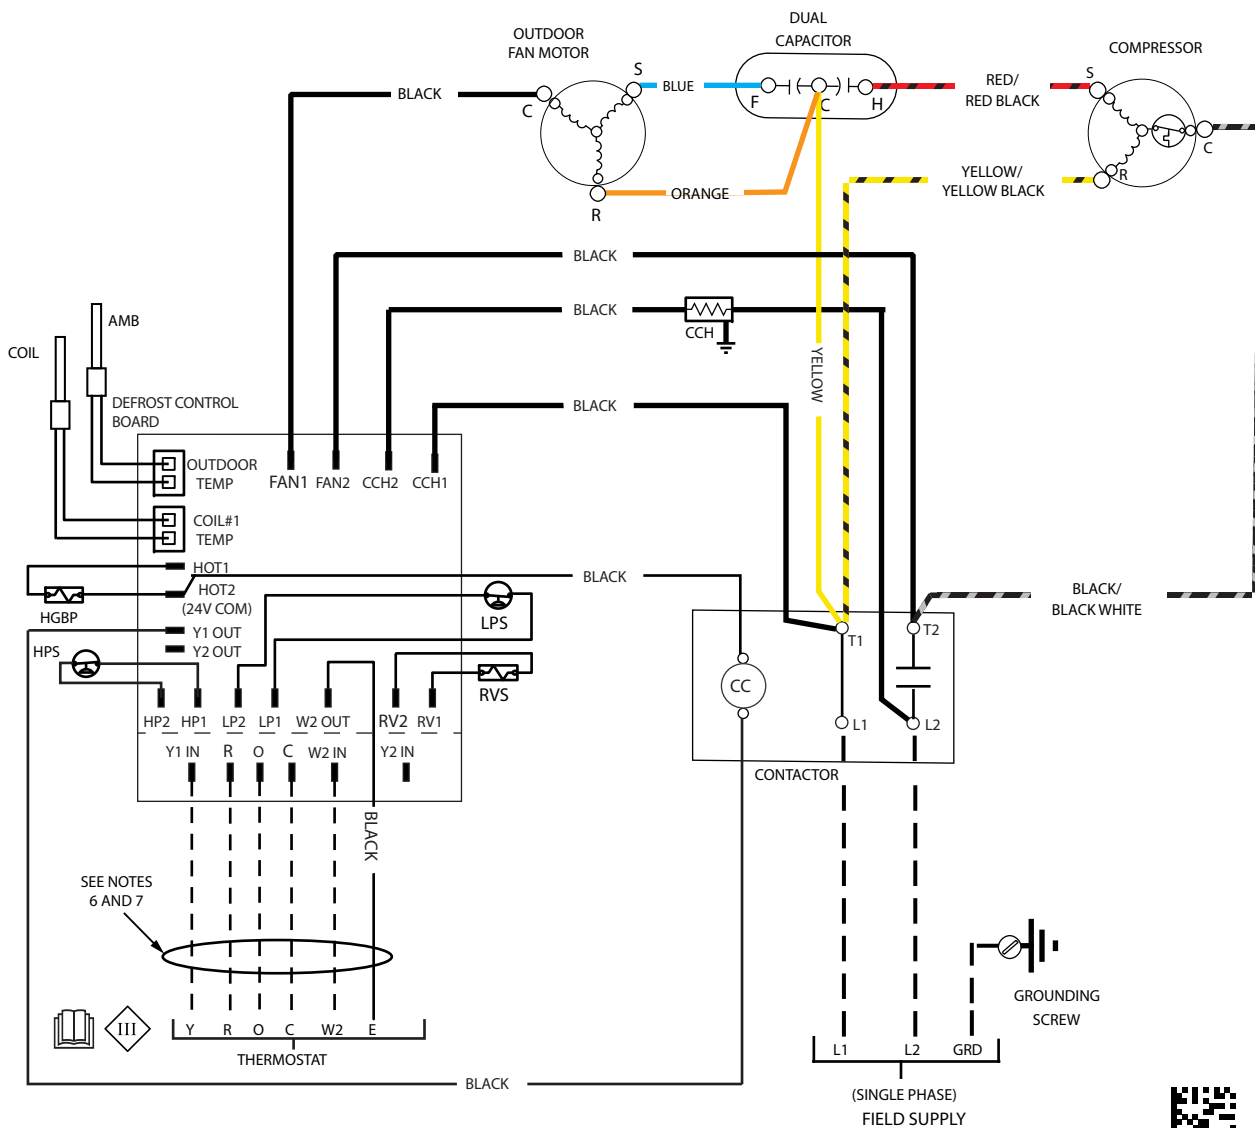

(SINGLE PHASE)
FIELD SUPPLY

GROUNDING
SCREW



10465610

11/23