# INSTALLATION INSTRUCTIONS

#### INSTALLATION INSTRUCTIONS 547840 35% MOTORIZED FRESH AIR USED WITH R4GM 072 P6SD, Q6SD, R6GD 024-060 UNITS

FORM# 598A-0709 (598A-0808)

The 0-35% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. A 2-position control motor opens the intake damper when the blower is energized. The amount of air is controlled by a slide damper on the outside air hood assembly. The intake panel is fully insulated.



# Step 1:

Check for correct number of parts. See list below:

1 ea. - Outside Air Intake damper assembly with hood and slide dampers.

#### Step 2:

Remove return air duct cover from unit, and retain the screws for later use.

#### Step 3:

Remove unit return panel. Locate unit accessory plug at top of return air compartment and connect to accessory low voltage plug connection per diagram on back of this instruction sheet.

# Step 4:

Install outside air assembly as shown in Figure 1 over duct opening with the screws removed in Step 2.

# Step 5:

Adjust the slide damper to the desired position.

# NOTE: It will be necessary to remove intake hood, so the second slide damper can be removed, if the full amount of outside air is required.

