Installation Instructions

FE/E1/E2 Replacement Heater Kit

For the FE Electric Furnace, use the assembly as shipped.

For the E1 or E2 Electric Furnace, cut off the end of the rod extension at the dimple.

Installation Instructions FE/E1/E2 Replacement Heater Kit

For the FE Electric Furnace, use the assembly as shipped.

For the E1 or E2 Electric Furnace, cut off the end of the rod extension at the dimple.



Specifications & illustrations subject to change without notice or incurring obligations (01/14).

Installation Instructions

FE/E1/E2 Replacement Heater Kit

For the FE Electric Furnace, use the assembly as shipped.

For the E1 or E2 Electric Furnace, cut off the end of the rod extension at the dimple.



Specifications & illustrations subject to change without notice or incurring obligations (01/14).

Installation Instructions

FE/E1/E2 Replacement Heater Kit

For the FE Electric Furnace, use the assembly as shipped.

For the E1 or E2 Electric Furnace, cut off the end of the rod extension at the dimple.





Specifications & illustrations subject to change without notice or incurring obligations (01/14).

