


ADDENDUM - *G6/*GF1 80+ TWO STAGE FURNACE WITH FIXED SPEED BLOWERS

Figure numbers 23 and 26 in the Installation Instructions display improper wiring. The low fire blower speed wire should be placed on terminal #6 on the DPST blower relay, and the high fire blower speed wire should be placed on terminal #4. Refer to the drawing below, and Table 2 in the Installation Instructions for details.

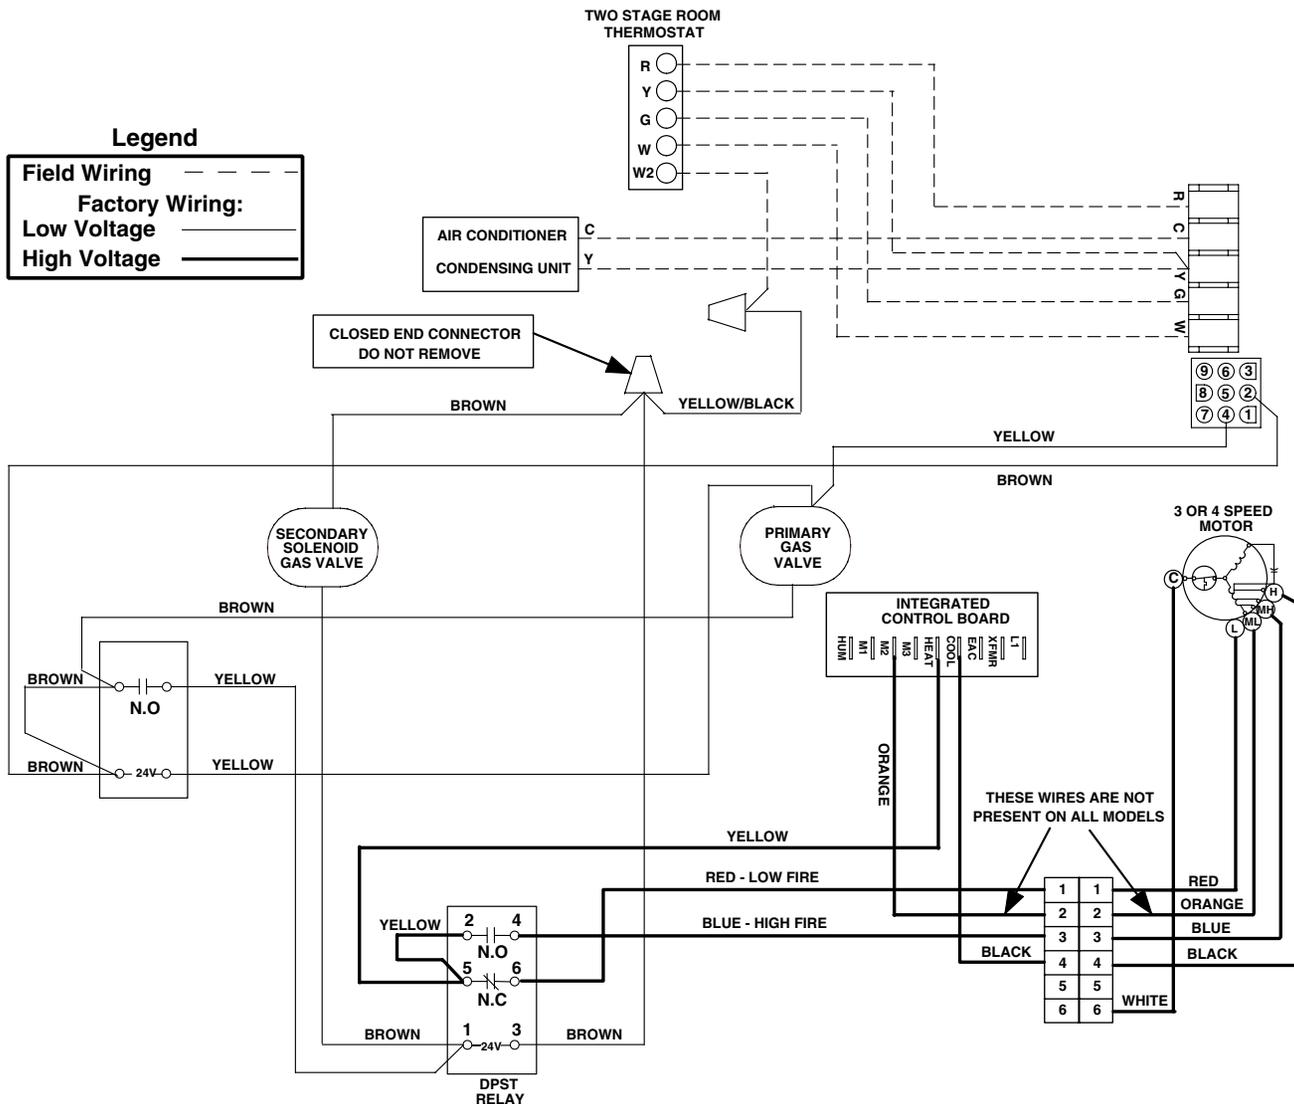

7085110

