


REPLACEMENT PARTS LIST

SINGLE STAGE CONDENSING DOWNFLOW GAS FURNACE

M7RL SERIES

95.1% AFUE

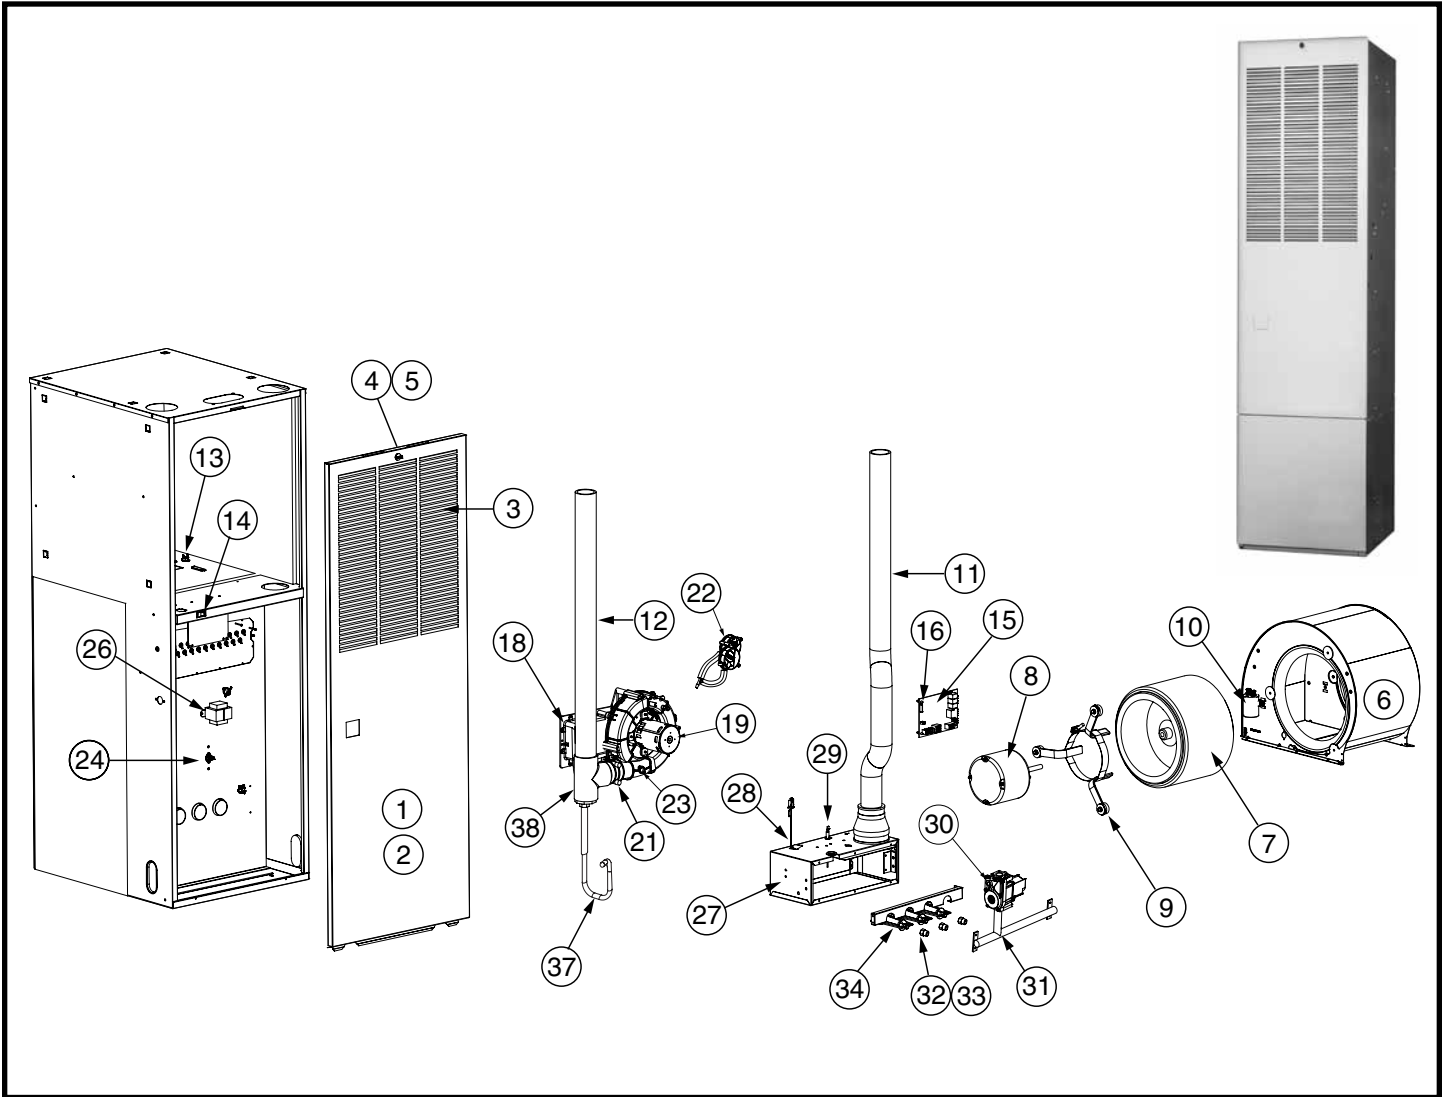

M7RL SERIES GAS FURNACE

ITEM	DESCRIPTION	045A	060A	072A
1	DOOR ASSEMBLY, LOUVERED (FRONT RETURN MODELS)	903977	903977	903977
2	DOOR ASSEMBLY, NON-LOUVERED (TOP RETURN MODELS)	904049	904049	904049
3	FILTER (FRONT RETURN MODELS)	669363	669363	669363
4	DOOR LATCH	618107	618107	618107
5	DOOR LATCH FASTENER	606317	606317	606317
6	BLOWER ASSEMBLY	921490	921490	921491
7	BLOWER WHEEL	667258	667258	667258
8	BLOWER MOTOR	904858	904858	904859
9	BLOWER MOTOR MOUNT KIT	904951	904951	904951
10	CAPACITOR	622545	622545	622549
11	COMBUSTION AIR INLET PIPE	664645	664645	664645
12	VENT PIPE	664644	664644	664644
13	BLOWER DECK LIMIT	626602	626602	626602
14	DOOR SWITCH	632337	632337	632337
15	CONTROL BOARD	920915	920915	920915
16	FUSE	632261	632261	632261
17	HEAT EXCHANGER (NOT SHOWN)	921597	921597	921598
18	OUTLET HEADER BOX	904802	904802	904802
19	INDUCER MOTOR WITH GASKET	921494	921494	921494
20	INDUCER ORIFICE (NOT SHOWN)	669927	669749	669712
21	INLINE DRAIN ASSEMBLY	664435	664435	664435
22	PRESSURE SWITCH	632492	632624	632492
23	VENT LIMIT	626606	626606	626606
24	MAIN AIR LIMIT	626567	626617	626598
25	ROLLOUT LIMIT (NOT SHOWN)	626608 626558R	626608 626558R	626608 626558R
26	TRANSFORMER	622341	622341	622341
27	BURNER BOX ASSEMBLY	921495	921599	921496
28	IGNITER	632625	632625	632625
29	FLAME SENSOR	632316	632316	632316
30	GAS VALVE	624610	624610	624610
31	MANIFOLD	664639	664639	664640
32	ORIFICE, NATURAL	661049	661045	661047
33	ORIFICE, LP	661057	661055	661056
34	BURNER INSHOT	661135	661135	661135
35	BURNER VIEW PORT (NOT SHOWN)	632216	632216	632216
36	DRAIN TUBE, SOFT, 42" (NOT SHOWN)	664278	664278	664278
37	DRAIN TUBE, HARD "J"	663706	663706	663706
38	VENT TEE	618060	618060	618060
39	COIL DOOR ASSEMBLY (NOT SHOWN)	903094	903094	903094

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

