


REPLACEMENT PARTS LIST

GEOTHERMAL DIRECT EXCHANGE SYSTEM

60 HZ, 208-230V, SINGLE PHASE

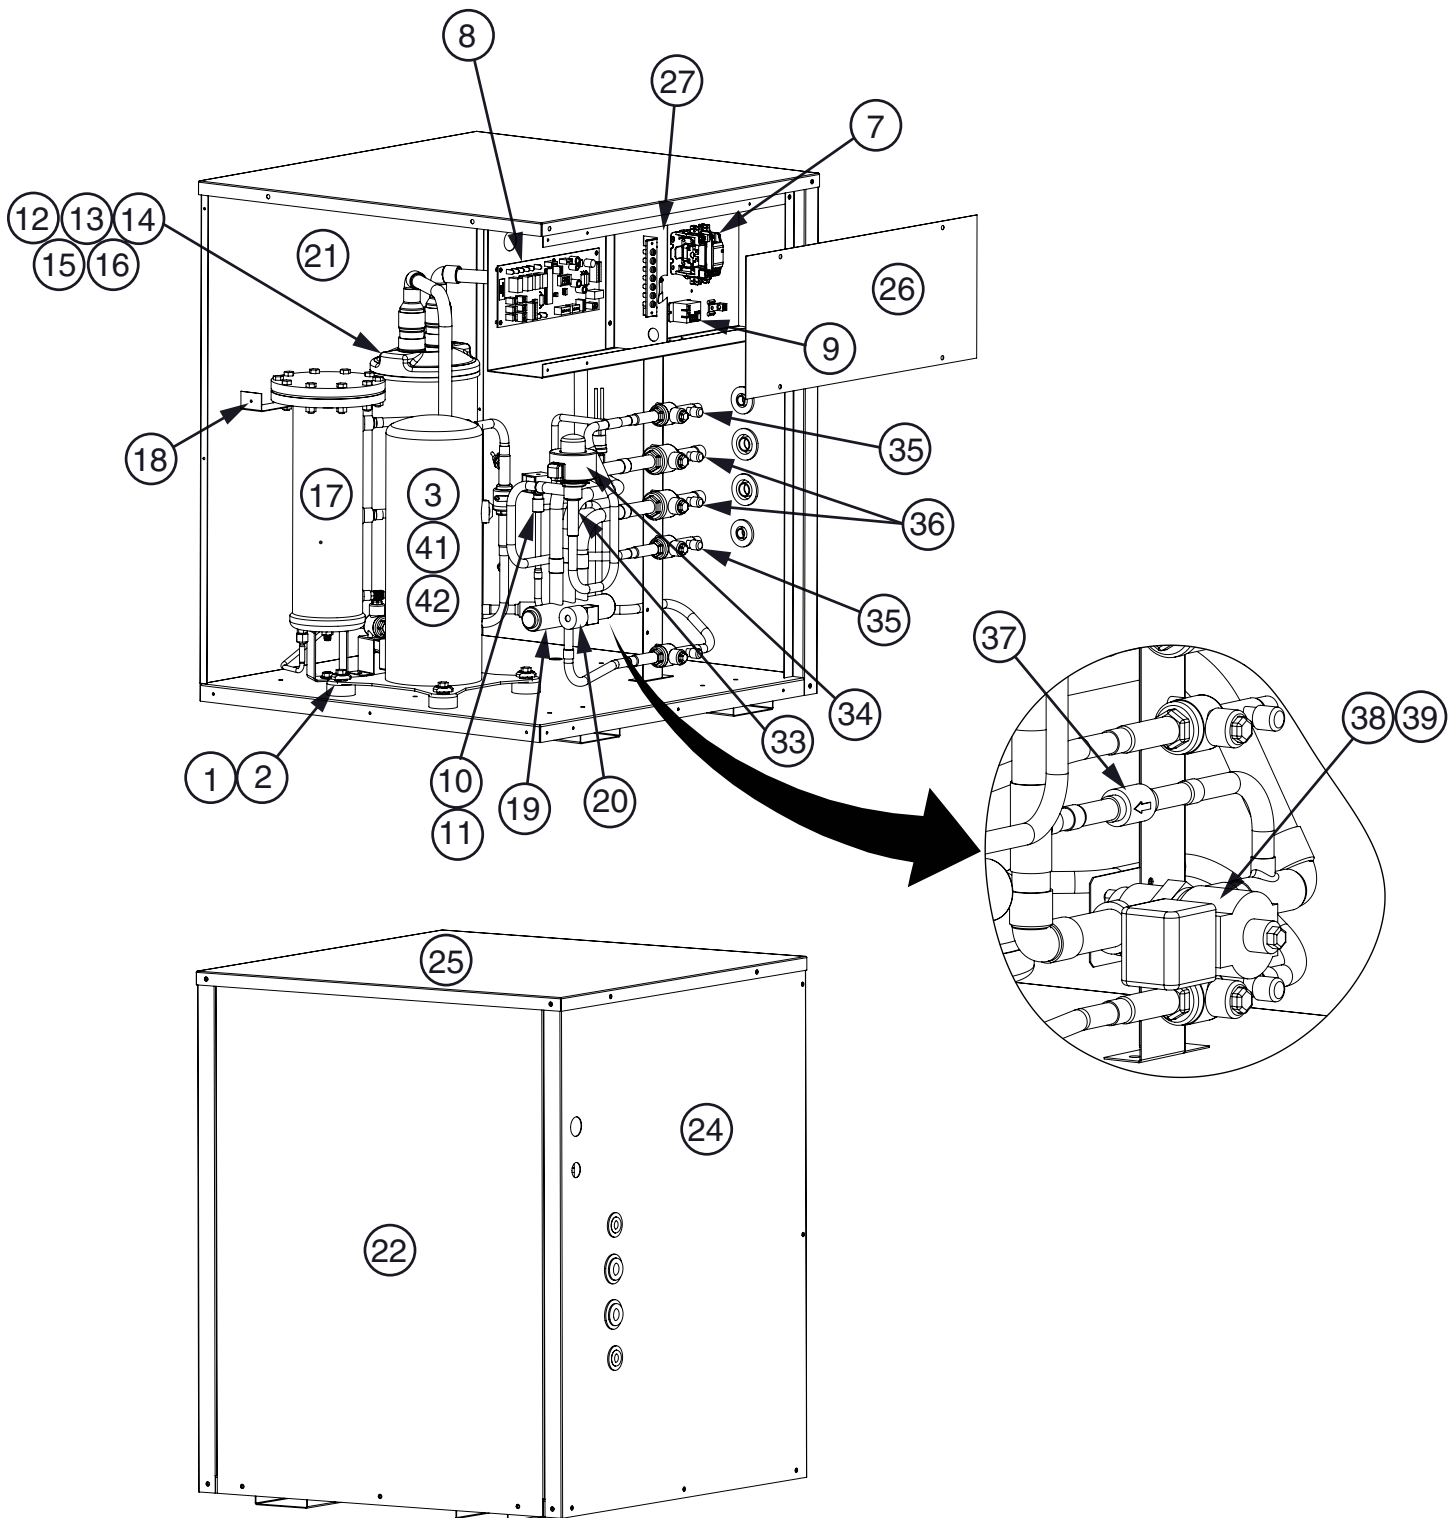

GEOTHERMAL DIRECT EXCHANGE SYSTEM - 60 HZ

ITEM	DESCRIPTION	Y1SA-E24K	Y1SA-E36K	Y1SA-E48K	Y1SA-E60K
1	COMPRESSOR BOLT	600400	600400	600400	600400
2	COMPRESSOR GROMMET	668530	668530	668530	668530
3	COMPRESSOR	919606	918870	918872	918873
4	COMPRESSOR MOLDED PLUG (NOT SHOWN)	634658	634658	634660	634660
5	CAPACITOR (NOT SHOWN)	01-0268	01-0085	01-0278	621717R
6	CAPACITOR STRAP (NOT SHOWN)	258781	258781	258780	258780
7	CONTACTOR	624712	624712	624713	624714
8	CONTROL BOARD	1006757	1006757	1006757	1006757
9	RELAY	—	—	624843	624843
10	HOT GAS BYPASS VALVE	669965	669965	669965	669965
11	HOT GAS BYPASS VALVE COIL	669992	669992	669992	669992
12	ACCUMULATOR (2, 3, 4, & 5 TON MODELS)	670041	670043	670043	670043
13	ACCUMULATOR (4, & 5 TON MODELS)	—	—	670018	670018
14	ACCUMULATOR INSULATING COVER (2, 3, 4, & 5 TON MODELS)	690687	690688	690688	690688
15	ACCUMULATOR INSULATING COVER (4, & 5 TON MODELS)	—	—	690689	690689
16	ACCUMULATOR INSULATING TOP COVER	690698	690698	690698	690698
17	OIL SEPARATOR	670047	670047	670047	670047
18	OIL SEPARATOR BRACKET	2C8401	2C8401	2C8401	2C8401
19	REVERSING VALVE	669465	669465	669465	669465
20	REVERSING VALVE COIL	669935	669935	669935	669935
21	PANEL, BACK	2C5491R	2C5491R	2C5491R	2C5491R
22	PANEL, FRONT	2C5461R	2C5461R	2C5461R	2C5461R
23	PANEL, LEFT (NOT SHOWN)	2C5471R	2C5471R	2C5471R	2C5471R
24	PANEL, RIGHT	2C5481R	2C5481R	2C5481R	2C5481R
25	PANEL, TOP	2C5441R	2C5441R	2C5441R	2C5441R
26	ELECTRIC BOX COVER	2C6911	2C6911	2C6911	2C6911
27	LOW VOLTAGE DIVIDER	2C7141	2C7141	2C7141	2C7141
28	HIGH PRESSURE SAFETY SWITCH (NOT SHOWN)	632473	632473	632473	632473
29	PRESSURE TRANSDUCER, LOW (NOT SHOWN)	624692	624692	624692	624692
30	PRESSURE TRANSDUCER HARNESS, LOW (NOT SHOWN)	634800	634800	634800	634800
31	PRESSURE TRANSDUCER, HIGH (NOT SHOWN)	624839	624839	624839	624839
32	PRESSURE TRANSDUCER HARNESS, HIGH (NOT SHOWN)	634850	634850	634850	634850
33	EXV VALVE	670044	670031	670038	670038
34	EXV VALVE COIL	670045	670032	670032	670032
35	VALVE, LIQUID	670028	670028	670028	670028
36	VALVE, SUCTION	670029	670029	670030	670030
37	CHECK VALVE	670033	670033	670033	670033
38	SOLENOID VALVE	—	—	670034	670034
39	SOLENOID VALVE COIL	—	—	670035	670035
40	SOLENOID VALVE COIL HARNESS (NOT SHOWN)	—	—	2C8862	2C8862
41	COMPRESSOR BLANKET	689791R	689792R	689792R	689793R
42	CRANKCASE HEATER	632677	632677	632677	632677
43	FILTER / DRIER (NOT SHOWN)	668820	668820	668820	668820
44	OIL SEPARATOR REPLACEMENT FILTER (NOT SHOWN)	670046	670046	670046	670046

Please specify the correct Model No., Serial No., & part number(s) when ordering parts from the nearest authorized dealer or service center.

