 
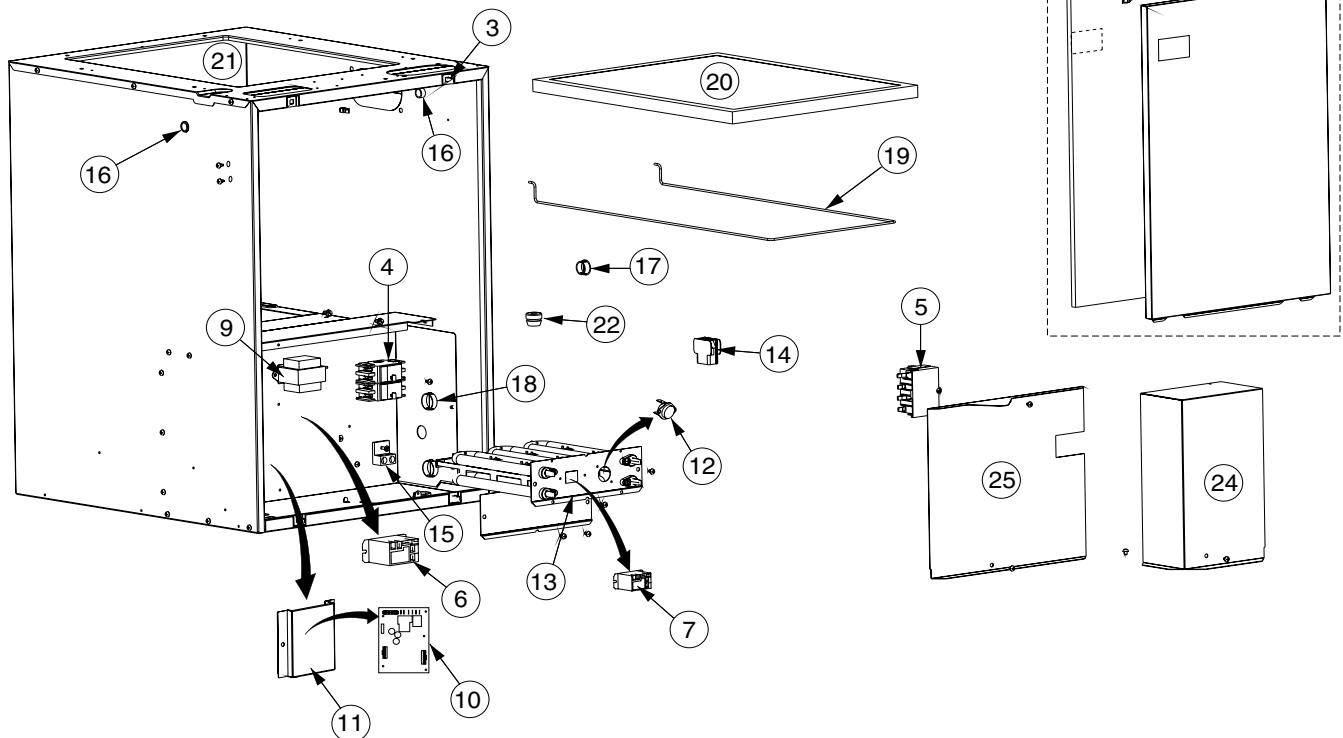 
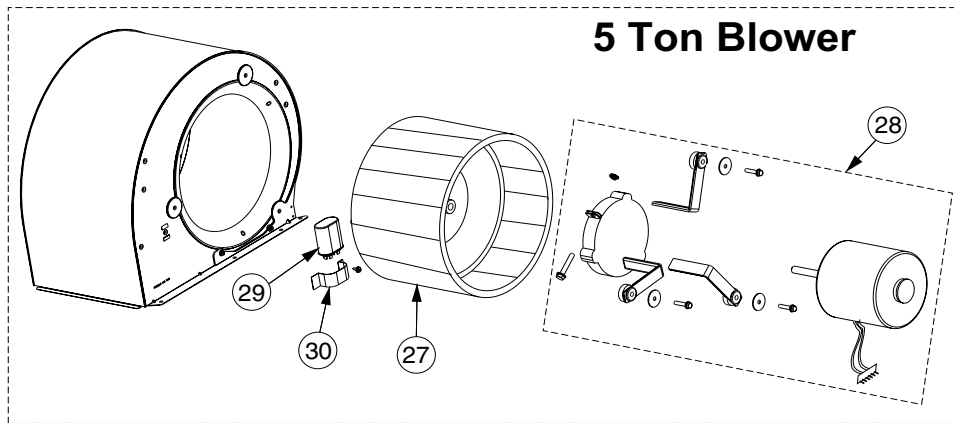 


REPLACEMENT PARTS LIST

E4 SERIES ELECTRIC FURNACE
MODELS -010, -012, -015, -017, -020, -023

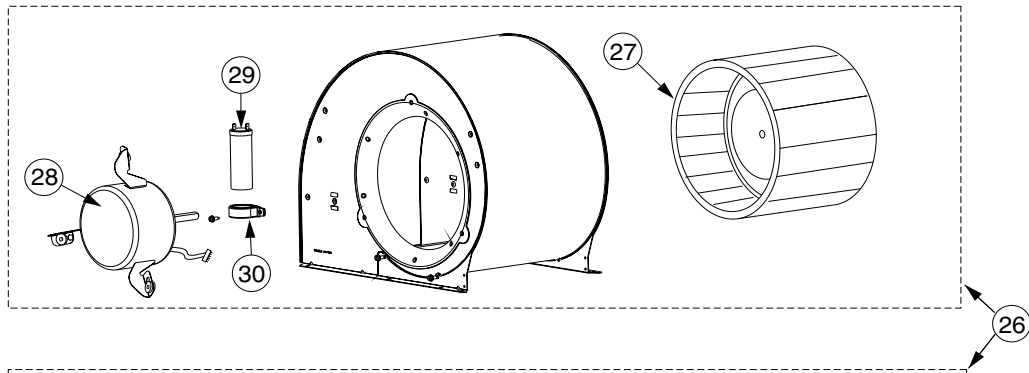

E4 ELECTRIC FURNACE REPLACEMENTS PARTS LIST

ITEM NO.	DESCRIPTION	MODEL KW						
		-010	-012	-015	-017	-020	-023	-023 (5 TON)
1	PANEL DOOR, WHITE - INCLUDES INSULATION	917260	917260	917260	917260	917260	917260	917260
2	RECEPTACLE LATCH	668420	668420	668420	668420	668420	668420	668420
3	STRIKE LATCH	668905	668905	668905	668905	668905	668905	668905
4	CIRCUIT BREAKER, 60A, 2 POLE	632249	632249	632249	632249	632249	632249	632249
5	"SINGLE CIR. ADAPTOR KIT STANDARD ON 012 MODEL, (OPTIONAL ON 015-023 MODELS)"	-	913874	-	-	-	-	-
6	AC RELAY	624843	624843	624843	624843	624843	624843	624843
7	DC RELAY	622671	622671	622671	622671	622671	622671	622671
8	DC RELAY BRACKET (NOT SHOWN)	288621	288621	288621	288621	288621	288621	288621
9	TRANSFORMER, 40 VA	621709	621709	621709	621709	621709	621709	621709
10	CONTROL BOARD	624735	624735	624735	624735	624735	624735	624735
11	CONTROL BOARD BRACKET	280671	280671	280671	280671	280671	280671	280671
12	LIMIT, 1 POLE	-	-	626459	626459	-	-	-
	LIMIT, 2 POLE	626458	626458	626458	626458	626458	626540	626540
13	ELEMENT ASSEMBLY 5.0kW @ 240V	-	-	902818*	-	-	-	-
	ELEMENT ASSEMBLY 5.4kW @ 240V	-	-	-	902820*	-	-	-
	ELEMENT ASSEMBLY 10.0 kW @ 240V	902821#	-	902821#	-	902821†	902821*	902821*
	ELEMENT ASSEMBLY 10.8kW @ 240V	-	-	-	902823#	-	-	-
	ELEMENT ASSEMBLY 11.6kW @ 240V	-	902824#	-	-	-	902824#	902824#
14	CONNECTOR, CAP 6-PIN MATRIX	631728	631728	631728	631728	631728	631728	631728
15	GROUND LUG	632235	632235	632235	632235	632235	632235	632235
16	BUSHING	631781	631781	631781	631781	631781	631781	631781
17	HOLE PLUG (1/2")	632307	632307	632307	632307	632307	632307	632307
18	HOLE PLUG (3/4")	632308	632308	632308	632308	632308	632308	632308
19	FILTER RETAINER	669053	669053	669053	669053	669053	669053	669053
20	FILTER	668860	668860	668860	668860	668860	668860	668860
21	INSULATION	902991	902991	902991	902991	902991	902991	902991
22	BUSHING, STRAIN RELIEF	631758	631758	631758	631758	631758	631758	631758
23	FUSE, 3 AMP (NOT SHOWN)	632261	632261	632261	632261	632261	632261	632261
24	RIGHT CONTROL DOOR	D00740	D00740	D00740	D00740	D00740	D00740	D00740
25	LEFT CONTROL DOOR, 10kW	D00721	-	-	-	-	-	-
	LEFT CONTROL DOOR, 12-23kW	-	D00722	D00722	D00722	D00722	D00722	D00722
26	BLOWER, 4 SPEED	902993	902993	902993	902993	902993	902993	-
	BLOWER, 4 SPEED (5 TON UNIT)	-	-	-	-	-	-	902985
27	WHEEL, BLOWER (10 x 8)	667037	667037	667037	667037	667037	667037	-
	WHEEL, BLOWER (11 x 8)	-	-	-	-	-	-	667258
28	MOTOR, 1/5 HP 2 SPEED	903076	903076	903076	903076	903076	903076	-
	MOTOR, 1/3 HP 4 SPEED	903075	903075	903075	903075	903075	903075	-
	MOTOR, 3/4 HP 4 SPEED	-	-	-	-	-	-	903096
29	CAPACITOR 7.5 MFD 370V	621434	621434	621434	621434	621434	621434	-
	CAPACITOR 20 MFD 370V	-	-	-	-	-	-	621377
30	STRAP, CAPACITOR	606228	606228	606228	606228	606228	606228	-
	STRAP, CAPACITOR (5 TON UNIT)	-	-	-	-	-	-	249090

Please specify the correct Model No., Serial No. and part number(s) when ordering parts from the nearest authorized dealer or service center.

* = Bottom element in downflow position unit in the picture.

= Top element in downflow position unit in the picture.

† = Uses quantity of two.

