

# WIRING DIAGRAM


## For 80+ and 90+ 2-Stage Variable Speed Model Furnaces

### NOTES:

1. Use copper conductors only.
2. If any original wire supplied with the furnace must be replaced, replace with wiring material having a temp. rating of at least 105° C.

3. Refer to the Installation Instructions provided with the furnace for the appropriate heating/cooling speed settings for your application.
4. Ensure that wires from the blower remain connected to the board thermostat terminals after making the field thermostat connections.

5. Wiring shown for 2-stage operation when using a multistage thermostat.  
Warning - Remove Yellow/Black wire from primary gas valve and utilize for wiring furnace for 2-stage operation.

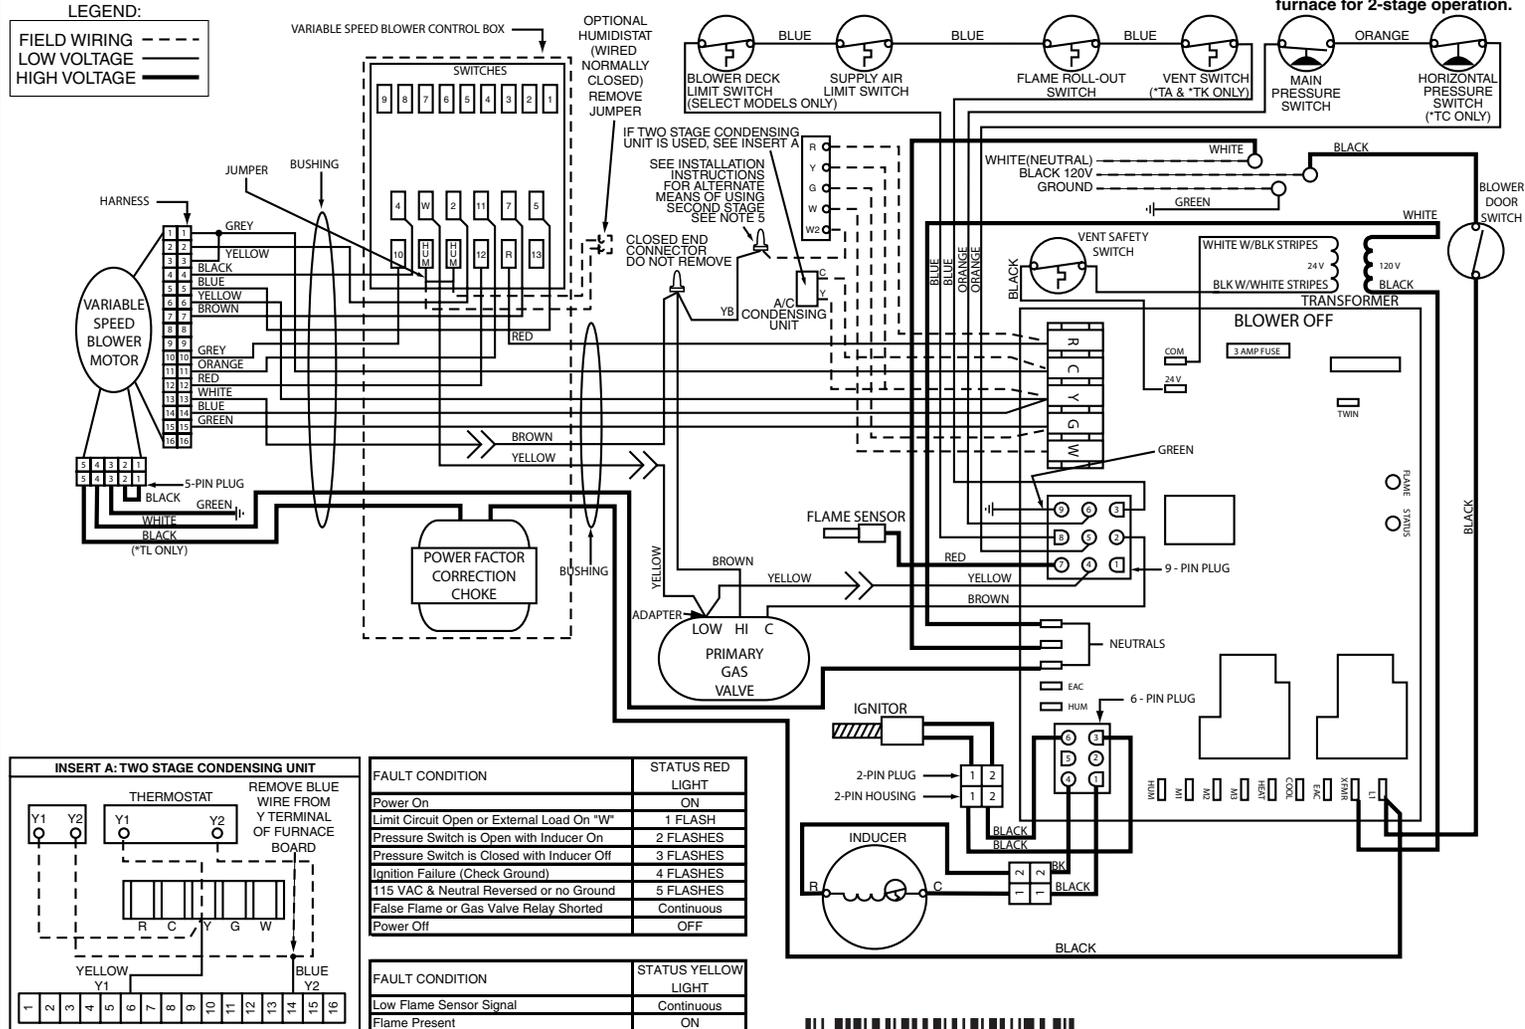

7106400

7106400 (Replaces 7106230)

(11/06)