

WIRING DIAGRAM



Split System Air Conditioner (Outdoor Section)

Three Phase

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Furnace/Air Handler w/factory equipped 24 V control circuit transformers, should be modified/rewired to ONLY use 24V transformer from outdoor section. See installation instructions for typical modifications.
4. For replacement wires use conductors suitable for 105° C
5. For ampacities and overcurrent protection, see unit rating plate.

1. Couper le courant avant de faire letretien.
2. Employez uniquement des conducteurs en cuivre.

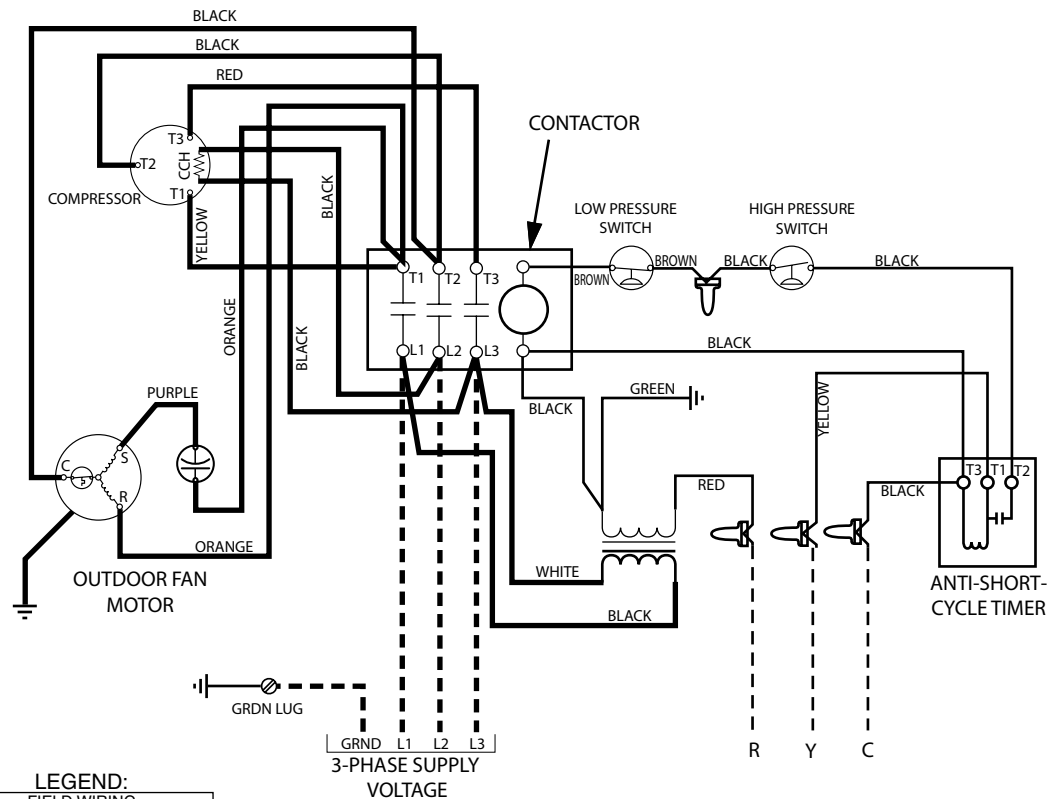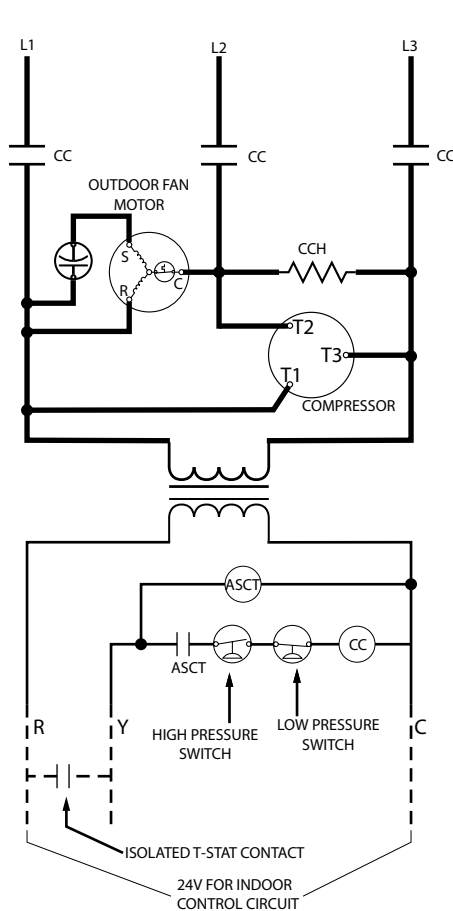

LEGEND:	
FIELD WIRING	
LOW VOLTAGE	----
HIGH VOLTAGE	----
FACTORY WIRING	
LOW VOLTAGE	----
HIGH VOLTAGE	----



7107090