

WIRING DIAGRAM

Convertible Packaged Air Conditioner

460 Volt


Three Phase 60Hz

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C.

4. For supply wire ampacities and overcurrent protection, see unit rating plate.

1. Couper le courant avant de faire le retien.
2. Employez uniquement des conducteurs en cuivre.

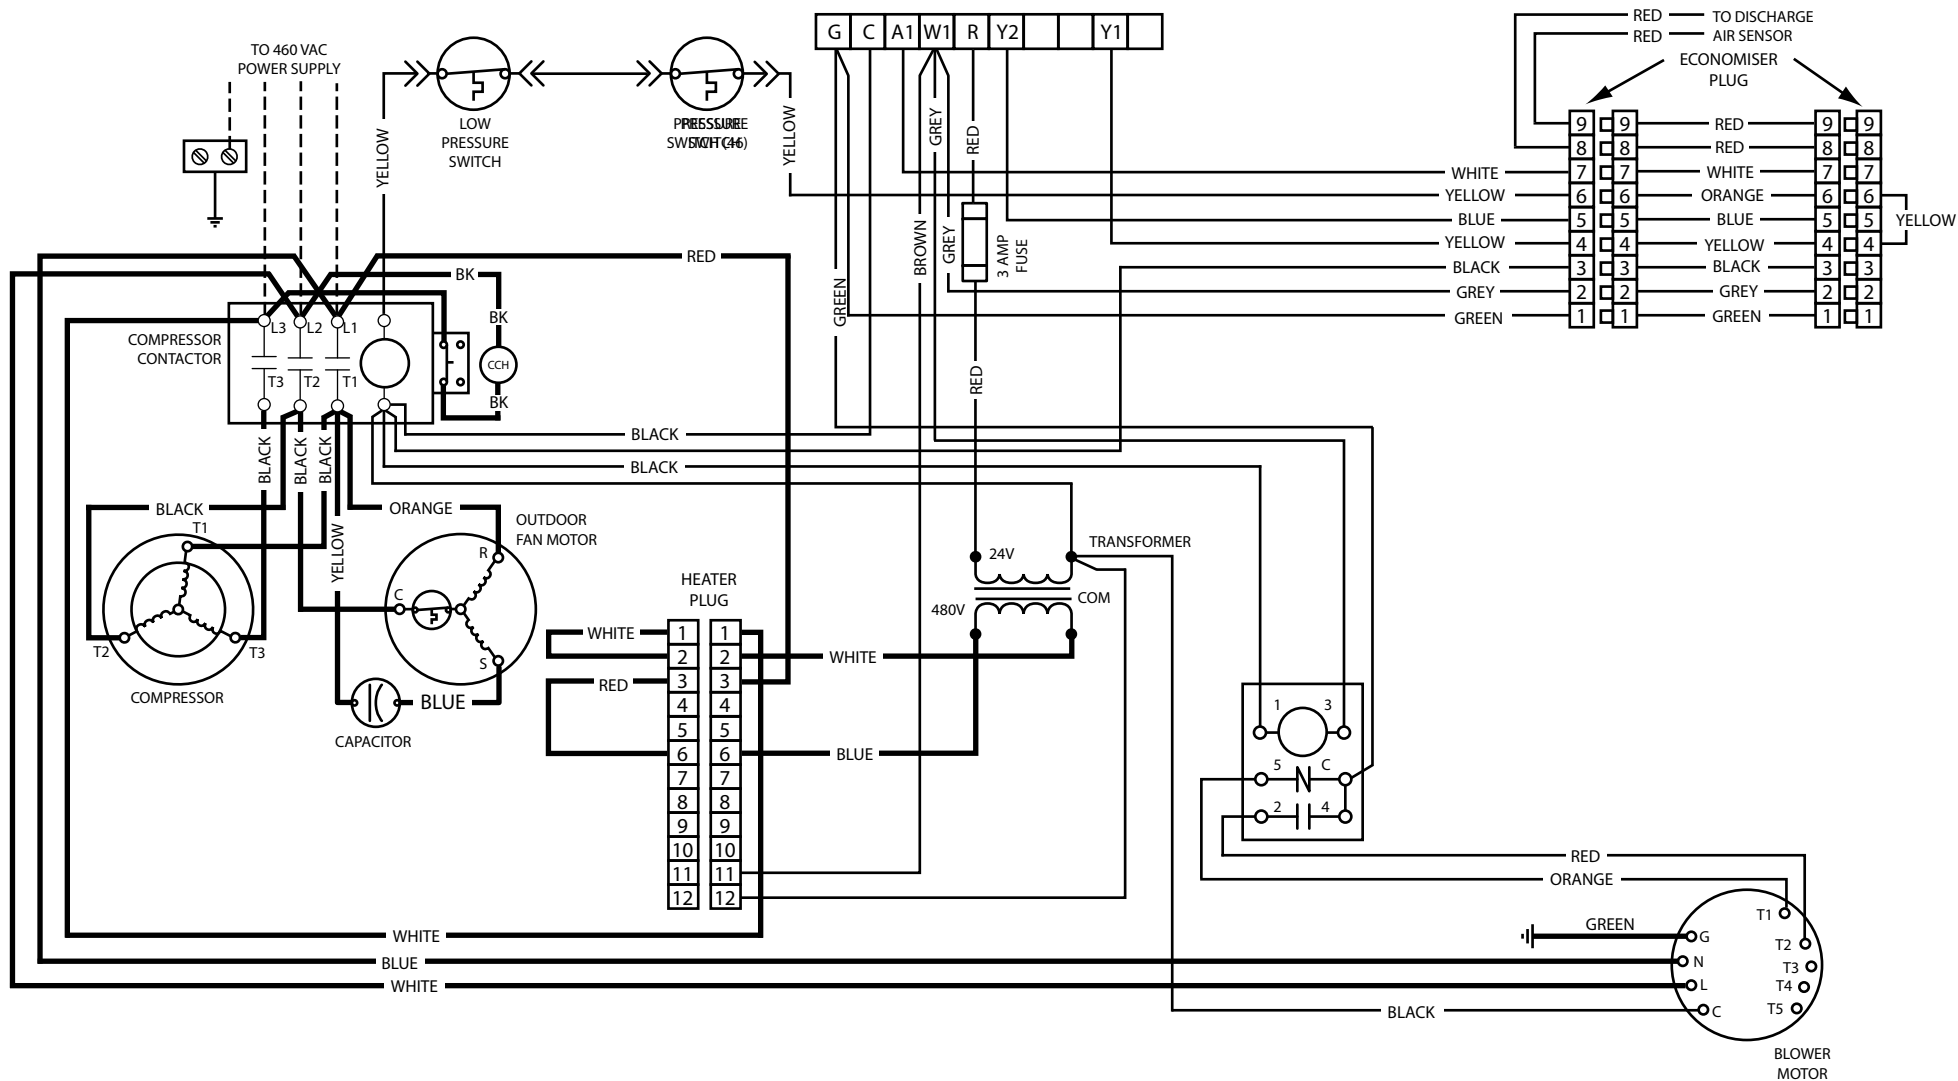

LEGEND:

FIELD WIRING	---
LOW VOLTAGE	—
HIGH VOLTAGE	—



710863A
(Replaces 7108630)

11/14