
WIRING DIAGRAM

For 97+ Modulating Gas Furnaces

Refer to the Installation Istructions provided with the kit for the proper application.

If any of the original wire as supplied with the furnace must be replaced, it must be replaced heating and cooling speeds for your with wiring material having a temperature rating of at least 105 degrees C.

Use copper conductors only.

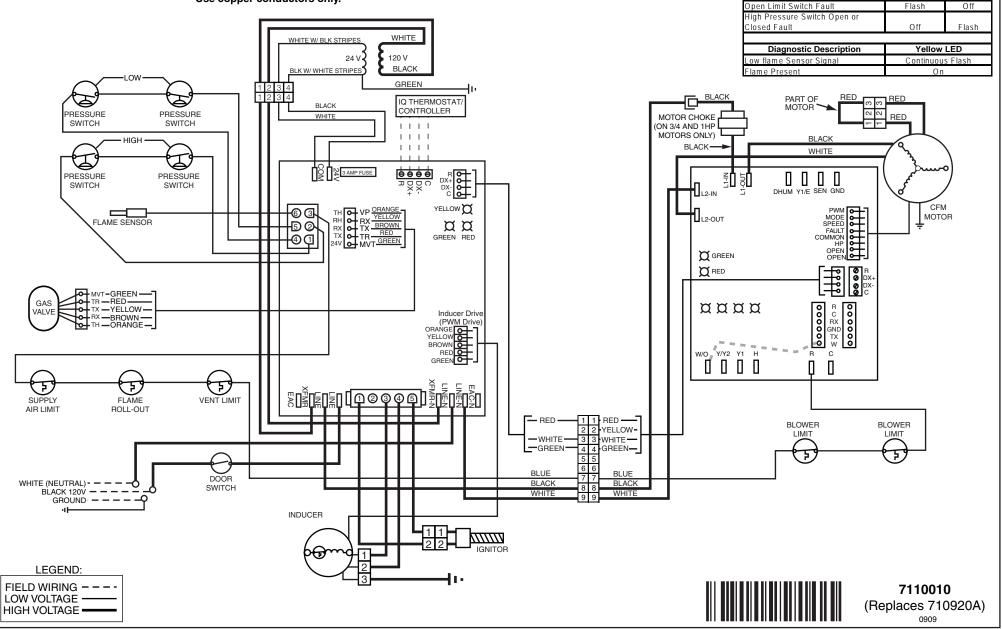

FAULT CONDITIONS

Diagnostic Description

ow Pressure Switch Closed Fault

ow Pressure Switch Open Fault

ontrol Fault (No Power)

1/neutral polarity Fault

Hour Lockout

Normal Operation

Green LED

Off

Flash

Heartbeat

On

Flash

Alternating Flash

Red LED

Off

Flash

On Flash

On