

WIRING DIAGRAM

Packaged Single Stage Gas Heat/Electric Air Conditioner

208/230 Volt


Three Phase 60HZ

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150v to ground.

4. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C.
5. For supply wire ampacities and overcurrent protection, see unit rating plate.

1. Couper le courant avant de faire le retien.
2. Employez uniquement des conducteurs en cuivre.
9. Ne convient pas aux installations des plus de 150V a la terre.

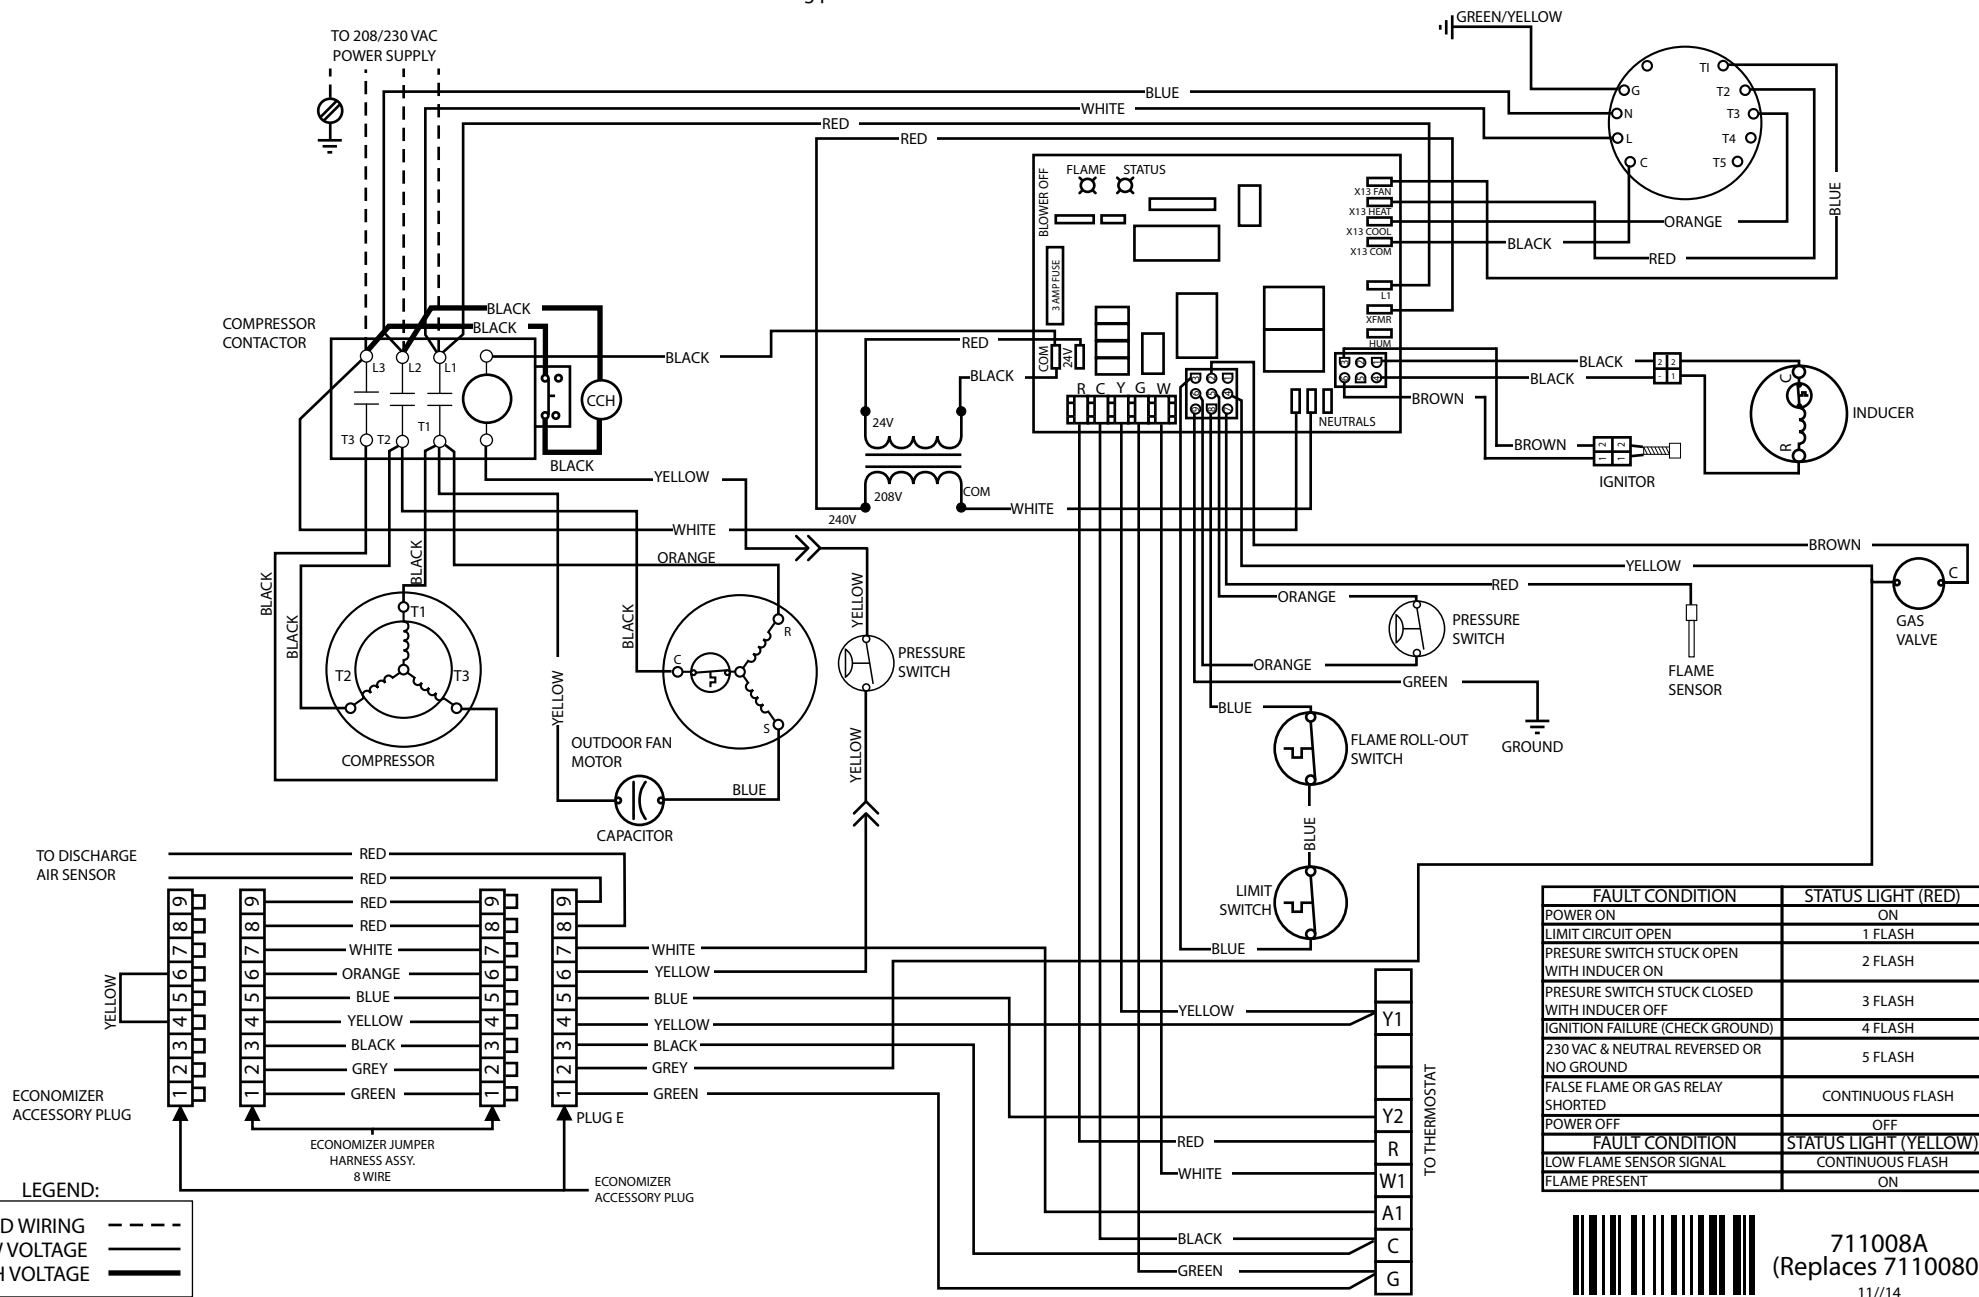

711008A
(Replaces 7110080)

11/14