

60HZ/SINGLE PHASE

5. Unit requires a two stage cooling/heating thermostat which uses "G" to call for blower.

- BLACK WIRE IS HIGH SPEED COOLING/HEATING
ORANGE WIRE IS LOW SPEED COOLING/HEATING
RED WIRE IS AUX. HEATING SPEED (ELECTRIC HEAT)
REFER TO INSTALLATION INSTRUCTIONS FOR CFM DATA



0110