

WIRING DIAGRAM

P6SP Series 6-10T

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C and 600V.

208-230/460 Volt

4. For supply wire ampacities and overcurrent protection, see unit rating label.
5. On "C" Series Models only. For 208V operation remove wire from 230V tap and place on 208V tap.

Three Phase 60 Hz.

1. Couper le courant avant de faire le retien.
2. Employez uniquement des conducteurs en cuivre.

