

WIRING DIAGRAM

Packaged Air Conditioner - Single Phase

208/240V


NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 V to ground.
4. For replacement wires use conductors suitable for 105° C.
5. See installation instructions for blower motor airflow settings.

1. Couper le courant avant de faire l'entretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 V à la terre.

FACTORY SET BLOWER SPEED

MODEL	WIRE COLOR	MOTOR SPEED
X42	RED	LOW
X48	BLUE	MEDIUM

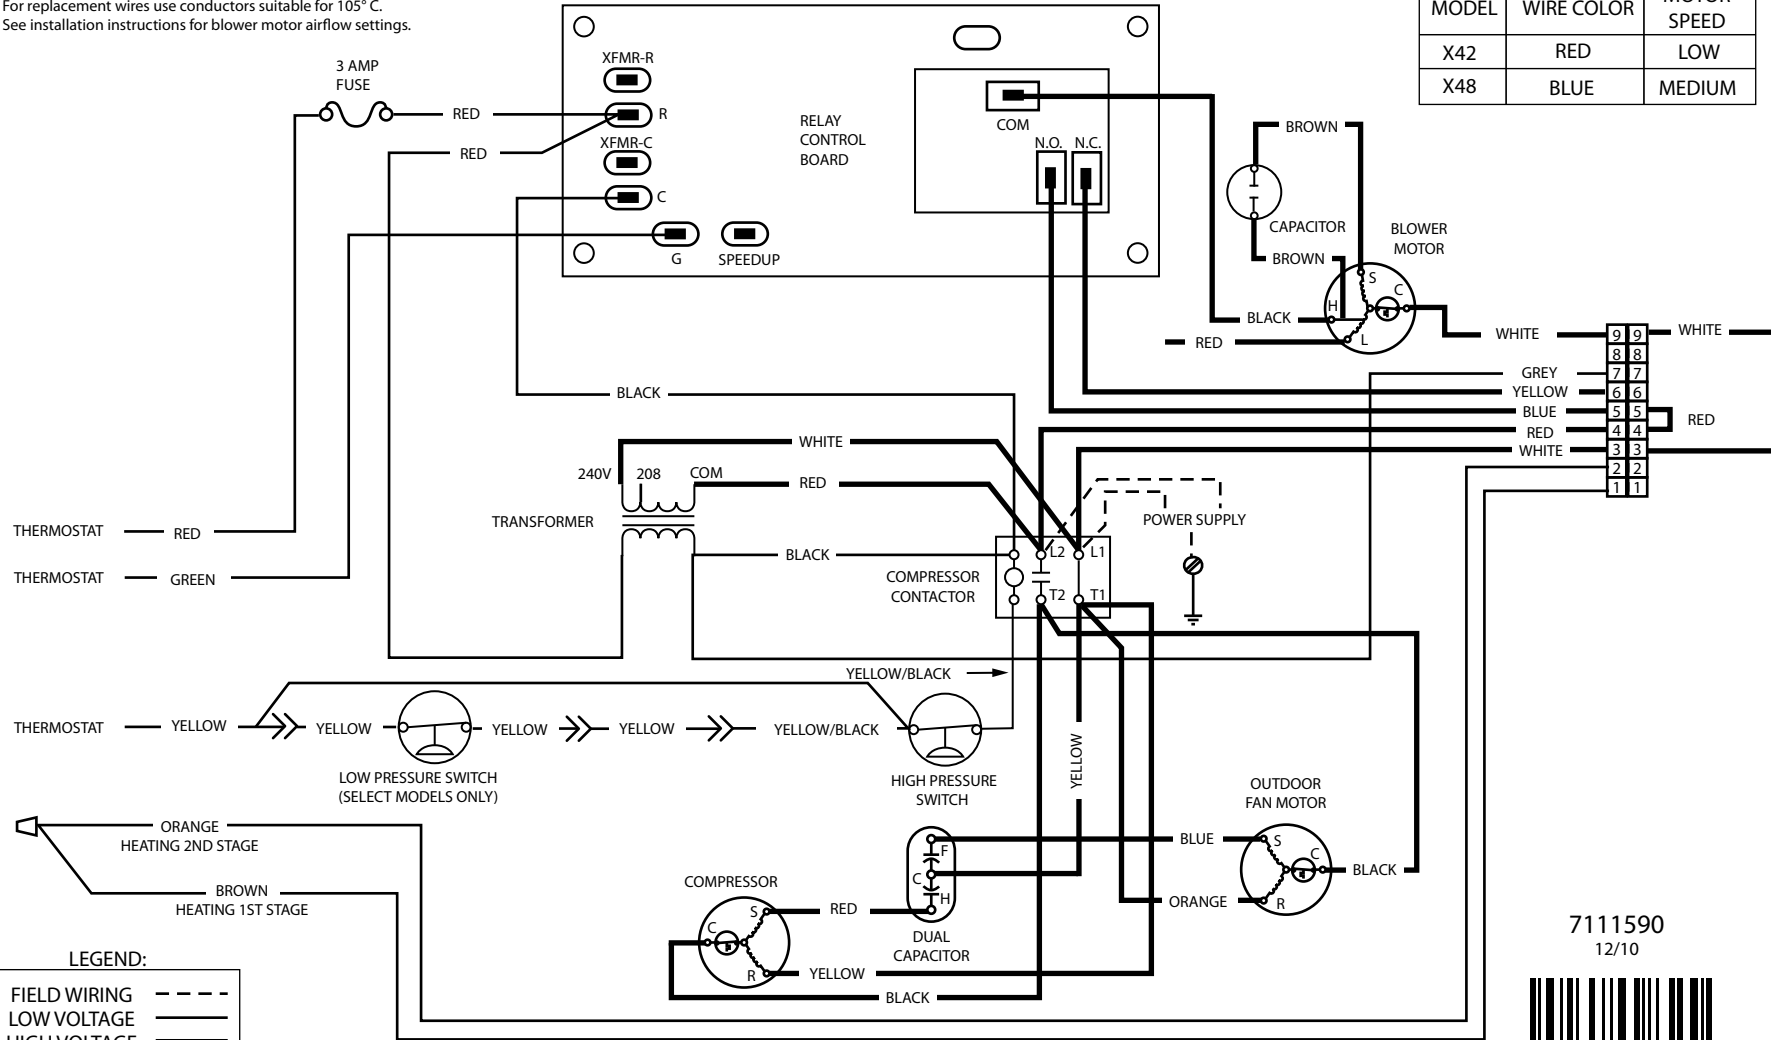

7111590
12/10

