

WIRING DIAGRAM


Q6SP-(090/120)(C/D) Series

208-230/460 Volt

Three Phase / 60 Hz.

NOTES:

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. For supply wire ampacities and overcurrent protection, see unit rating label. 2. For "C" Series Models only. For 208 VAC operation remove wire at 230V tap and place on 208V tap. 3. Wires attached to normally open contacts of auxillary switch. | <ol style="list-style-type: none"> 4. Wires attached to normally closed contacts of auxillary switch. 5. Disconnect all power before servicing. 6. For supply connections, use copper conductors only. 7. If any of the original wire as supplied with the unit must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C. |
|---|--|

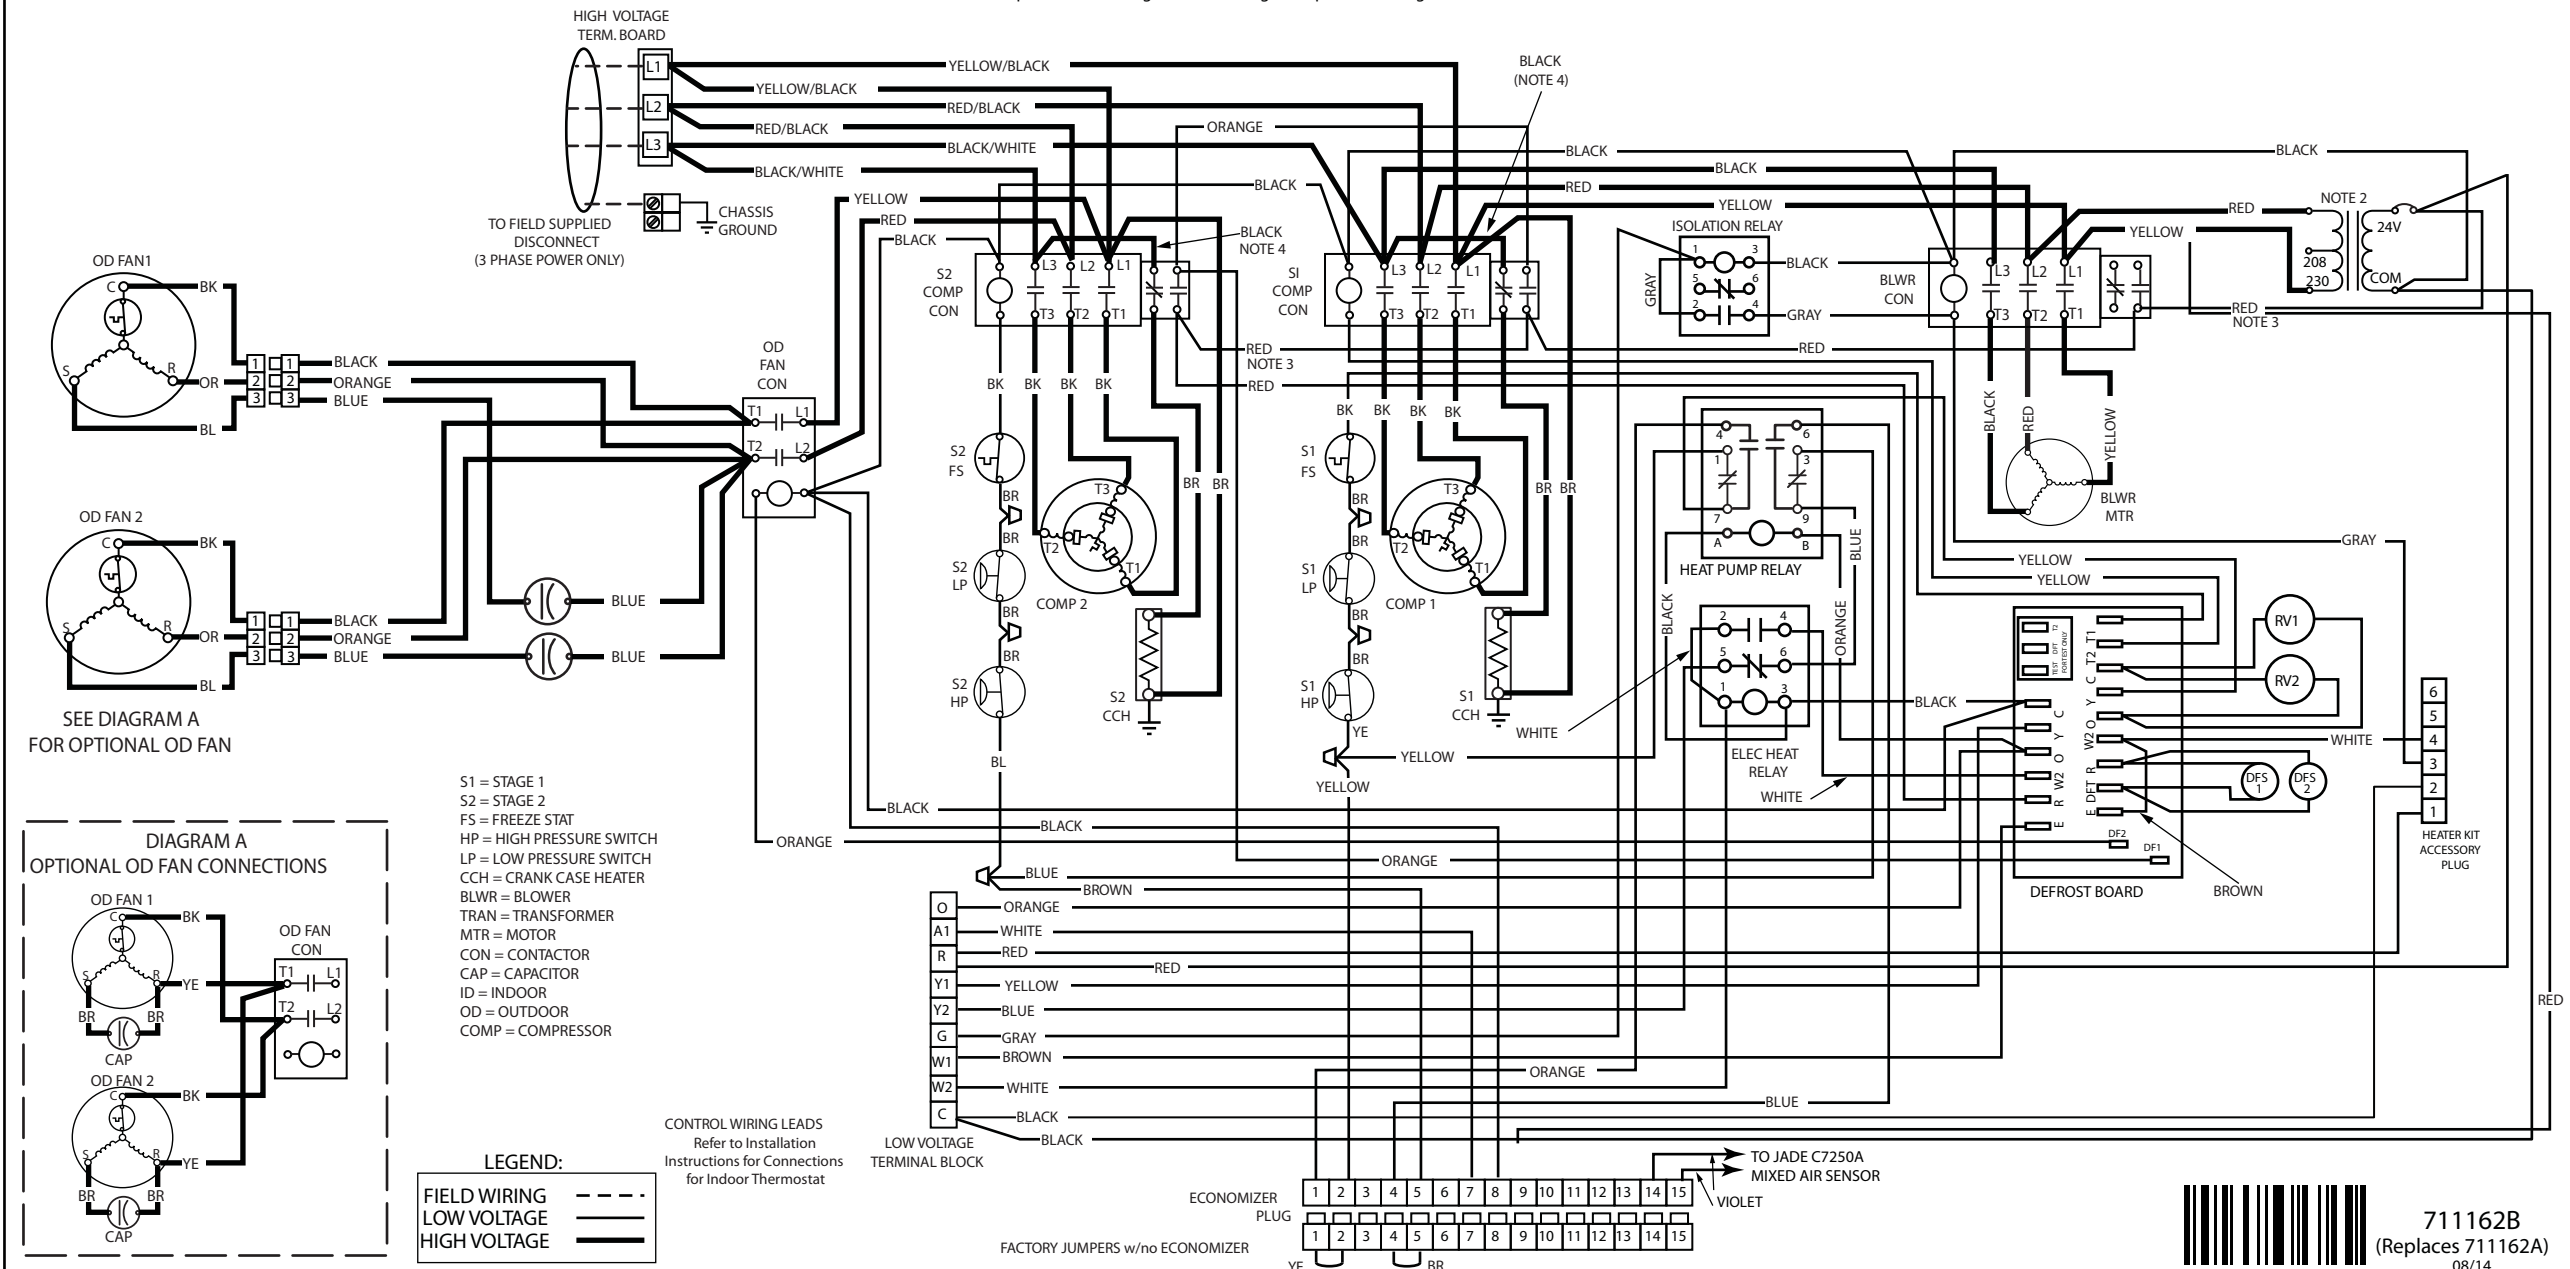

711162B
(Replaces 711162A)
08/14