


Split System Air Conditioner (Outdoor Section)

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 volts to ground.
4. For replacement wires use conductors suitable for 105 deg C.
5. For ampacities and overcurrent protection, see unit rating plate.
6. Connect to 24 vac/40ca/class 2 circuit. See furnace/airhandler installation instructions for control circuit and optional relay/transformer kits.

1. Couper le courant avant de faire l'entretien.
2. Employer uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt a la terre.


Status LED	Status LED Description	Lockout Level	Lockout Indication
Normal Run; Solid Yellow	Normal Operation, no trip	N/A	N/A
Code 1; Yellow Flash 1	Long Run Time. Compressor running extremely long run cycle. (disabled in HP mode.)	N/A	N/A
Code 2; Yellow Flash 2	Compressor Pressure Trip. Disch. or suct. pressure out of limits or compressor overloaded.	4 cons, 10x total	Red; Flash 2
Code 3; Yellow Flash 3	Short Cycling. Compressor is running only briefly.	4 cons, 10x total	Red; Flash 3
Code 4; Yellow Flash 4	Locked Rotor.	10 consecutive	Red; Flash 4
Code 5; Yellow Flash 5	Compressor Moderate Run. Compressor runs >15min, then trips >7min.	4 cons, 10x total	Red; Flash 5
Code 9; Red Flash 19	Over Current Protection. PROT terminal has >2A input for more than 40ms	1 Occurrence	Red; Flash 9
Trip; Solid Red	Demand but compressor is not running	N/A	N/A

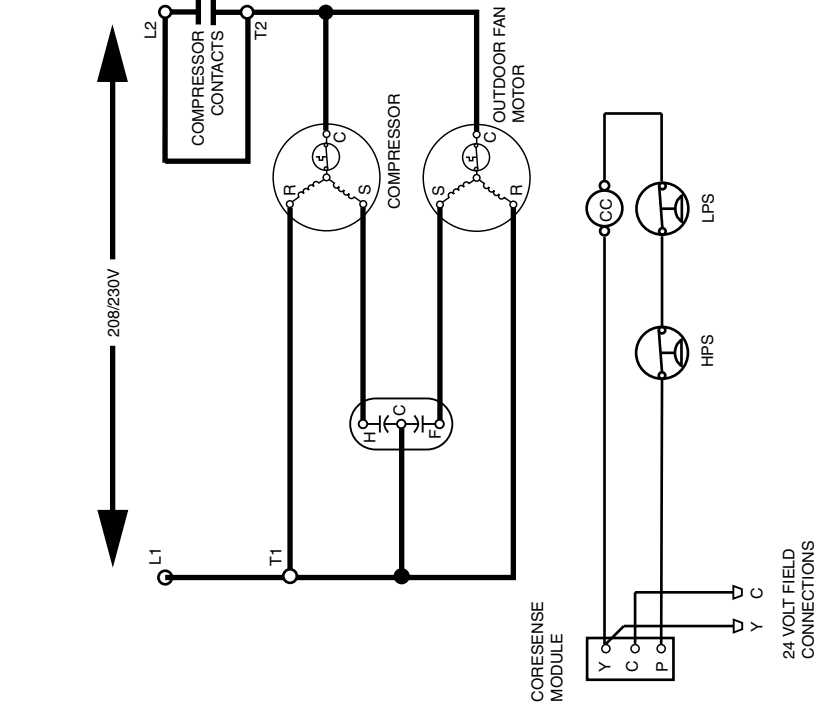

CC - Contactor Coil
LPS - Low Pressure Switch
HPS - High Pressure Switch

LEGEND:

FIELD WIRING - - - -
LOW VOLTAGE ————
HIGH VOLTAGE —————

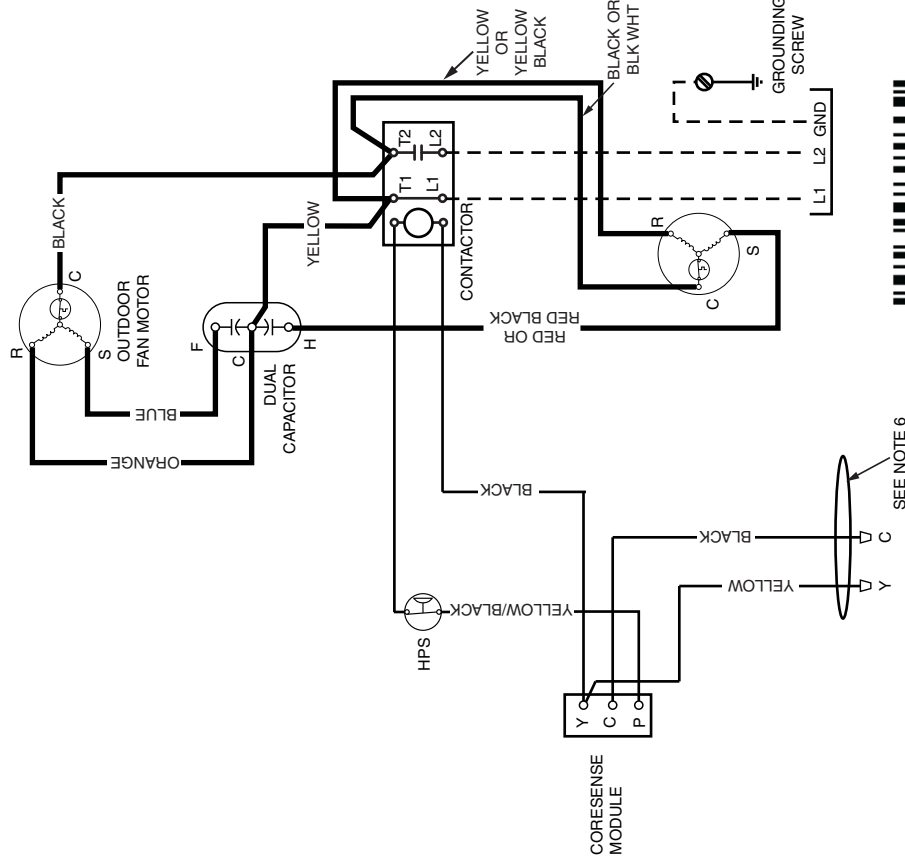

7112040

01/13