

WIRING DIAGRAM

Split System Heat Pump (Outdoor Section)

Single Phase


NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 volts to ground.
4. For replacement wires use conductors suitable for 105° C.
5. For ampacities and overcurrent protection, see unit rating plate.
6. Connect to 24 vac/40va/class 2 circuit. See furnace/air handler installation instructions for control circuit and optional relay/transformer kits.

1. Couper le courant avant de faire letretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 volt a la terre.

LEGEND:

FIELD WIRING	---
LOW VOLTAGE	—
HIGH VOLTAGE	—

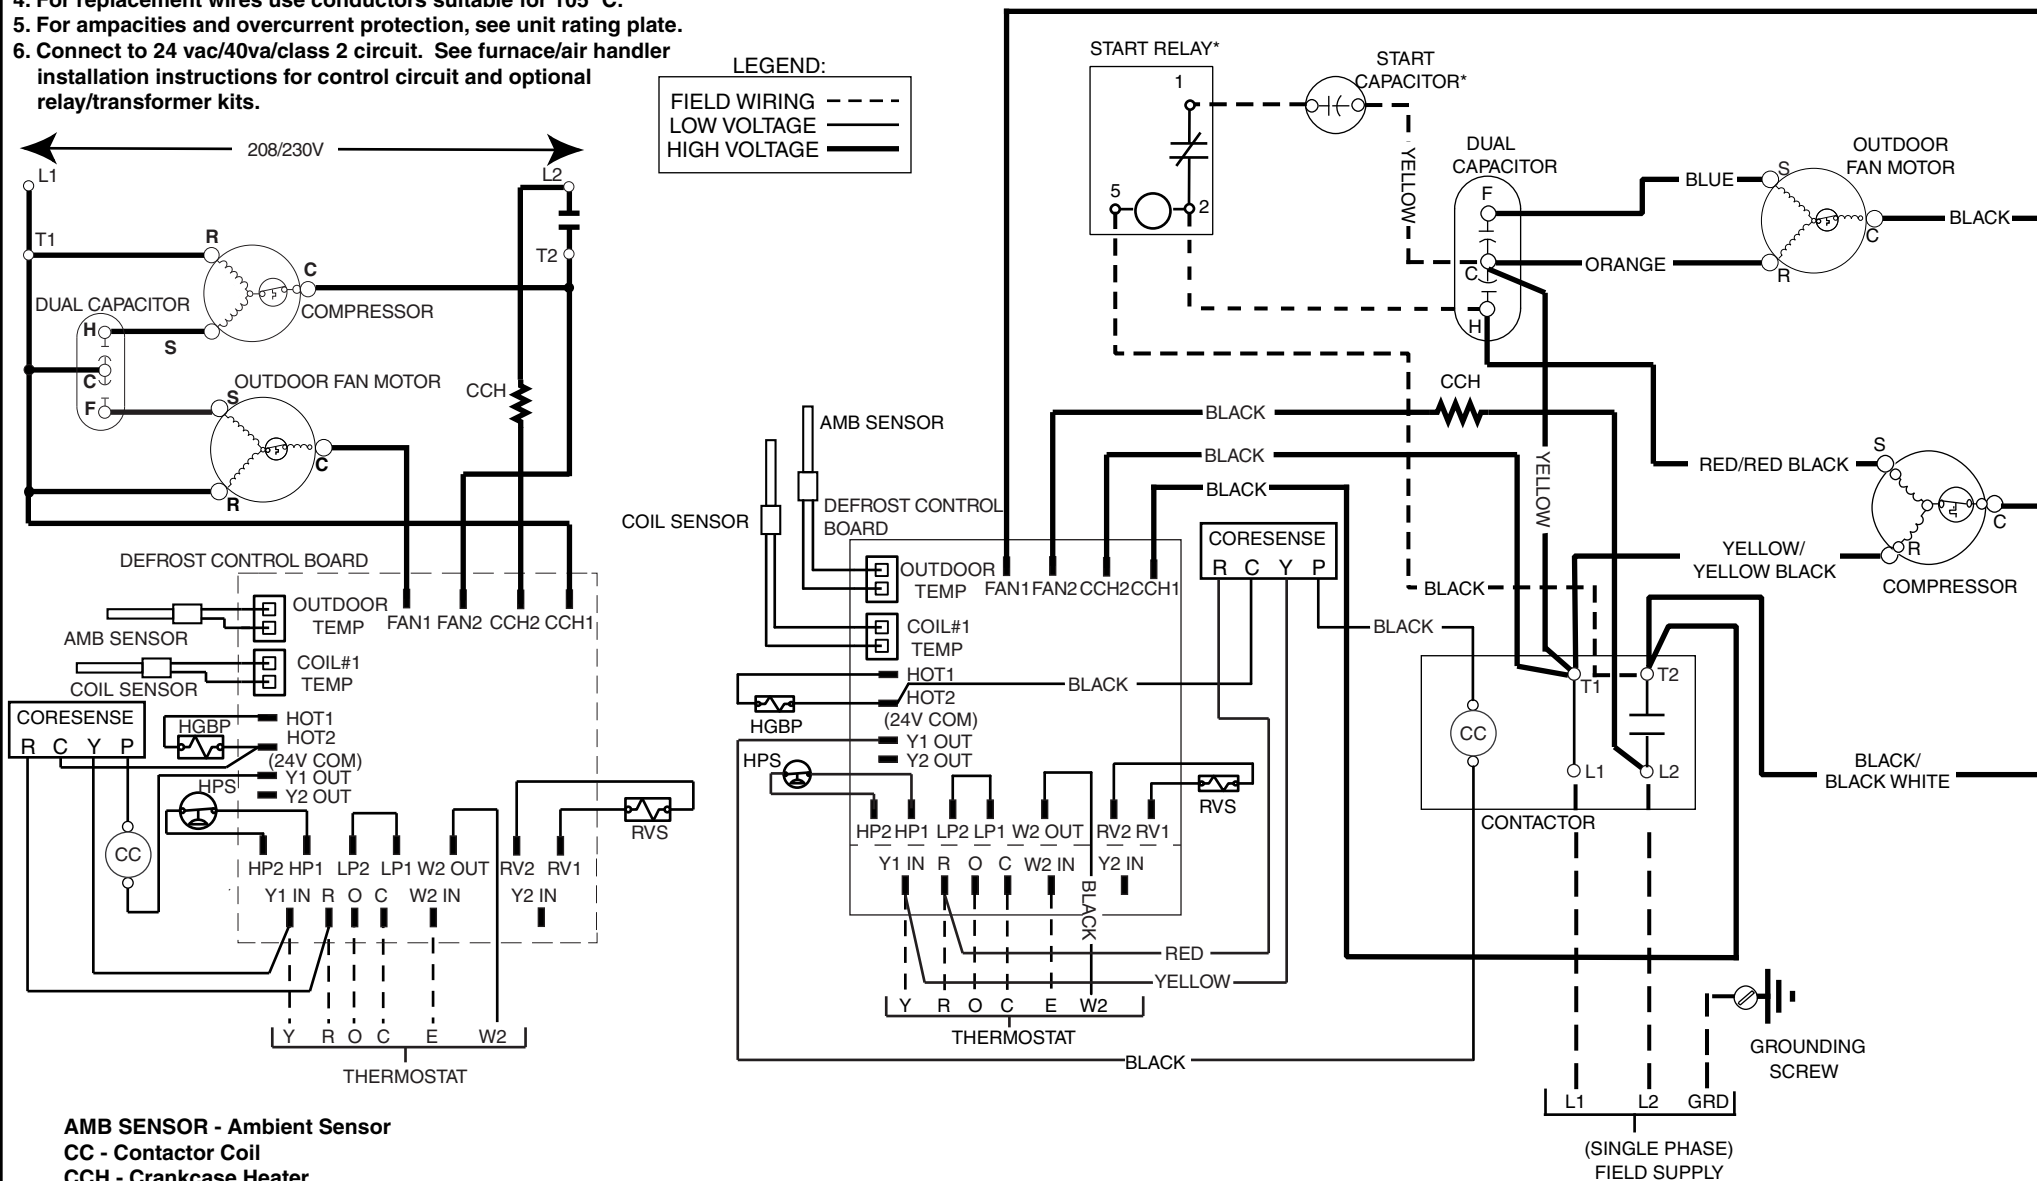

AMB SENSOR - Ambient Sensor
 CC - Contactor Coil
 CCH - Crankcase Heater
 HPS - High Pressure Switch
 HGBP - Hot Gas By Pass Valve
 RVS - Reversing Valve Solenoid
 * HARD START KIT (OPTIONAL)



7113410

03/13