

REPLACEMENT PARTS LIST

VG7 Series

Two Stage Condensing Gas Furnaces
With Fixed Speed & Variable Speed Blowers

CONDENSING GAS FURNACES

95.1% AFUE



VG7TC
Upflow / Horizontal Furnace



VG7TL
Downflow Furnace

96.0% AFUE



VG7TE
Upflow Furnace



VG7TN
Downflow Furnace

95.1% AFUE

VG7TC Upflow / Horizontal, Variable Speed - Replacement Parts List	2
VG7TL Downflow, Variable Speed - Replacement Parts List.....	3
VG7TC Upflow / Horizontal Component Location	4
VG7TL Downflow Component Location	5

96% AFUE

VG7TE-1 Upflow, Fixed Speed - Replacement Parts List	6
VG7TE-1 Upflow, Variable Speed - Replacement Parts List.....	7
VG7TN Downflow, Fixed Speed - Replacement Parts List	8
VG7TE Upflow Only - Component Location	9
VG7TN Downflow - Component Location.....	10

95.1% AFUE**VG7TC UPFLOW / HORIZONTAL, VARIABLE SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-VB	080-VC	100-VC	120-VD
BLOWER ASSEMBLY	904877	904878	904878	904879
BLOWER CONTROL BOARD (FOR UNITS PRODUCED PRIOR TO 8/31/2012)	920918	920918	920918	920918
BLOWER CONTROL BOARD (FOR UNITS PRODUCED ON OR AFTER 9/1/2012)	922016	922016	922016	922016
BLOWER HOUSING	297207R	297209R	297209R	297209R
BLOWER LIMIT SWITCH	626581R	626581R	626581R	626581R
BLOWER MOTOR	921650	921651	921651	921652
BLOWER MOTOR CHOKE	Not Used	622340R	622340R	622340R
BLOWER WHEEL	667374R	667280R	667280R	667280R
BURNER ASSEMBLY	904829	904830	904831	904832
BURNER TUBE MANIFOLD	664473R	664243R	664244R	664245R
DOOR SET	921919	921920	921920	921921
DOOR SWITCH	632693R	632693R	632693R	632693R
DRAIN TUBE (HARD "J") (NOT SHOWN)	663706R	663706R	663706R	663706R
DRAIN TUBE (SOFT, "J" 30") (NOT SHOWN)	663707R	663707R	663707R	663707R
DRAIN TUBE (SOFT, 23") (NOT SHOWN))	664434R	664434R	664434R	664434R
FINISH FLANGE	664633R	664633R	664633R	664633R
FLAME SENSOR	632484R	632484R	632484R	632484R
FURNACE CONTROL BOARD	920916	920916	920916	920916
FUSE	632261R	632261R	632261R	632261R
GAS VALVE	624652R	624652R	624652R	624652R
HEAT EXCHANGER	904792	904793	904794	904795
HIGH TEMP HOSE (NOT SHOWN)	263967R	263967R	263967R	263967R
IGNITOR ASSEMBLY (NITRIDE)	1017743S	1017743S	1017743S	1017743S
IGNITOR BRACKET	299261R	299261R	299261R	299261R
INDUCER LIMIT SWITCH	626599R	626599R	626599R	626599R
INDUCER MOTOR	904799	904799	904799	904799
INDUCER ORIFICE	669719R	669713R	669716R	Not Used
INSHOT BURNER	661128R	661128R	661128R	661128R
IN-LINE DRAIN ASSEMBLY	664435R	664435R	664435R	664435R
MAIN AIR LIMIT SWITCH	626566R	626567R	626561R	626561R
MOTOR MOUNT KIT	904907	904907	904907	904951
ORIFICE (NATURAL GAS)	661045R	661045R	661045R	661045R
OUTLET HEADER BOX	904802	904803	904803	904804
PRESSURE SWITCHES (CONDENSATE)	632550R	632547R	632547R	632554R
PRESSURE SWITCHES (INDUCER)	632515R	632546R	632555R	632614R
ROLL-OUT LIMIT SWITCH	626610R	626610R	626610R	626609R
SET OF WIRES (NOT SHOWN)	M0036015R	M0036017R	M0036017R	M0036017R
TOP PANEL	2A9512R	2A9513R	2A9513R	2A9514R
TRANSFORMER	622341R	622341R	622341R	622341R
TUBE (SOFT, 5.5") (NOT SHOWN)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

 
FOR COMPONENT LOCATIONS, SEE PAGE 4.

DESCRIPTION	060-VB	080-VC	100-VC	120-VD
BLOWER ASSEMBLY	904877	904878	904878	904879
BLOWER CONTROL BOARD (FOR UNITS PRODUCED PRIOR TO 8/31/2012)	920918	920918	920918	920918
BLOWER CONTROL BOARD (FOR UNITS PRODUCED ON OR AFTER 9/1/2012)	922016	922016	922016	922016
BLOWER HOUSING	297207R	297209R	297209R	297209R
BLOWER LIMIT SWITCH	626581R	626581R	626581R	626581R
BLOWER MOTOR	921650	921651	921651	921652
BLOWER MOTOR CHOKE	Not Used	622340R	622340R	622340R
BLOWER WHEEL	667374R	667280R	667280R	667280R
BURNER ASSEMBLY	904829	904830	904831	904832
BURNER TUBE MANIFOLD	664611R	664243R	664244R	664245R
DRAIN TUBE (HARD "J") (NOT SHOWN)	663706R	663706R	663706R	663706R
DRAIN TUBE (SOFT, "J" 30") (NOT SHOWN)	663707R	663707R	663707R	663707R
DRAIN TUBE (SOFT, 23") (NOT SHOWN))	664434R	664434R	664434R	664434R
DOOR SET	921919	921920	921920	921921
DOOR SWITCH	632693R	632693R	632693R	632693R
FINISH FLANGE	664633R	664633R	664633R	664633R
FLAME SENSOR	632484R	632484R	632484R	632484R
FURNACE CONTROL BOARD	920916	920916	920916	920916
FUSE	632261R	632261R	632261R	632261R
GAS VALVE	624652R	624652R	624652R	624652R
HEAT EXCHANGER	904792	904793	904794	904795
HIGH TEMP HOSE (NOT SHOWN)	263967R	263967R	263967R	263967R
IGNITOR ASSEMBLY (NITRIDE)	1017743S	1017743S	1017743S	1017743S
IGNITOR BRACKET	299261R	299261R	299261R	299261R
INDUCER LIMIT SWITCH	626599R	626599R	626599R	626599R
INDUCER MOTOR	904799	904799	904799	904799
INDUCER ORIFICE	669718R	669720R	669735R	669747R
INSHOT BURNER	661128R	661128R	661128R	661128R
IN-LINE DRAIN ASSEMBLY	664435R	664435R	664435R	664435R
MAIN AIR LIMIT SWITCH	626565R	626561R	626562R	626561R
MOTOR MOUNT KIT	904907	904907	904907	904951
ORIFICE (NATURAL GAS)	661045R	661045R	661045R	661045R
OUTLET HEADER BOX	904802	904803	904803	904804
PRESSURE SWITCHES (INDUCER)	632523R	632546R	632555R	632523R
ROLL-OUT LIMIT SWITCH	626610R	626610R	626610R	626610R
SET OF WIRES (NOT SHOWN)	M0036021R	M0036022R	M0036022R	M0036022R
TOP PANEL	2B3562R	2B3563R	2B3563R	2B3564R
TRANSFORMER	622341R	622341R	622341R	622341R
TUBE (SOFT, 5.5") (NOT SHOWN)	663727R	663727R	663727R	663727R


Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 5.

VG7TC UPFLOW / HORIZONTAL COMPONENT LOCATION

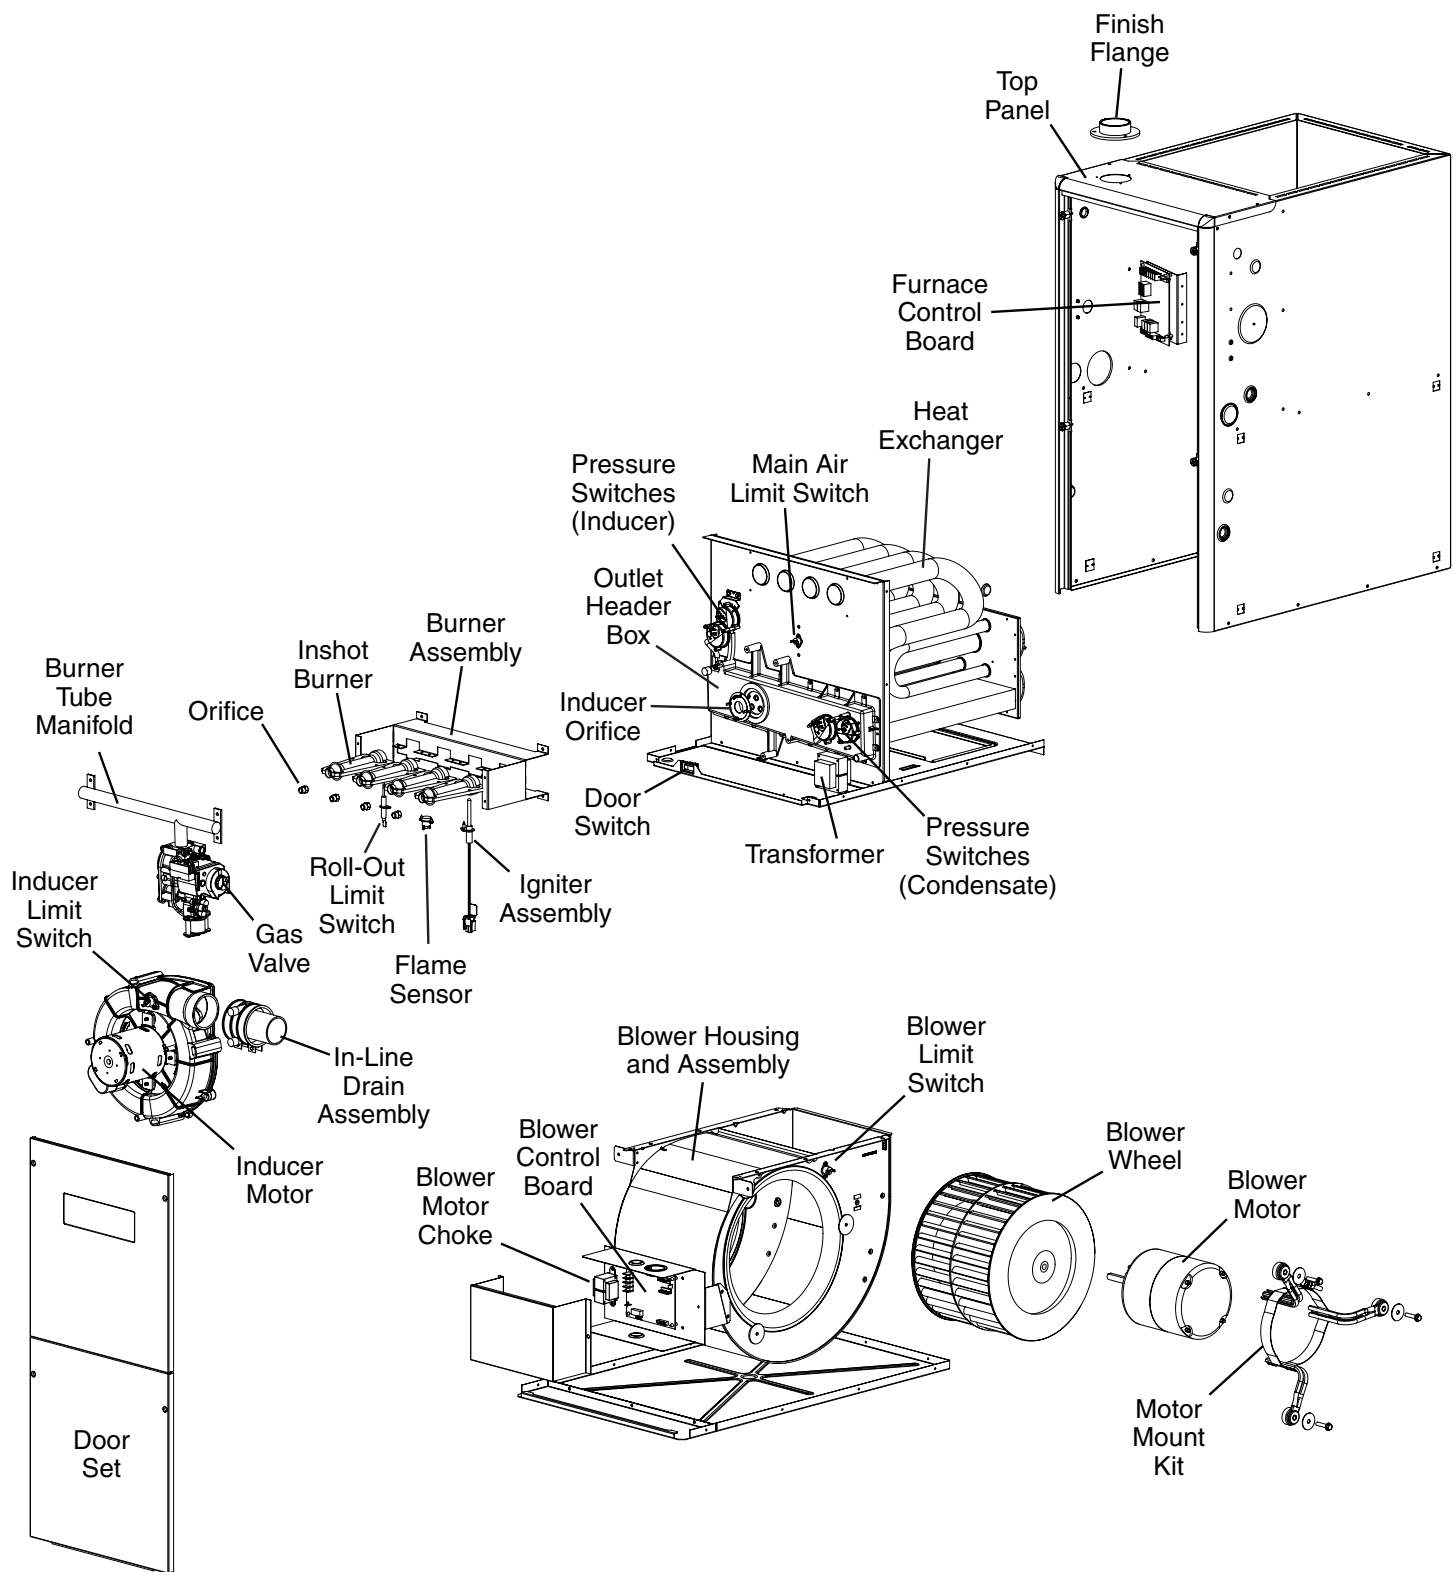

VG7TL DOWNFLOW COMPONENT LOCATION

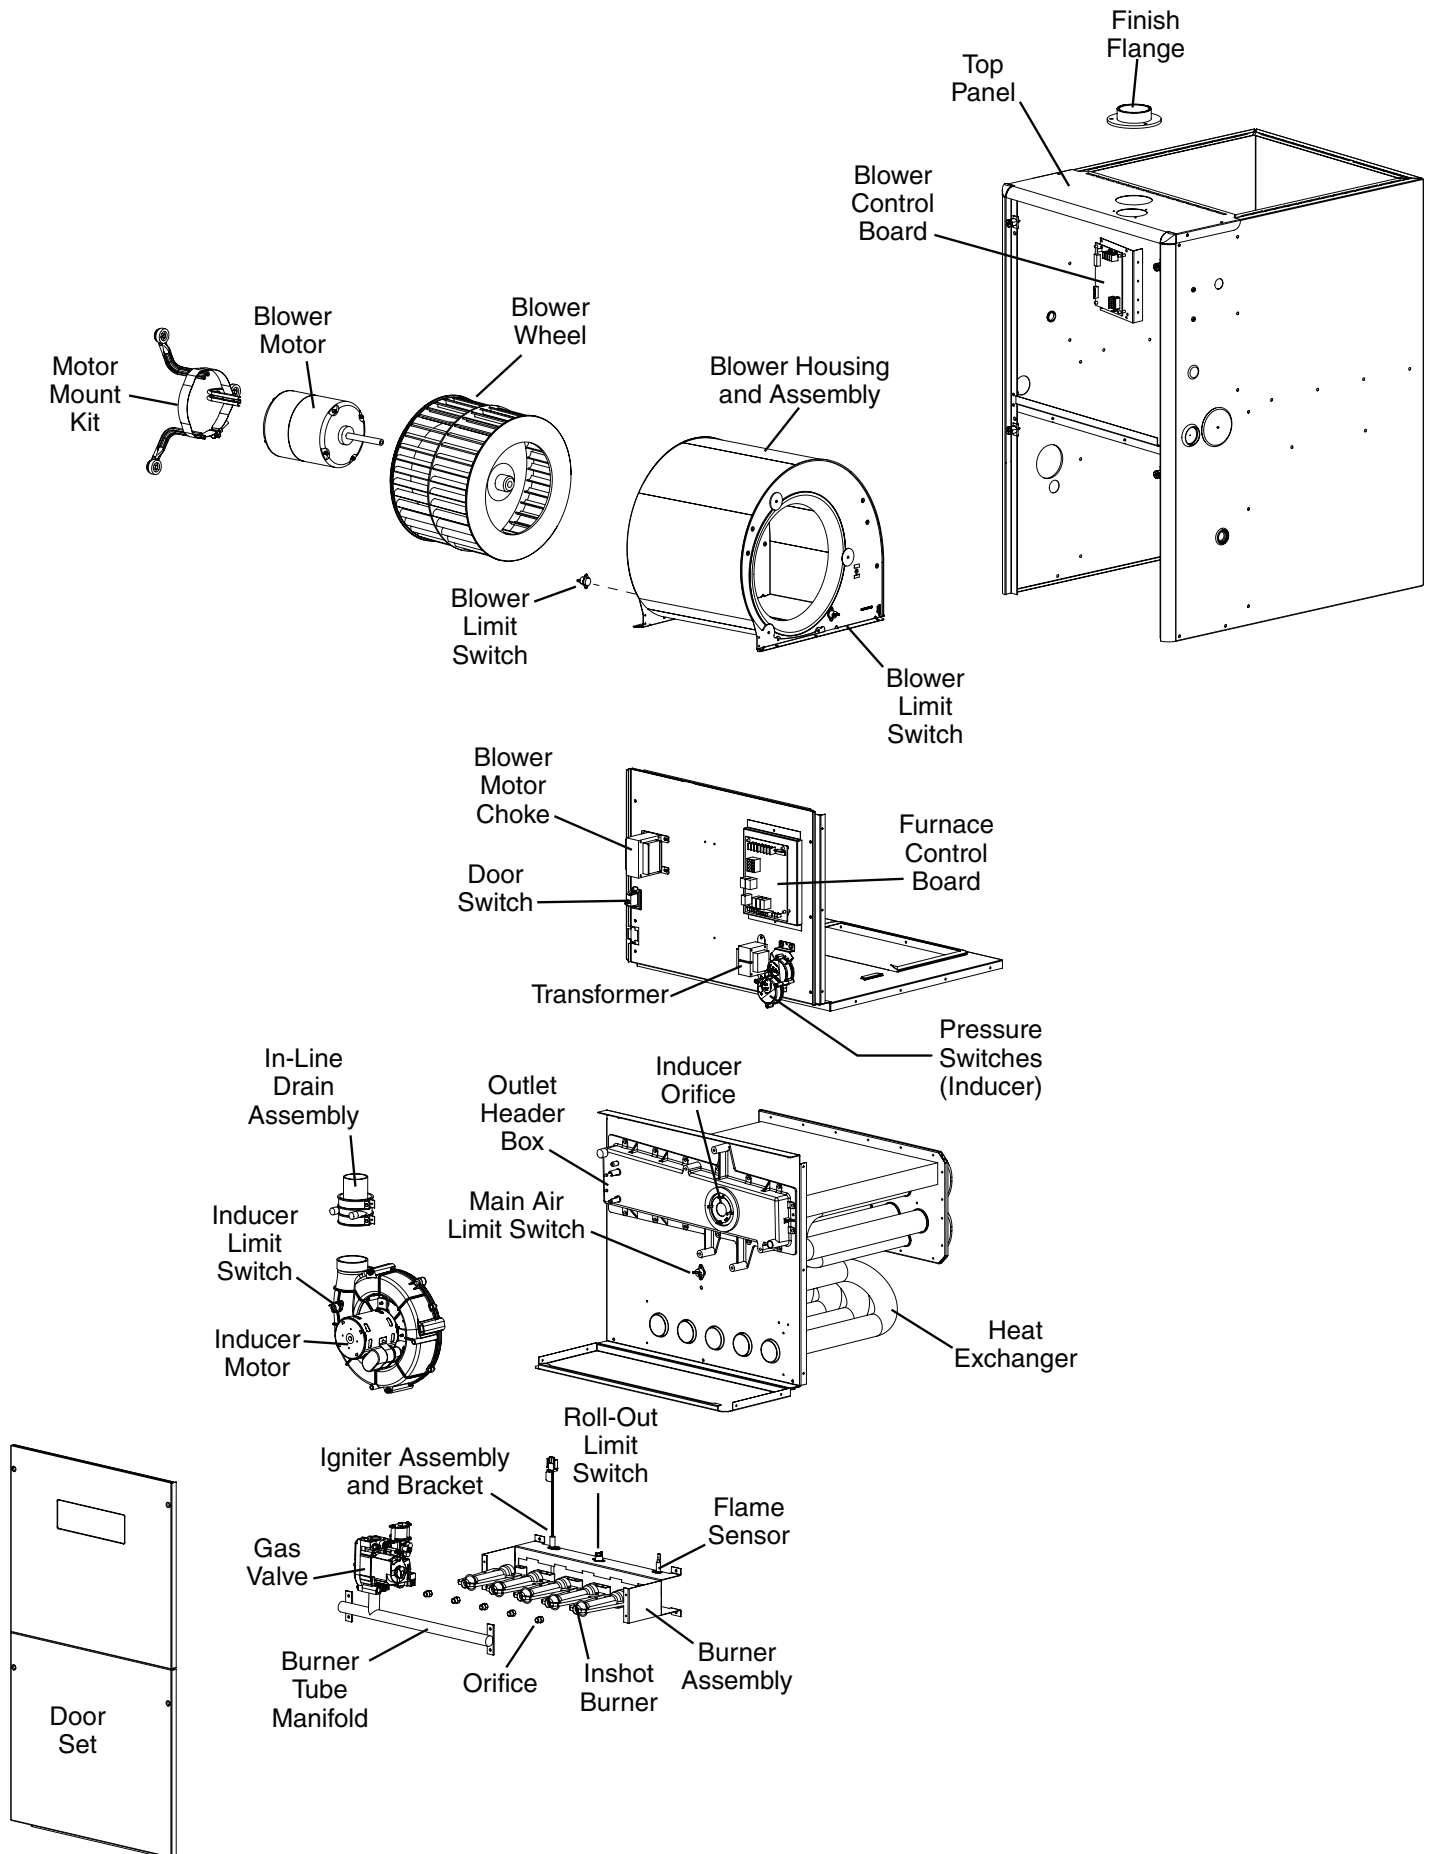 

DESCRIPTION	060-24B-1	080-35C-1	100-35C-1	115-45D-1
BLOWER ASSEMBLY	904873	904874	904874	904875
BLOWER CONTROL BOARD	920920	920920	920920	920920
BLOWER HOUSING	297207R	297209R	297209R	297209R
BLOWER LIMIT SWITCH	626611R	626611R	626611R	626611R
BLOWER MOTOR	921650	921651	921651	921652
BLOWER MOTOR CHOKE	NOT USED	622340R	622340R	622340R
BLOWER WHEEL	667374R	667280R	667280R	667280R
BURNER ASSEMBLY	904829	904830	904831	904832
BURNER TUBE MANIFOLD	664473R	664243R	664244R	664245R
DOOR SET	921919	921920	921920	921921
DOOR SWITCH	632693R	632693R	632693R	632693R
DRAIN TUBE (HARD, "J" 30") (NOT SHOWN)	663706R	663706R	663706R	663706R
DRAIN TUBE (SOFT, "J" 30") (NOT SHOWN)	663707R	663707R	663707R	663707R
DRAIN TUBE (SOFT, 23") (NOT SHOWN)	664434R	664434R	664434R	664434R
FINISH FLANGE	664633R	664633R	664633R	664633R
FLAME SENSOR	632484R	632484R	632484R	632484R
FURNACE CONTROL BOARD	920916	920916	920916	920916
FUSE	632261R	632261R	632261R	632261R
GAS VALVE	624787R	624787R	624787R	624787R
HARNESS INDUCER-RESISTOR (NOT SHOWN)	1014826R	1014827R	1014827R	1016418R
HEAT EXCHANGER	904792	904793	904794	904795
HIGH TEMP HOSE (NOT SHOWN)	263967R	263967R	263967R	263967R
IGNITOR ASSEMBLY (NITRIDE)	1017743S	1017743S	1017743S	1017743S
IGNITOR BRACKET (NOT SHOWN)	299261R	299261R	299261R	299261R
INDUCER LIMIT SWITCH	626599R	626599R	626599R	626599R
INDUCER MOTOR	1003442	1003442	1003442	1003442
INDUCER ORIFICE	669719R	669713R	669716R	1014812R
INSHOT BURNER	661128R	661128R	661128R	661128R
IN-LINE DRAIN ASSEMBLY	664435R	664435R	664435R	664435R
MAIN AIR LIMIT SWITCH	626598R	626615R	626612R	626612R
MOTOR MOUNT KIT	904907	904907	904907	904951
ORIFICE (NATURAL GAS)	661045R	661045R	661045R	661046R
OUTLET HEADER BOX	904802	904803	904803	904804
PRESSURE SWITCHES (CONDENSATE)	632550R	1017676R	1017676R	632554R
PRESSURE SWITCHES (INDUCER)	1016291R	1016292R	1016293R	1016294R
ROLL-OUT LIMIT SWITCH	626610R	626610R	626610R	626609R
SET OF WIRES (NOT SHOWN)	M0036041R	M0036042R	M0036042R	M0036053R
TOP PANEL	2A9512R	2A9513R	2A9513R	2A9514R
TRANSFORMER	622341R	622341R	622341R	622341R
TUBE (SOFT, "J" 30") (NOT SHOWN)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

*TL models are equipped with FASCO brand inducer motors. *TL-1 models are equipped with Broad Ocean brand inducer motors.

FOR COMPONENT LOCATIONS, SEE PAGE 9.

DESCRIPTION	060-VB-1	080-VC-1	100-VC-1	115-VD-1
BLOWER ASSEMBLY	904877	904878	904878	904879
BLOWER CONTROL BOARD	922016	922016	922016	922016
BLOWER HOUSING	297207R	297209R	297209R	297209R
BLOWER LIMIT SWITCH	626611R	626611R	626611R	626611R
BLOWER MOTOR	921650	921651	921651	921652
BLOWER MOTOR CHOKE	NOT USED	622340R	622340R	622340R
BLOWER WHEEL	667374R	667280R	667280R	667280R
BURNER ASSEMBLY	904829	904830	904831	904832
BURNER TUBE MANIFOLD	664473R	664243R	664244R	664245R
DOOR SET	921919	921920	921920	921921
DOOR SWITCH	632693R	632693R	632693R	632693R
DRAIN TUBE (HARD, "J" 30") (NOT SHOWN)	663706R	663706R	663706R	663706R
DRAIN TUBE (SOFT, "J" 30") (NOT SHOWN)	663707R	663707R	663707R	663707R
DRAIN TUBE (SOFT, 23") (NOT SHOWN)	664434R	664434R	664434R	664434R
FINISH FLANGE	664633R	664633R	664633R	664633R
FLAME SENSOR	632484R	632484R	632484R	632484R
FURNACE CONTROL BOARD	920916	920916	920916	920916
FUSE	632261R	632261R	632261R	632261R
GAS VALVE	624787R	624787R	624787R	624787R
HARNESS INDUCER-RESISTOR (NOT SHOWN)	1014826R	1014827R	1014827R	1016418R
HEAT EXCHANGER	904792	904793	904794	904795
HIGH TEMP HOSE (NOT SHOWN)	263967R	263967R	263967R	263967R
IGNITOR ASSEMBLY (NITRIDE)	1017743S	1017743S	1017743S	1017743S
IGNITOR BRACKET (NOT SHOWN)	299261R	299261R	299261R	299261R
INDUCER LIMIT SWITCH	626599R	626599R	626599R	626599R
INDUCER MOTOR	1003442	1003442	1003442	1003442
INDUCER ORIFICE	669719R	669713R	669716R	1014812R
INSHOT BURNER	661128R	661128R	661128R	661128R
IN-LINE DRAIN ASSEMBLY	664435R	664435R	664435R	664435R
MAIN AIR LIMIT SWITCH	626598R	626615R	626612R	626612R
MOTOR MOUNT KIT	904907	904907	904907	904951
ORIFICE (NATURAL GAS)	661045R	661045R	661045R	661046R
OUTLET HEADER BOX	904802	904803	904803	904804
PRESSURE SWITCHES (CONDENSATE)	632550R	1017676R	1017676R	632554R
PRESSURE SWITCHES (INDUCER)	1016291R	1016292R	1016293R	1016294R
ROLL-OUT LIMIT SWITCH	626610R	626610R	626610R	626609R
SET OF WIRES (NOT SHOWN)	M0036046R	M0036047R	M0036047R	M0036054R
TOP PANEL	2A9512R	2A9513R	2A9513R	2A9514R
TRANSFORMER	622341R	622341R	622341R	622341R
TUBE (SOFT, "J" 30") (NOT SHOWN)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

*TL models are equipped with FASCO brand inducer motors. *TL-1 models are equipped with Broad Ocean brand inducer motors.

FOR COMPONENT LOCATIONS, SEE PAGE 9.


DESCRIPTION	060-24B-1	080-35C-1	100-35C-1	115-45D-1
BLOWER ASSEMBLY	904873	904874	904874	904875
BLOWER CONTROL BOARD	920920	920920	920920	920920
BLOWER HOUSING	297207R	297209R	297209R	297209R
BLOWER LIMIT SWITCH	626611R	626611R	626611R	626611R
BLOWER MOTOR	921650	921651	921651	921652
BLOWER MOTOR CHOKE	NOT USED	622340R	622340R	622340R
BLOWER WHEEL	667374R	667280R	667280R	667280R
BURNER ASSEMBLY	904829	904830	904831	904832
BURNER TUBE MANIFOLD	664611R	664243R	664244R	664245R
DOOR SET	921919	921920	921920	921921
DOOR SWITCH	632693R	632693R	632693R	632693R
DRAIN TUBE (HARD, "J" 30") (NOT SHOWN)	663706R	663706R	663706R	663706R
DRAIN TUBE (SOFT, "J" 30") (NOT SHOWN)	663707R	663707R	663707R	663707R
DRAIN TUBE (SOFT, 23") (NOT SHOWN)	664434R	664434R	664434R	664434R
FINISH FLANGE	664633R	664633R	664633R	664633R
FLAME SENSOR	632484R	632484R	632484R	632484R
FURNACE CONTROL BOARD	920916	920916	920916	920916
FUSE	632261R	632261R	632261R	632261R
GAS VALVE	624787R	624787R	624787R	624787R
HARNESS INDUCER-RESISTOR (NOT SHOWN)	1014828R	1014829R	1014830R	1014831R
HEAT EXCHANGER	904792	904793	904794	904795
HIGH TEMP HOSE (NOT SHOWN)	263967R	263967R	263967R	263967R
IGNITOR ASSEMBLY (NITRIDE)	1017743S	1017743S	1017743S	1017743S
IGNITOR BRACKET (NOT SHOWN)	299261R	299261R	299261R	299261R
INDUCER LIMIT SWITCH	626599R	626599R	626599R	626599R
INDUCER MOTOR	1003442	1003442	1003442	1003442
INDUCER ORIFICE	669926R	669720R	669716R	669717R
INSHOT BURNER	661128R	661128R	661128R	661128R
IN-LINE DRAIN ASSEMBLY	664435R	664435R	664435R	664435R
MAIN AIR LIMIT SWITCH	626601R	626601R	626613R	626612R
MOTOR MOUNT KIT	904907	904907	904907	904951
ORIFICE (NATURAL GAS)	661045R	661045R	661045R	661046R
OUTLET HEADER BOX	904802	904803	904803	904804
PRESSURE SWITCHES (INDUCER)	1016295R	1016296R	1016297R	1016298R
ROLL-OUT LIMIT SWITCH	626610R	626610R	626610R	626610R
SET OF WIRES (NOT SHOWN)	M0036043R	M0036044R	M0036045R	M0036050R
TOP PANEL	2B3562R	2B3563R	2B3563R	2B3564R
TRANSFORMER	622341R	622341R	622341R	622341R
TUBE (SOFT, 6.5") (NOT SHOWN)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

*TL models are equipped with FASCO brand inducer motors. *TL-1 models are equipped with Broad Ocean brand inducer motors.

FOR COMPONENT LOCATIONS, SEE PAGE 10.

 VG7TE UPFLOW ONLY - COMPONENT LOCATION

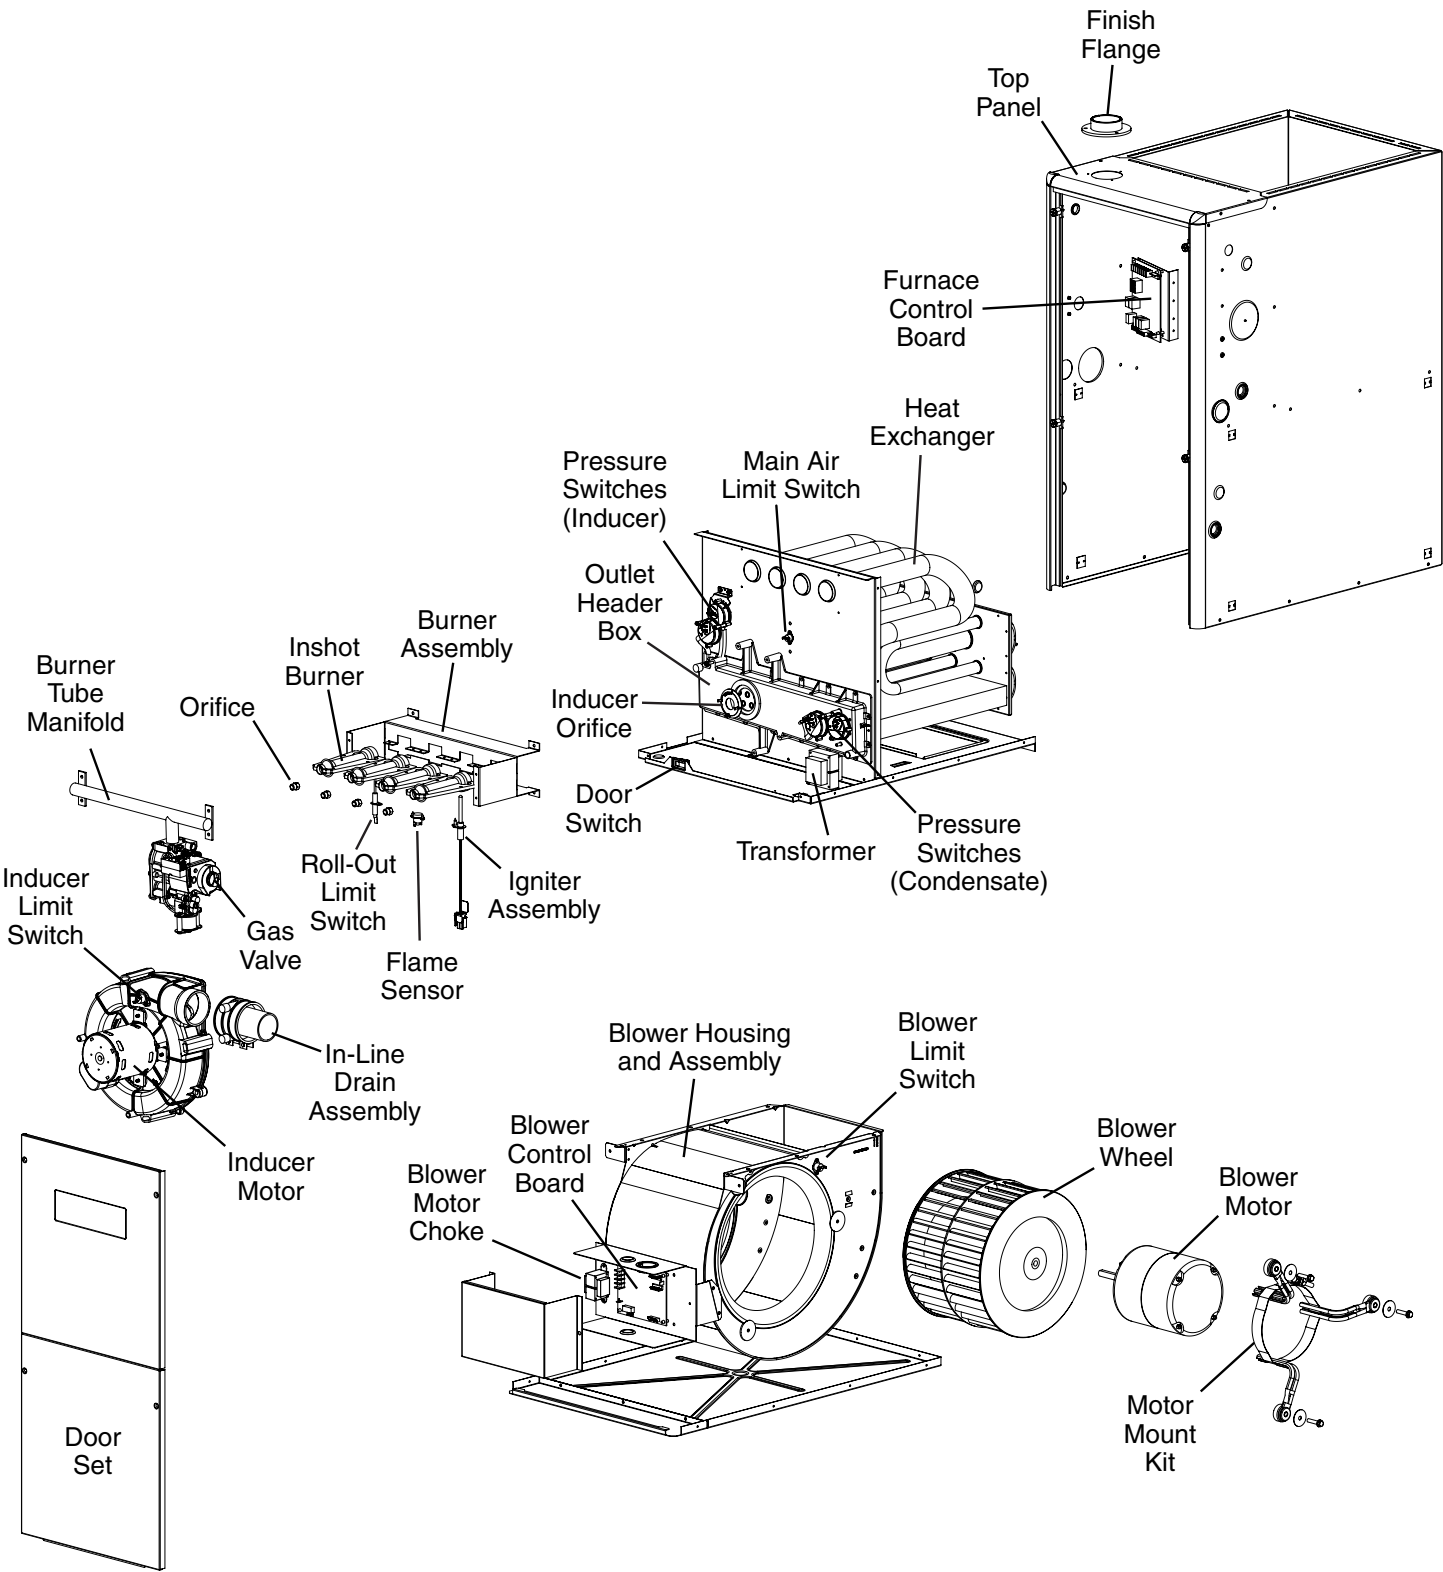

VG7TN DOWNFLOW - COMPONENT LOCATION

