

REPLACEMENT PARTS LIST

**GUH95T Two-Stage Condensing Gas Furnace
with Variable Speed Blower (Upflow & Horizontal)
and
GUV96T Two-Stage Condensing Gas Furnace
with Variable Speed Blower (Upflow Only)**




DESCRIPTION	060B4XE	080C5XE	100C5XE	120D5XE
Blower Assembly	904877	904878	904878	904879
Blower Control Board	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	—	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Door Set	904768Y	904769Y	904769Y	904770Y
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Heat Exchanger	904792	904793	904794	904795
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	151882R	Not Used
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626598R	626615R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632515R	632546R	632548R	632516R
Roll-Out Limit Switch	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036015R	M0036017R	M0036017R	M0036017R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

DESCRIPTION	060B4XE	080C5XE	100C5XE	120D5XE
Blower Assembly	904877	904878	904878	904879
Blower Control Board	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Door Set	904768	921920	921920	921921
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J" 30") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921816	921816	921816	921816
Harness Inducer-Resistor (Not Shown)	1014826R	1014827R	1014827R	1016418R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	1014812R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626598R	626615R	626612R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	1017676R	1017676R	632554R
Pressure Switches (Inducer)	1016291R	1016292R	1016293R	1016294R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036046R	M0036047R	M0036047R	M0036054R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

GUH95T Upflow / Horizontal & GUV96T Upflow Only - Component Location

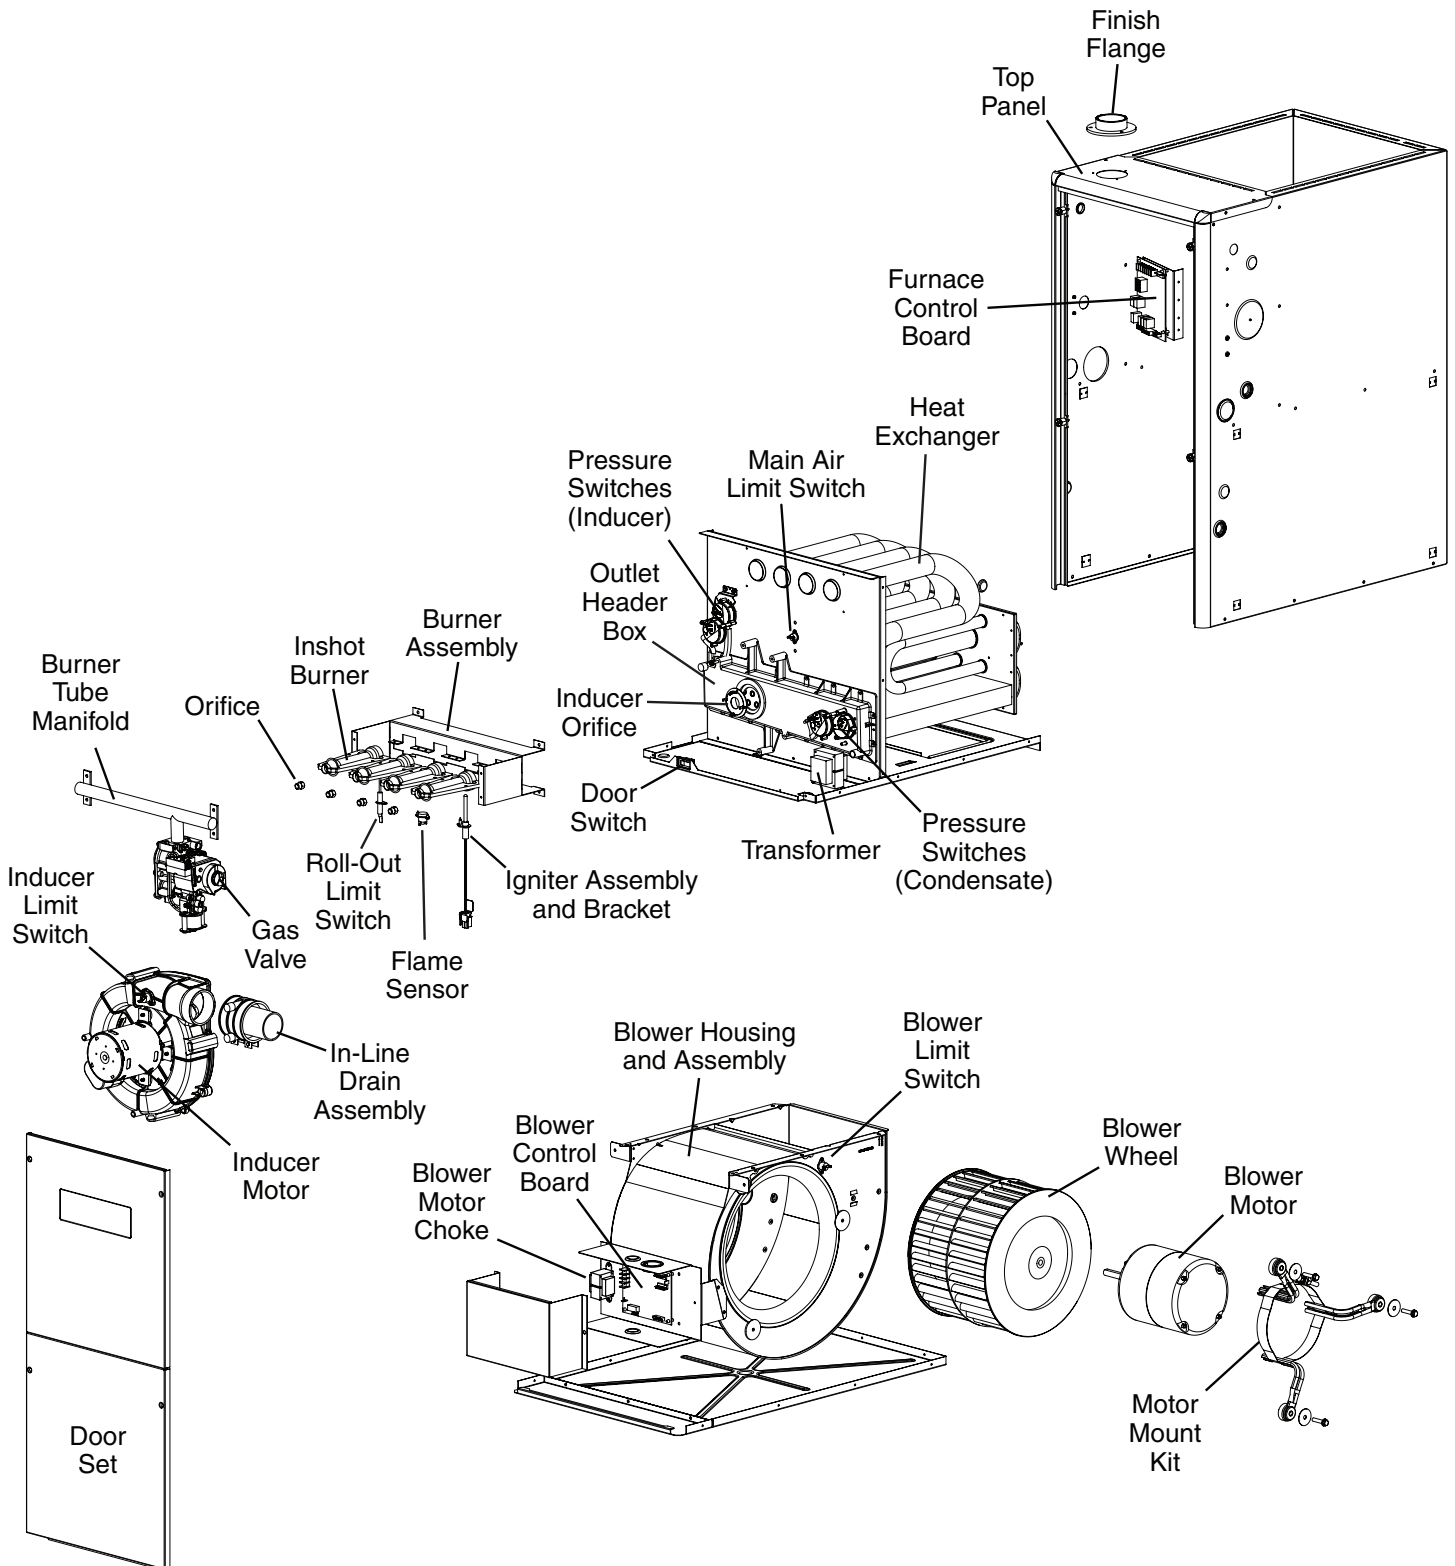

HEAT CONTROLLER

1900 Wellworth Ave., Jackson MI 49203 • Ph. 517-787-2100 • www.heatcontroller.com

A **WRUS** Company

Specifications & illustrations subject to change without notice or incurring obligations (12/22).



D306308C
(Replaces D306308B)