

REPLACEMENT PARTS LIST

MG3P Series Single Stage Condensing Gas Furnace

CONDENSING GAS FURNACE - 92.1% AFUE



MG3P
Upflow / Horizontal Furnace

92.1% AFUE**MG3P UPFLOW / HORIZONTAL REPLACEMENT PARTS LIST**

DESCRIPTION	054U1AAB1	072U1AAC1	090U1AAC1
Blower Housing	297207R	N/A	N/A
Blower Housing (with Wheel)	N/A	1027002R	1027002R
Blower Limit Switch	626611	626611	626611
Blower Motor	1027370R	1027391R	1027372R
Blower Wheel	667258	N/A	N/A
Burner Assembly	904747	904823	904929
Burner Tube Manifold	664238	664239	664240
Control Board	1021573R	1021573R	1021573R
Door Set	904768	904769	904769
Door Switch	632693	632693	632693
Drain Tube (Hard "J" 30") (Not Shown)	663706	663706	663706
Drain Tube (Soft, "J" 30") (Not Shown)	663707	663707	663707
Filter (Not Shown)	669785	669785	669785
Finish Flange	664633	664633	664633
Flame Sensor	632484	632484	632484
Fuse	632261	632261	632261
Gas Valve	624610	624610	624610
Heat Exchanger	904869	904870	904871
Hose, High Temperature (Not Shown)	263967	263967	263967
Ignitor Assembly (Nitride)	921074	921074	921074
Igniter Bracket (Not Shown)	299261	299261	299261
Inducer Limit Switch	626599	626599	626599
Inducer Motor	1003441	1003441	1003441
Inducer Orifice	669712	669715	669717
In-Line Drain Assembly	664435	664435	664435
Inshot Burner	661134	661134	661134
Main Air Limit Switch	626614	1021533	626613
Motor Choke	622340	622340	622340
Motor Mount Kit	904951	904951	904951
Orifice (Natural Gas)	661047	661047	661047
Outlet Header Box	904802	904803	904803
Pressure Switch (condensate)	632491	632491	632622
Pressure Switch (inducer)	632495	632493	632493
Roll-Out Limit Switch	626608	626609	626609
Set of Wires (Not Shown)	1027179	1027180	1027180
Top Panel	2B3552R	2B3553R	2B3553R
Transformer	622341	622341	622341
Tube (Soft, 5.5") (Not Shown)	663727	663727	663727

FOR COMPONENT LOCATIONS, SEE PAGE 3

MG3P Upflow / Horizontal Component Location

