

REPLACEMENT PARTS LIST

SINGLE PACKAGE GAS HEATING / ELECTRIC COOLING

R104GD-U SERIES

ULTRA LOW NOX, 13.4 SEER2, SINGLE PHASE MODELS



IMPORTANT

- This document is primarily intended to assist qualified individuals experienced in the proper repair or servicing of this appliance. Only factory authorized parts or accessory kits may be used with this product. Improper installation, service, adjustment, or maintenance may cause explosion, fire, electrical shock or other hazardous conditions which may result in personal injury or property damage.
- Some local codes require licensed installation / service personnel to service this type of equipment. Under no circumstances should the equipment owner attempt to install parts or service this equipment. Failure to comply with this warning could result in property damage, personal injury, or death.

R104GD-U Single Package Gas Heating / Electric Cooling Units

13.4 SEER2, Single Phase 2, 2.5 & 3 Ton Models

DESCRIPTION	R104GD-024K055U	R104GD-030K070U	R104GD-036K070U	R104GD-042K100U	R104GD-048K100U	R104GD-X60K100U
	1040868	1040869	1040870	1040871	1040872	1040873
ACCESS FITTING	663812R	663812R	663812R	663812R	663812R	663812R
AUTOTRANSFORMER (200VA, 230 TO 115V)	1036083R	1036083R	1036083R	1036083R	1036083R	1036083R
BLOWER HOUSING	D07484R	D07484R	D07484R	D07484R	D07484R	D07484R
BLOWER MOTOR	104218909R	104218910R	104218911R	104218912R	104218913R	104218914R
BLOWER MOTOR MOUNT KIT	903489	903489	903489	903489	903489	903489
BLOWER SERVICE PANEL ASSY	D05548JR	D05548JR	D05548JR	D05542JR	D05543JR	M0060705JR
BLOWER WHEEL (11 X 10)	667277R	667277R	667277R	667277R	667277R	667277R
CAPACITOR	01-0084	01-0269	01-0271	01-0269	01-0278	01-0279
COIL GUARD (FORMED)	2A8452R	2A8452R	2A8452R	2A8453R	2A8454R	2C5161R
COLLECTOR PAN (W/O RETAINER)	1040152	1040152	1040152	1040153	1040153	1040153
COLLECTOR PAN GASKET	689506R	689506R	689506R	103610501R	103610501R	103610501R
COMBUSTION AIR ORIFICE PLATE	1043390	1043388	1043388	1043389	1043389	1043389
COMPRESSOR	921423	921425	921427	1033661R	921466	921468
CONTACTOR	1014863R	1014863R	1014864R	1014865R	1014865R	1014865R
CONTROL BOARD	1039191R	1039191R	1039191R	1039191R	1039191R	1039191R
CORNER PANEL	103612022JR	103612022JR	103612022JR	103612059JR	104087803JR	103612011JR
CORNER POST	D09994JR	D09994JR	D09994JR	D09996JR	D09997JR	2B1941JR
DISTRIBUTOR ASSY	664518R	664595R	664689R	664599R	664691R	—
DRAIN PAN ASSEMBLY (INCLUDES DRAIN TUBE)	D05700R	D05700R	D05700R	D05700R	D05700R	D05700R
EXHAUST DUCT	102523701R	102523701R	102523701R	102523701R	102523701R	102523701R
EXTERNAL SERVICE BRACKET	298552JR	298552JR	298552JR	298552JR	298552JR	298552JR
FAN BLADE	667356R	667278R	667278R	667356R	1024013R	667319R
FAN GRILLE (BLACK)	669404R	669404R	669404R	669404R	1034994R	1034994R
FAN ORIFICE	263210JR	263210JR	263210JR	263210JR	295481JR	295481JR
FILTER DRIER (8 IN ³)	669764R	669764R	669764R	669764R	669764R	669764R
FILTER	1039259R	1039259R	1039259R	1039259R	1039259R	1039259R
FLEXIBLE GAS CONNECTOR (5/8" D X 16" L)	1039233R	1039233R	1039233R	1039233R	1039233R	1039233R
FRONT PANEL	298891JR	298891JR	298891JR	298892JR	298893JR	298894JR
FUSE HOLDER (NOT SHOWN)	RZ060241	RZ060241	RZ060241	RZ060241	RZ060241	RZ060241
FUSE TIME-DELAY (AUTOTRANSFORMER)	RZ261956	RZ261956	RZ261956	RZ261956	RZ261956	RZ261956
GAS/AIR VENTURI	1018739R	1018739R	1018739R	1018739R	1018739R	1018739R
GAS VALVE	904081	904081	904081	904081	904081	904081

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

R104GD-U Single Package Gas Heating / Electric Cooling Units 13.4 SEER2, Single Phase 2, 2.5 & 3 Ton Models

DESCRIPTION	R104GD-024K055U	R104GD-030K070U	R104GD-036K070U	R104GD-042K100U	R104GD-048K100U	R104GD-X60K100U
	1040868	1040869	1040870	1040871	1040872	1040873
HAIL GUARD KIT (NOT SHOWN)	917206	917206	917206	917206	917206	917206
HEAT EXCHANGER	103612031R	103612031R	103612031R	103612008R	103612008R	103612008R
HIGH PRESSURE SWITCH AUTO RESET (NOT SHOWN)	632473R	632473R	632473R	632473R	632473R	632473R
HORIZONTAL DUCT COVER	283101JR	283101JR	283101JR	283101JR	283101JR	283101JR
IGNITOR / FLAME SENSOR ASSEMBLY	1021611R	1021611R	1021611R	1021611R	1021611R	1021611R
INDOOR COIL (EVAP COIL)	1017857R	1017857R	1017857R	1017853R	1017858R	1017854R
INDUCER GASKET	689988R	689988R	689988R	689988R	689988R	689988R
INDUCER MOTOR	1040149	1040150	1040150	1040151	1040151	1040151
LOUVERED SERVICE PANEL	103612024JR	103612024JR	103612024JR	103612072JR	104087903JR	103612012JR
MAIN AIR LIMIT SWITCH (185/165)	626445R	626445R	626445R	626445R	626445R	626445R
MAIN BURNER ORIFICE (NOT SHOWN)	661030R	661026R	661026R	661016R	661016R	661016R
MOLDED PLUG HV / COMPRESSOR PLUG (NOT SHOWN)	634715R	634715R	634715R	634715R	634715R	634830R
OUTDOOR COIL (CONDENSER COIL)	1010327R	1010327R	1010327R	1010325R	1010326R	1010328R
OUTDOOR FAN MOTOR	622080	622757R	622757R	922022	622757r	622757r
PRESSURE SWITCH (0.20)	1018505R	1018505R	1018505R	1018505R	1018505R	1018505R
RELAY	622180R	622180R	622180R	622180R	622180R	622180R
RESTRICTOR (PISTON)	664057R	664062R	664068R	664074R	664076R	—
RETURN AIR PANEL	D05567JR	D05567JR	D05567JR	D05565JR	D05566JR	M0068603JR
SET OF WIRES (NOT SHOWN)	104218902R	104218902R	104218902R	104218924R	104218902R	104218923R
SUPPLY AIR PANEL	D05558JR	D05558JR	D05558JR	D05552JR	D05553JR	D05569JR
TEMPERATURE LIMIT SWITCH	1039638R	1039638R	1039638R	1039638R	1039638R	1039638R
TERMINAL BLOCK	632695R	632695R	632695R	632695R	632695R	632695R
TXV	—	—	—	—	—	664275R
TOP PAN ASSEMBLY	292441JR	292441JR	292441JR	292441JR	M0034707JR	M0034707JR
TOUCH-UP PAINT SILHOUETTE GRAY (NOT SHOWN)	1035204R	1035204R	1035204R	1035204R	1035204R	1035204R
TRANSFORMER (40 VA)	621709R	621709R	621709R	621709R	621709R	621709R
VENT COVER	265040R	265040R	265040R	265040R	265040R	265040R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

