

REPLACEMENT PARTS LIST

SINGLE PACKAGE GAS HEATING / ELECTRIC COOLING


VR104GD-U SERIES

ULTRA LOW NOX, 13.4 SEER2, SINGLE PHASE MODELS



IMPORTANT

- This document is primarily intended to assist qualified individuals experienced in the proper repair or servicing of this appliance. Only factory authorized parts or accessory kits may be used with this product. Improper installation, service, adjustment, or maintenance may cause explosion, fire, electrical shock or other hazardous conditions which may result in personal injury or property damage.
- Some local codes require licensed installation / service personnel to service this type of equipment. Under no circumstances should the equipment owner attempt to install parts or service this equipment. Failure to comply with this warning could result in property damage, personal injury, or death.

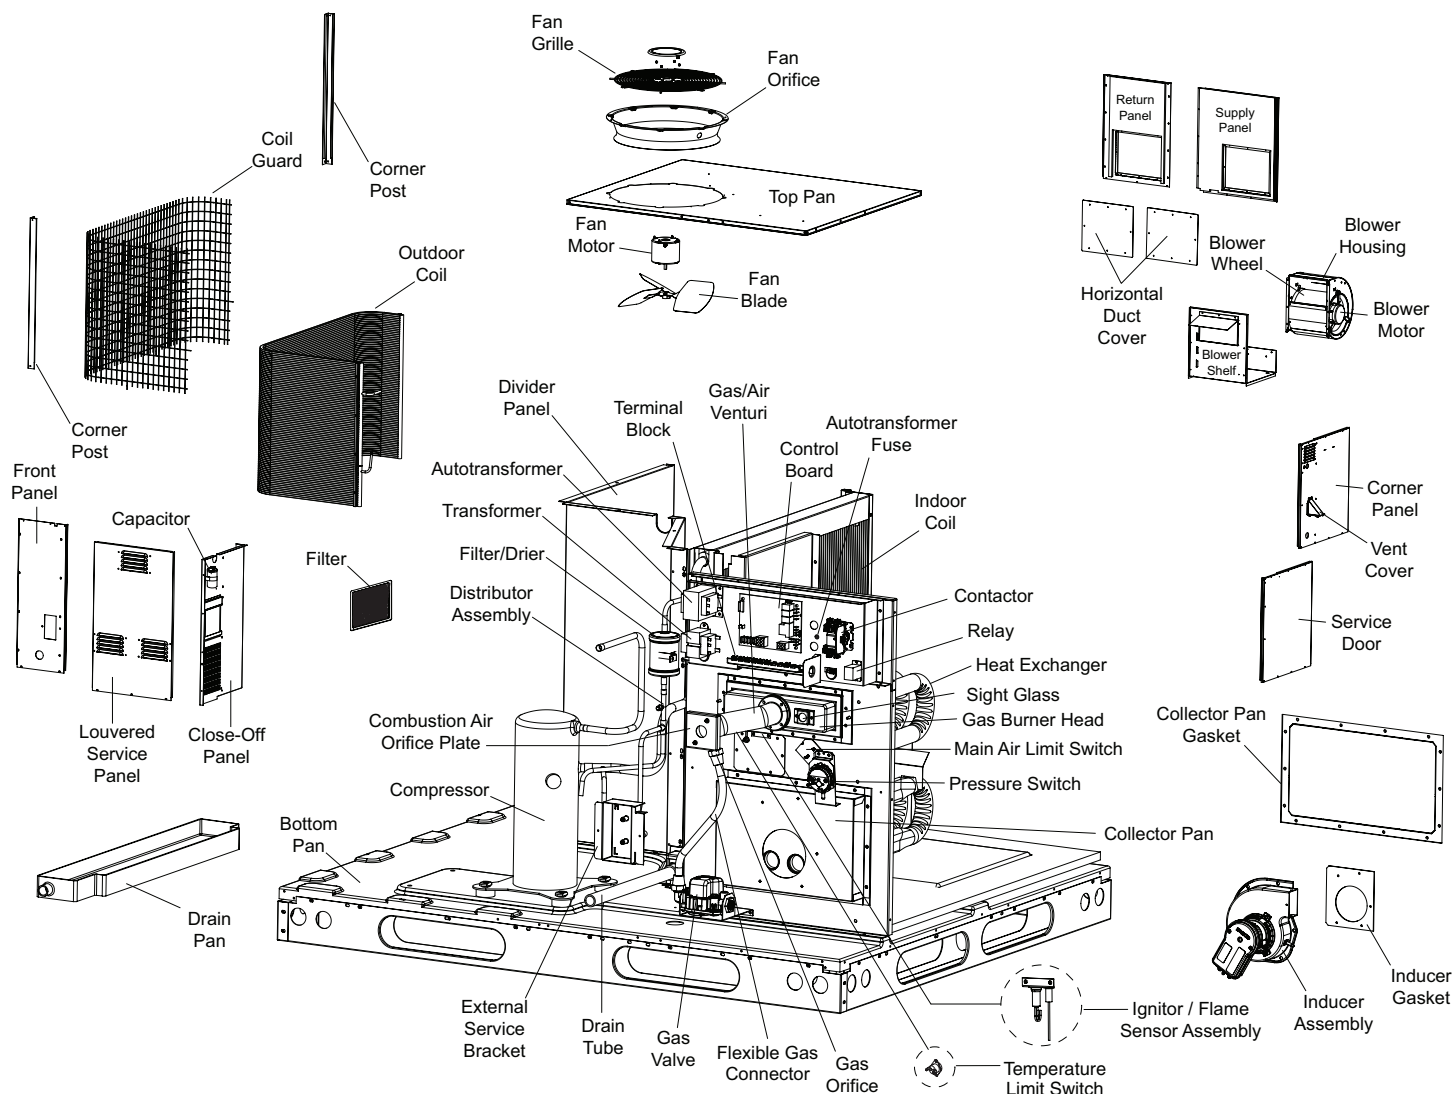

VR104GD-U Ultra Low NOx Single Package Gas Heating / Electric Cooling Units

13.4 SEER2, Single Phase Models

DESCRIPTION	VR104GD-024K055U	VR104GD-030K070U	VR104GD-036K070U	VR104GD-042K100U	VR104GD-048K100U	VR104GD-X60K100U
	1040868V	1040869V	1040870V	1040871V	1040872V	1040873V
ACCESS FITTING	663812R	663812R	663812R	663812R	663812R	663812R
AUTOTRANSFORMER (200VA, 230 TO 115V)	1036083R	1036083R	1036083R	1036083R	1036083R	1036083R
BLOWER HOUSING	D07484R	D07484R	D07484R	D07484R	D07484R	D07484R
BLOWER MOTOR	104218909R	104218910R	104218911R	104218912R	104218913R	104218914R
BLOWER MOTOR MOUNT KIT	903489	903489	903489	903489	903489	903489
BLOWER SERVICE PANEL ASSY	D05549VR	D05549VR	D05549VR	D05542VR	D05543VR	M0060714VR
BLOWER WHEEL (11 X 10)	667277R	667277R	667277R	667277R	667277R	667277R
CAPACITOR	01-0084	01-0269	01-0271	01-0269	01-0278	01-0279
COIL GUARD (FORMED)	2A8452R	2A8452R	2A8452R	2A8453R	2A8454R	2C5161R
COLLECTOR PAN (W/O RETAINER)	1040152	1040152	1040152	1040153	1040153	1040153
COLLECTOR PAN GASKET	689506R	689506R	689506R	103610501R	103610501R	103610501R
COMBUSTION AIR ORIFICE PLATE	1043390	1043388	1043388	1043389	1043389	1043389
COMPRESSOR	921423	921425	921427	1033661R	921466	921468
CONTACTOR	1014863R	1014863R	1014864R	1014865R	1014865R	1014865R
CONTROL BOARD	1039191R	1039191R	1039191R	1039191R	1039191R	1039191R
CORNER PANEL	1039462VR	1039462VR	1039462VR	1039472VR	104087803VR	1039480VR
CORNER POST	D09994VR	D09994VR	D09994VR	D09996VR	D09997VR	2B1941VR
DISTRIBUTOR ASSY	664518R	664595R	664689R	664599R	664691R	—
DRAIN PAN ASSEMBLY (INCLUDES DRAIN TUBE)	D05700R	D05700R	D05700R	D05700R	D05700R	D05700R
EXHAUST DUCT	102523701R	102523701R	102523701R	102523701R	102523701R	102523701R
EXTERNAL SERVICE BRACKET	298552VR	298552VR	298552VR	298552VR	298552VR	298552VR
FAN BLADE	667356R	667278R	667278R	667356R	1024013R	667319R
FAN GRILLE (BLACK)	669404R	669404R	669404R	669404R	1034994R	1034994R
FAN ORIFICE	263210VR	263210VR	263210VR	263210VR	295481VR	295481VR
FILTER DRIER (8 IN^3)	669764R	669764R	669764R	669764R	669764R	669764R
FILTER	1039259R	1039259R	1039259R	1039259R	1039259R	1039259R
FLEXIBLE GAS CONNECTOR (5/8"D X 16"L)	1039233R	1039233R	1039233R	1039233R	1039233R	1039233R
FRONT PANEL	298891VR	298891VR	298891VR	298892VR	298893VR	298894VR
FUSE HOLDER (NOT SHOWN)	RZ060241	RZ060241	RZ060241	RZ060241	RZ060241	RZ060241
FUSE TIME-DELAY (AUTOTRANSFORMER)	RZ261956	RZ261956	RZ261956	RZ261956	RZ261956	RZ261956
GAS/AIR VENTURI	1018739R	1018739R	1018739R	1018739R	1018739R	1018739R
GAS VALVE	904081	904081	904081	904081	904081	904081
HAIL GUARD KIT (NOT SHOWN)	917206	917206	917206	917206	917206	917206
HEAT EXCHANGER	103612031R	103612031R	103612031R	103612008R	103612008R	103612008R
HIGH PRESSURE SWITCH AUTO RESET (NOT SHOWN)	632473R	632473R	632473R	632473R	632473R	632473R
HORIZONTAL DUCT COVER	283101VR	283101VR	283101VR	283101VR	283101VR	283101VR
IGNITOR / FLAME SENSOR ASSEMBLY	1021611R	1021611R	1021611R	1021611R	1021611R	1021611R
INDOOR COIL (EVAP COIL)	1017857R	1017857R	1017857R	1017853R	1017858R	1017854R
INDUCER GASKET	689988R	689988R	689988R	689988R	689988R	689988R
INDUCER MOTOR	1040149	1040150	1040150	1040151	1040151	1040151
LOUVERED SERVICE PANEL	1039463VR	1039463VR	1039463VR	1039473VR	104087903VR	1039479VR
MAIN AIR LIMIT SWITCH (185/165)	626445R	626445R	626445R	626445R	626445R	626445R
MAIN BURNER ORIFICE (NOT SHOWN)	661030R	661026R	661026R	661016R	661016R	661016R
MOLDED PLUG HV / COMPRESSOR PLUG (NOT SHOWN)	634715R	634715R	634715R	634715R	634715R	634830R
OUTDOOR COIL (CONDENSER COIL)	1010327R	1010327R	1010327R	1010325R	1010326R	1010328R
OUTDOOR FAN MOTOR	622080	622757R	622757R	922022	622757r	622757r
PRESSURE SWITCH (0.20)	1018505R	1018505R	1018505R	1018505R	1018505R	1018505R
RELAY	622180R	622180R	622180R	622180R	622180R	622180R
RESTRICTOR (PISTON)	664057R	664062R	664068R	664074R	664076R	—
RETURN AIR PANEL	D05568VR	D05568VR	D05568VR	D05565VR	D05566VR	M0068605VR
SET OF WIRES (NOT SHOWN)	104218902R	104218902R	104218902R	104218924R	104218902R	104218923R
SUPPLY AIR PANEL	D05558VR	D05558VR	D05558VR	D05552VR	D05553VR	D05569VR
TEMPERATURE LIMIT SWITCH	1039638R	1039638R	1039638R	1039638R	1039638R	1039638R
TERMINAL BLOCK	632695R	632695R	632695R	632695R	632695R	632695R
TXV	—	—	—	—	—	664275R
TOP PAN ASSEMBLY	292441VR	292441VR	292441VR	292441VR	M0034707VR	M0034707VR
TOUCH-UP PAINT (NOT SHOWN)	898329R	898329R	898329R	898329R	898329R	898329R
TRANSFORMER (40 VA)	621709R	621709R	621709R	621709R	621709R	621709R
VENT COVER	265040R	265040R	265040R	265040R	265040R	265040R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

