

## USER'S MANUAL / INSTALLATION INSTRUCTIONS

SINGLE PACKAGE HEAT PUMP - SINGLE PHASE - R410A



Premium Model Shown

### IMPORTANT

#### ATTENTION INSTALLERS:

It is your responsibility to know this product better than your customer. This includes being able to install the product according to strict safety guidelines and instructing the customer on how to operate and maintain the equipment for the life of the product. Safety should always be the deciding factor when installing this product and using common sense plays an important role as well. Pay attention to all safety warnings and any other special notes highlighted in the manual. Improper installation of the furnace or failure to follow safety warnings could result in serious injury, death, or property damage.

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. Please read all instructions carefully before starting the installation. Return these instructions to the customer's package for future reference.

**DO NOT DESTROY. PLEASE READ CAREFULLY & KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.**

## USER INFORMATION

<b>IMPORTANT SAFETY INFORMATION.....</b>	<b>3</b>	<b>HEAT PUMP MAINTENANCE.....</b>	<b>4</b>
<b>ABOUT THE HEAT PUMP .....</b>	<b>3</b>	Regular Cleaning.....	4
<b>OPERATING INSTRUCTIONS .....</b>	<b>3</b>	<b>TROUBLESHOOTING .....</b>	<b>4</b>
Cooling Operation .....	3	<b>WARRANTY INFORMATION .....</b>	<b>4</b>
Heating Operation .....	3	Operating the Heat Pump for Automatic Cooling and Heating .....	4
Emergency Heat.....	3	Operating the Indoor Blower Continuously.....	4
Defrost Operation .....	3	Shutting the Heat Pump Off .....	4

## INSTALLER INFORMATION

<b>IMPORTANT SAFETY INFORMATION.....</b>	<b>5</b>	<b>REFRIGERANT CHARGING .....</b>	<b>11</b>
<b>GENERAL INFORMATION.....</b>	<b>6</b>	<b>HEAT PUMP MAINTENANCE.....</b>	<b>12</b>
Before you install this unit .....	6	Charging an R-410A Unit in AC Mode .....	12
Locating the Heat Pump.....	6	Charging an R-410A Unit in Heating Mode .....	12
Field Connections for Electrical Power Supply.....	6	Verification of charge in Heat Mode .....	12
Air Ducts.....	6	<b>REPLACEMENT PARTS.....</b>	<b>12</b>
Unconditioned Spaces .....	6	<b>FIGURES &amp; TABLES.....</b>	<b>13</b>
Acoustical Duct Work .....	6	Figure 6. Q6SE Heat pump Dimensions .....	13
Air Filter Requirements.....	7	Table 4. Center of Gravity & Unit Shipping Weights.....	13
<b>HEAT PUMP INSTALLATION .....</b>	<b>7</b>	Electrical Information.....	14
Packaging Removal.....	7	Figure 7. Typical Heat Pump Thermostat Connections 208V / 230V.....	14
Rigging & Hoisting.....	7	Figure 8. Wiring Diagram for 208/230V Units.....	15
Minimum Clearances.....	7	Charging Charts - Cooling.....	16
Ground Level.....	7	Figure 9. Charging Chart for 2 Ton Units.....	16
<b>ELECTRICAL WIRING .....</b>	<b>8</b>	Figure 10. Charging Chart for 2.5 Ton Units.....	16
Pre-Electrical Checklist.....	8	Figure 11. Charging Chart for 3 Ton Units.....	17
Line Voltage.....	8	Figure 12. Charging Chart for 3.5 Ton Units.....	17
Rooftop.....	8	Figure 13. Charging Chart for 4 Ton Units.....	18
Horizontal to Downflow Conversion.....	8	Figure 14. Charging Chart for 5 Ton Units.....	18
Condensate Drain .....	8	Charging Tables - Heating .....	19
Grounding.....	9	Table 5. Charging Table for 2 Ton Models.....	19
Blower Speed .....	9	Table 6. Charging Table for 2.5 Ton Models.....	19
Thermostat Connections .....	9	Table 7. Charging Table for 3 Ton Models.....	19
Defrost Cycle Timer.....	10	Table 8. Charging Table for 3.5 Ton Models.....	20
Demand Defrost Control.....	10	Airflow Data .....	21
Optional Outdoor Thermostat.....	10	Table 9. Q6SE Airflow Data.....	21
Optional Electric Heater Kits .....	10	<b>INSTALLATION / PERFORMANCE CHECKLIST ...</b>	<b>24</b>
<b>START UP &amp; ADJUSTMENTS .....</b>	<b>11</b>		
Pre-Start Check List.....	11		
Start-Up Procedure .....	11		
Air Circulation.....	11		
Short Cycle Protection .....	11		
System Cooling .....	11		
System Heating.....	11		

# USER INFORMATION

## IMPORTANT SAFETY INFORMATION

Please read all instructions before servicing this equipment. Pay attention to all safety warnings and any other special notes highlighted in the manual. Safety markings are used frequently throughout this manual to designate a degree or level of seriousness and should not be ignored.

**WARNING** indicates a potentially hazardous situation that if not avoided, could result in personal injury or death.

**CAUTION** indicates a potentially hazardous situation that if not avoided, may result in minor or moderate injury or property damage.

## ABOUT THE HEAT PUMP

Your heat pump is a unique, all weather comfort-control appliance that will heat and cool your home year round and provide energy saving comfort. It's an unknown fact that heat is always in the air, even when the outside temperature is below freezing. The heat pump uses this basic law of physics to provide energy saving heat during the winter months. For example, If the outdoor temperature is 47° F (8° C), your heat pump can deliver approximately 3.5 units of heat energy per each unit of electrical energy used, as compared to a maximum of only 1 unit of heat energy produced with conventional heating systems.

In colder temperatures, the heat pump performs like an air conditioner run in reverse. Available heat energy outside the home is absorbed by the refrigerant and exhausted inside the home. This efficient process means you only pay for "moving" the heat from the outdoors to the indoor area. You do not pay to generate the heat, as is the case with more traditional furnace designs.

During summer, the heat pump reverses the flow of the heat-absorbing refrigerant to become an energy-efficient, central air conditioner. Excess heat energy inside the home is absorbed by the refrigerant and exhausted outside the home.

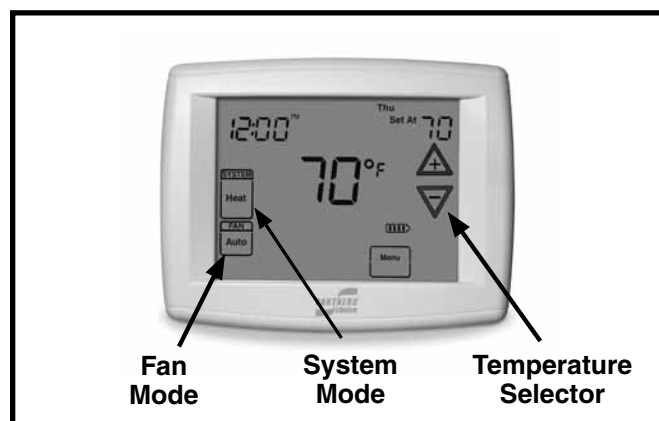


Figure 1. Digital Thermostat

## OPERATING INSTRUCTIONS

Please refer to the thermostat manufacturer's User manual for detailed programming instructions.

### Cooling Operation

1. Set the thermostat's system mode to COOL or AUTO and change the fan mode to AUTO. See [Figure 1](#).
2. Set the temperature selector to the desired temperature level. The outdoor fan, compressor, and blower motor will all cycle on and off to maintain the indoor temperature at the desired cooling level.

**NOTE:** If the temperature level is re-adjusted, or the system mode is reset, the fan and compressor in the outdoor unit may not start immediately. A protective timer circuit holds the compressor and the outdoor fan off for approximately three minutes following a previous operation or the interruption of the main electrical power.

### Heating Operation

1. Set the thermostat's system mode to HEAT or AUTO and change the fan mode to AUTO. See [Figure 1](#).
2. Set the temperature selector to the desired temperature level. The compressor, outdoor fan, and blower motor will cycle on and off to maintain the indoor temperature at the desired heating level.

**NOTE:** If the temperature level is re-adjusted, or the system mode is reset, the fan and compressor in the outdoor unit may not start immediately. A protective timer circuit holds the compressor and the outdoor fan off for approximately three minutes following a previous operation or the interruption of the main electrical power.

### Emergency Heat

Some thermostats may include a system mode called EM HT or AUX HT, etc. This is a back-up heating mode that should only be used if a problem is suspected. With the mode set to EM HT, etc., the compressor and outdoor fan will be locked off and supplemental heat (electric resistance heating) will be used as a source of heat. Sustained use of electric resistance heat in place of the heat pump will result in an increase in electric utility costs.

### Defrost Operation

During cold weather heating operation, the outdoor unit will develop a coating of snow and ice on the heat transfer coil. This is normal and the unit will defrost itself. This unit features Demand Defrost that monitors ambient and coil temperatures to regulate the defrost function accordingly.

At the beginning of the defrost cycle, both the outdoor condenser fan and compressor will turn off. After approximately 30 seconds, the compressor will turn on and begin to heat the outdoor coil causing the ice and snow to melt.

# USER INFORMATION

**NOTE:** While the ice and snow is melting, some steam may rise from the outdoor unit as the warm coil causes the melting frost to evaporate. When defrost is completed, the outdoor fan motor will start, and the compressor will turn off again. In approximately 30 seconds the compressor will start up again and continue normal operation.

## Operating the Heat Pump for Automatic Cooling and Heating

1. Set the thermostat system mode to AUTO and the thermostat fan mode to AUTO. See [Figure 1](#).

**NOTE:** Thermostat styles vary. Some models will not include the AUTO mode and others will have the AUTO in place of the HEAT and COOL. Others may include all three. Refer to the instructions supplied with your thermostat for specific instructions.

2. Set the thermostat's temperature selector to the desired heating and cooling temperature level(s). The outdoor unit and the indoor blower will then cycle on and off in either the heating or cooling mode of operation as required to automatically maintain the indoor temperature within the desired limits.

## Operating the Indoor Blower Continuously

The continuous indoor blower operation is typically used to circulate the indoor air to equalize a temperature unbalance due to a sun load, cooking, or fireplace operation.

Set the thermostat fan mode to ON ([Figure 1](#)). The indoor blower starts immediately, and will run continually until the fan mode is reset to AUTO.

The continuous indoor blower operation can be obtained with the thermostat system mode set in any position, including OFF.

## Shutting the Heat Pump Off

Change the thermostat's system mode to OFF and the fan mode to AUTO. See [Figure 1](#). **NOTE:** The system will not operate, regardless of the temperature selector setting.

## HEAT PUMP MAINTENANCE



### CAUTION:

**Shut off all electrical power to the unit before performing any maintenance or service on the system. Failure to comply may result in personal injury or death.**

Proper maintenance is most important to achieve the best performance from the appliance and should be performed by a qualified service technician at least once a year. Follow the maintenance schedule and the instructions below for years of safe, trouble free operation.

### Regular Cleaning

- Clean or replace the indoor air filter at the start of each heating and cooling season, and when an accumulation of dust and dirt is visible on the air filter.
- Remove any leaves and grass clippings from the coil in the outdoor unit, being careful not to damage the aluminum fins.
- Check for obstructions, such as twigs, sticks, etc.

## TROUBLESHOOTING

If the unit fails to operate, check the following:

- The thermostat is properly set. See Cooling Operation for air conditioning or Heating Operation for furnace or air handler.
- The unit disconnect fuses are in good condition and the electrical power to the unit is turned on.

## WARRANTY INFORMATION

A warranty certificate with full details is included with the heat pump. Carefully review these responsibilities with your dealer or service company. The manufacturer will not be responsible for any costs found necessary to correct problems due to improper setup, improper installation, adjustments, improper operating procedure on the part of the user, etc. Some specific examples of service calls which are not included in the limited warranty are:

- Correcting wiring problems in the electrical circuit supplying the heat pump.
- Resetting circuit breakers or other switches.
- Adjusting or calibrating of thermostat.

## INSTALLER INFORMATION

### IMPORTANT SAFETY INFORMATION

Safety markings are used frequently throughout this manual to designate a degree or level of seriousness and should not be ignored. **WARNING** indicates a potentially hazardous situation that if not avoided, could result in personal injury or death. **CAUTION** indicates a potentially hazardous situation that if not avoided, may result in minor or moderate injury or property damage.

#### **WARNING:**

Improper installation, service, adjustment, or maintenance may cause explosion, fire, electrical shock or other hazardous conditions which may result in personal injury or property damage. Unless otherwise noted in these instructions, only factory authorized kits or accessories may be used with this product.

#### **CAUTION:**

This unit uses refrigerant R-410A. **DO NOT** use any other refrigerant in this unit. Use of another refrigerant will damage the unit.

#### **WARNING:**

Shut off all electrical power to the unit before performing any maintenance or service on the system. Failure to comply may result in personal injury or death.

#### **WARNING:**

These units are fully charged with R-410A refrigerant and ready for installation. When a system is installed according to these instructions, no refrigerant charging is required. If repairs make it necessary for evacuation and charging, it should only be attempted by qualified, trained personnel thoroughly familiar with this equipment. Some local codes require licensed installation service personnel to service this type of equipment. Under no circumstances should the homeowner attempt to install and/or service this equipment. Failure to comply with this warning could result in equipment damage, personal injury, or death.

#### **WARNING:**

**Do not place combustible material on or against the unit cabinet. Do not place combustible materials, including gasoline and any other flammable vapors and liquids, in the vicinity of the unit.**

#### **WARNING:**

The safety information listed below must be followed during the installation, service, and operation of this unit. Unqualified individuals should not attempt to interpret these instructions or install this equipment. Failure to follow safety recommendations could result in possible damage to the equipment, serious personal injury or death.

- The installer must comply with all local codes and regulations which govern the installation of this type of equipment. Local codes and regulations take precedence over any recommendations contained in these instructions. Consult local building codes and the National Electrical Code (ANSI C1) for special installation requirements.
- This equipment contains liquid and gaseous refrigerant under high pressure. Installation or servicing should only be performed by qualified trained personnel thoroughly familiar with this type equipment.
- All electrical wiring must be completed in accordance with local, state and national codes and regulations and with the National Electric Code (ANSI/NFPA 70) or in Canada the Canadian Electric Code Part 1 CSA C.22.1.
- Installation of equipment may require brazing operations. Installer must comply with safety codes and wear appropriate safety equipment (safety glasses, work gloves, fire extinguisher, etc.) when performing brazing operations.
- Install this unit only in a location and position as specified on [page 6](#). This unit is designed only for outdoor installations and should be located with consideration of minimizing the length of the supply and return ducts. Consideration should also be given to the accessibility of fuel, electric power, service access, noise, and shade.
- Follow all precautions in the literature, on tags, and on labels provided with the equipment. Read and thoroughly understand the instructions provided with the equipment prior to performing the installation and operational checkout of the equipment.



## GENERAL INFORMATION

The Q6SE series heat pump is designed only for outdoor rooftop or ground level installations. This unit has been tested for capacity and efficiency in accordance with AHRI Standards and will provide many years of safe and dependable comfort, providing it is properly installed and maintained. Abuse, improper use, and/or improper maintenance can shorten the life of the appliance and create unsafe hazards.

### Before you install this unit

- ✓ The cooling load of the area to be conditioned must be calculated and a system of the proper capacity selected. It is recommended that the area to be conditioned be completely insulated and vapor sealed.
- ✓ Check the electrical supply and verify the power supply is adequate for unit operation. If there is any question concerning the power supply, contact the local power company.
- ✓ All units are securely packed at the time of shipment and upon arrival should be carefully inspected for damage prior to installing the equipment at the job site. Verify coil fins are straight. If necessary, comb fins to remove flattened or bent fins. Claims for damage (apparent or concealed) should be filed immediately with the carrier.
- ✓ Please consult your dealer for maintenance information and availability of maintenance contracts. Please read all instructions before installing the unit.

### Locating the Heat Pump


- Survey the job site to determine the best location for mounting the outdoor unit.
- Choose an appropriate location that minimizes the length of the supply and return air ducts.
- Overhead obstructions, poorly ventilated areas, and areas subject to accumulation of debris should be avoided.
- Sufficient clearance for unobstructed airflow through the outdoor coil must be maintained in order to achieve rated performance. See [Figure 2](#) for minimum clearances to obstructions.

### Field Connections for Electrical Power Supply

- All wiring must comply with current provisions of the National Electrical Code (ANSI/NFPA 70) and with applicable local codes having jurisdiction.
- The minimum size of electrical conductors and circuit protection must be in compliance with information listed on the outdoor unit data label.
- Electrical power supplied to the unit must be adequate for proper operation of the equipment. The system must be wired and provided with circuit protection in accordance with local building codes.

### Air Ducts

This unit is designed only for use with a supply and return duct. Air ducts must be installed in accordance with the standards of the National Fire Protection Association Standard for Installation of Air Conditioning Systems (NFPA 90A), Standard for Installation of Residence Type

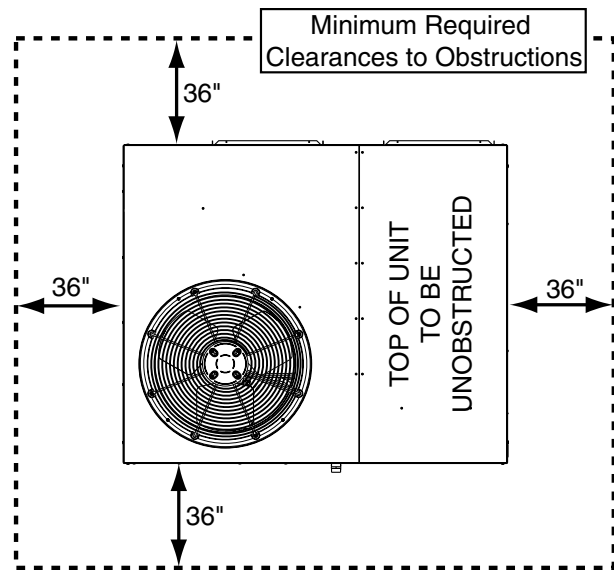

**Figure 2. Clearance Requirements**

Warm Air Heating and Air Conditioning Systems (NFPA 90B), and all applicable local codes. NFPA publications are available by writing to: National Fire Protection Association, Batterymarch Park, Quincy, ME 02269 or visit [www.NFPA.org](http://www.NFPA.org) on the web.

- Design the duct work according to methods described by the Air Conditioning Contractors of America (ACCA).
- The ducts must be properly sized not to exceed .2" W.C. pressure drop at 400 scfm per nominal ton of cooling capacity.
- Duct work should be attached directly to the unit flanges for horizontal applications.
- If roof curb is installed, the ducts must be attached to the curb hangers, not the unit.

### Unconditioned Spaces

All duct work passing through unconditioned space must be properly insulated to minimize duct losses and prevent condensation. Use insulation with an outer vapor barrier. Refer to local codes for insulation material requirements.

### Acoustical Duct Work

Certain installations may require the use of acoustical lining inside the supply duct work.


- Acoustical insulation must be in accordance with the current revision of the Sheet Metal and Air Conditioning Contractors National Association (SMACNA) application standard for duct liners.
- Duct lining must be UL classified batts or blankets with a fire hazard classification of FHC-25/50 or less.
- Fiber duct work may be used in place of internal duct liners if the fiber duct work is in accordance with the current revision of the SMACNA construction standard on fibrous glass ducts. Fibrous duct work and internal acoustical lining must be NFPA Class 1 air ducts when tested per UL Standard 181 for Class 1 ducts.

## Air Filter Requirements

### **WARNING:**

**Never operate the unit without a filter in place. Dust and lint could accumulate on internal parts, resulting in loss of efficiency, equipment damage and possible fire. Replace disposable filters with the same type and size.**

- Air filter(s) are not supplied and must be installed in the return air system by the installer.
- All return air must pass through the filters before entering the unit. **NOTE:** It is important that all filters be kept clean and replaced frequently to ensure proper operation of unit. Dirty or clogged filters will reduce the efficiency of the unit and result in unit shutdowns.
- Air filter pressure drop must not exceed 0.08 inches WC. When replacing the air filters, a suitable air filter must be installed upstream of the evaporator coil of the return air system.
- Downflow Installations require an internal filter accessory kit to be installed.
- Horizontal Installations require the air filter system be installed in the return air ductwork.

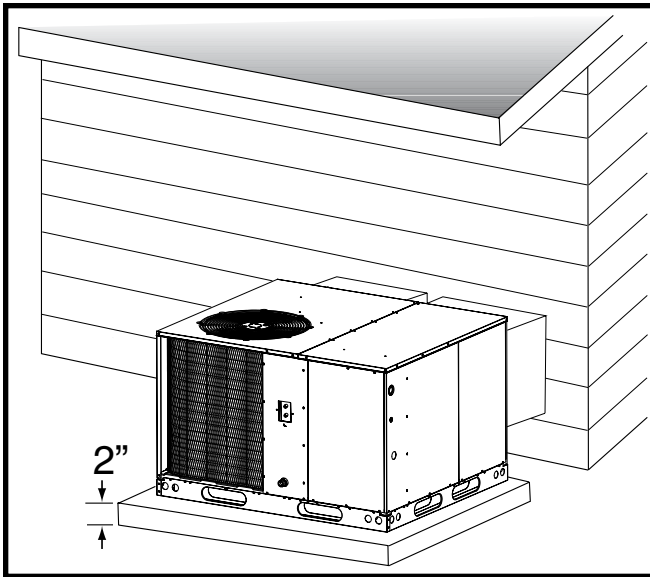

**Figure 3. Ground Level Installation**

## HEAT PUMP INSTALLATION

### Packaging Removal

Remove the shipping carton and User's Manual from the equipment. Take care not to damage the tubing connections when removing the carton. For rooftop installations, remove and discard the two supports attached beneath the unit.

### Rigging & Hoisting

### **WARNING:**

**To avoid the risk of property damage, personal injury, or death, it is the rigger's responsibility to ensure that whatever means are used to hoist the unit are safe and adequate:**

- **The lifting equipment must be adequate for the load. Refer to Table 4 (page 13) for unit weights.**
- **The unit must be lifted from the holes in the base rails using cables or chains.**
- **Spreader bars are required to protect the unit and ensure even loading.**
- **Keep the unit in an upright position at all times. The rigging must be located outside the units center of gravity. Refer to Figure 6 (page 13) for locating the center of gravity.**
- **All panels must be securely in place during rigging and hoisting.**

### Minimum Clearances

Q6SE units are certified as combination heating and cooling equipment for outdoor installation only. Figure 2 (page 6) displays the minimum clearances to obstructions for both downflow and horizontal discharge.

Units may be installed on wood flooring or on Class A, B, or C roof covering material when used with bottom supply and return air ducts as long as the following requirements are met:

- If using horizontal supply and return air ducts, the horizontal roof curb kit and return air kit must be installed prior to unit installation. Horizontal roof curb is required.
- If using bottom discharge with return air ducts a roof curb must be installed prior to unit installation. See Rigging and Hoisting section for setting of the unit.

### Ground Level

Ground level installations must be located according to local building codes or ordinances and these requirements:


- Clearances must be in accordance with those shown in Figure 2. Also consider clearances for access to the internal filter.
- A suitable mounting pad must be provided and separate from the building foundation. The pad must be level to ensure proper condensate disposal and strong enough to support the unit's weight. The slab height must be a minimum of 2" (5cm) above grade and with adequate drainage. See Figure 3.

- Units require horizontal roof curb and return air kit for horizontal installations.
- Ductwork should be attached directly to flanges on panels supplied in horizontal duct conversion kits.

### Rooftop

Rooftop installations must be located according to local building codes or ordinances and these requirements:

- The roof must be capable of handling the weight of the unit. For unit weights, see [Table 4 \(page 13\)](#). Reinforce the roof if necessary.
- The appropriate accessory roof curb ([Figure 4](#)) must be installed prior to unit installation. The roof curb must be square and level to ensure proper condensate drainage. **Please follow all instructions provided with the kit.**
- Secure roof curb or frame to roof using acceptable mechanical methods per local codes. **NOTE:** Make sure the two supports beneath the unit have been removed.

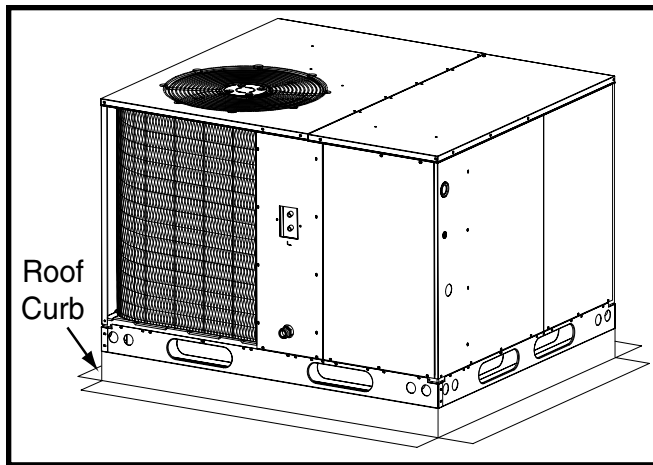

**Figure 4. Roof Top Installation**

### Horizontal to Downflow Conversion


The unit is shipped ready for horizontal duct connections. If down flow ducts are required, the unit must be converted following the steps below for the supply and return ducts.

1. Locate the duct cap inside the duct openings and remove the screw holding it in place.
2. Lift the cap out of the unit. (**Hint:** The cap can be pushed up from the bottom by reaching through the fork slot).
3. Cover the horizontal duct opening with the horizontal duct cap. The insulation will be on the indoor side.
4. Fasten the cover with screws to seal.

### Condensate Drain

Condensate is removed from the unit through the 3/4" female pipe fitting located on the front side of the unit. Install a 2 inch condensate trap in the drain line of the same size and prime with water. See [Figure 5](#).

When connecting rigid drain line, hold the female fitting with a wrench to prevent twisting. **Do not over tighten!** Refer to local codes and restrictions for proper condensate disposal requirements.

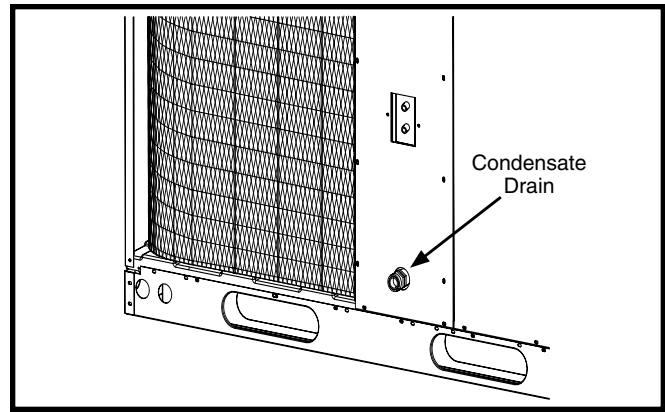

**Figure 5. Condensate Drain Location**

## ELECTRICAL WIRING

### ⚠ WARNING:

To avoid risk of electrical shock, personal injury, or death, disconnect all electrical power to the unit before performing any maintenance or service. The unit may have more than one electrical supply.

Label all wires prior to disconnection when servicing the unit. Wiring errors can cause improper and dangerous operation

- Electrical connections must be in compliance with all applicable local codes and ordinances, and with the current revision of the National Electric Code (ANSI/NFPA 70).
- For Canadian installations the electrical connections and grounding shall comply with the current Canadian Electrical Code (CSA C22.1 and/or local codes).

### Pre-Electrical Checklist:

- ✓ Verify that the voltage, frequency, and phase of the supply source match the specifications on the unit rating plate.
- ✓ Verify that the service provided by the utility is sufficient to handle the additional load imposed by this equipment. refer to the unit wiring label for proper high and low voltage wiring.
- ✓ Verify factory wiring is in accordance with the unit wiring diagram. See [Figure 8 \(page 15\)](#). Inspect for loose connections.

### Line Voltage

- A wiring diagram is located on the inside cover of the units electrical box. The installer should become familiar with the wiring diagram before making any electrical connections to the outdoor unit.
- **An electrical disconnect must be located within sight of and readily accessible to the unit.** This switch shall be capable of electrically de-energizing the unit.
- Line voltage to the unit should be supplied from a dedicated branch circuit containing the correct fuse or circuit breaker for the unit. Incoming field wiring



and minimum size of electrical conductors and circuit protection must be in compliance with information listed on the outdoor unit data label. Any other wiring methods must be acceptable to authority having jurisdiction.

- The outdoor unit requires both power and control circuit electrical connections. Refer to [Figure 8 \(page 15\)](#) for identification and location of outdoor unit field wiring interfaces. Make all electrical connections in accordance with all applicable codes and ordinances.
- Overcurrent protection must be provided at the branch circuit distribution panel and sized as shown on the unit rating label and according to applicable local codes. See the unit rating plate for minimum circuit ampacity and maximum overcurrent protection limits.
- Provide power supply for the unit in accordance with the unit wiring diagram, and the unit rating plate. Connect the line-voltage leads to the terminals on the contactor inside the control compartment.
- Use only copper wire for the line voltage power supply to this unit as listed in [Table 1](#). Use proper code agency listed conduit and a conduit connector for connecting the supply wires to the unit. Use of rain tight conduit is recommended.
- Units are shipped from the factory wired for 240 volt operation. Remove the lead from the transformer terminal marked 240V and connect it to the terminal marked 208V.
- Optional equipment requiring connection to the power or control circuits must be wired in strict accordance of the NEC (ANSI/NFPA 70), applicable local codes, and the instructions provided with the equipment.

COPPER WIRE SIZE — AWG (1% VOLTAGE DROP)				
SUPPLY WIRE LENGTH-FEET				SUPPLY CIRCUIT AMPACITY
200	150	100	50	
6	8	10	14	15
4	6	8	12	20
4	6	8	10	25
4	4	6	10	30
3	4	6	8	35
3	4	6	8	40
2	3	4	6	45
2	3	4	6	50
2	3	4	6	55
1	2	3	4	60

Wire Size based on N.E.C. for 60° type copper conductors.

**Table 1. Copper Wire Size**

## Grounding

### **WARNING:**

**The unit cabinet must have an uninterrupted or unbroken electrical ground to minimize personal injury if an electrical fault should occur. Do not use gas piping as an electrical ground!**

This unit must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code (ANSI/NFPA 70) or the CSA C22.1 Electrical Code. Use the grounding lug provided in the control box for grounding the unit.

### **Blower Speed**

The blower speed is preset (for operation) at the factory for heating and cooling. These factory settings are listed in [Table 9 \(page 21\)](#). For optimum system performance and comfort, it may be necessary to change the factory set speed.

### **CAUTION:**

**To avoid personal injury or property damage, make sure the motor leads do not come into contact with any uninsulated metal components of the unit.**

1. Shut off all electrical power to the unit and remove the blower panel. Locate the orange and red wires terminated to the blower motor. **NOTE:** The orange wire controls cooling operation while the red wire controls heating operation.
2. Verify the required speed from the airflow data found in [Table 9 \(page 21\)](#). Place appropriate wire on the correct motor speed tap for the required airflow point.

### **Thermostat Connections**

- The Q6SE heat pump may require a 2-stage cooling / heating thermostat if used in conjunction with certain installed accessories. Refer to your manual for additional instructions.
- The low voltage wires must be properly connected to the units low voltage terminal block as shown in [Figure 7 \(page 14\)](#). Recommended wire gauge and lengths for typical thermostat connections are listed in [Table 2 \(page 10\)](#).
- The L terminal on the defrost control board is used for fault monitoring. This is a 24V output and may be used with compatible thermostats. Refer to the thermostat manufacturer's manual to ensure compatibility. **FAILURE TO ENSURE COMPATIBILITY CAN LEAD TO THERMOSTAT FAILURE.**
- The thermostat should be mounted about 5 feet above the floor on an inside wall. DO NOT install the thermostat on an outside wall or any other location where its operation may be adversely affected by radiant heat from fireplaces, sunlight, or lighting fixtures, and convective heat from warm air registers or electrical appliances.

Thermostat Wire Gauge	Recommended T-Stat Wire Length (Unit to T-Stat)	
	2-Wire (Heating)	5-Wire (Heating/Cooling)
24	55	25
22	90	45
20	140	70
18	225	110

**Table 2. Thermostat Wire Gauge**

Refer to the thermostat's instruction sheet for detailed mounting and installation information.

### Defrost Cycle Timer

The defrost cycle timer controls the time interval of the hot gas defrost after the defrost sensor closes. It is located in the lower left corner of the defrost control board on the low voltage side of the control box. Three interval settings are available: 30 minutes, 60 minutes, and 90 minutes. Time setting selection is dependent on the climate where the unit is being installed.

- Example 1: Dry climate of Southern Arizona - A 90 minute setting is recommended.
- Example 2: Moist climate of Seattle, Washington - A 30 minute setting is recommended.

To set the cycle timer, place the timing pin on the defrost control board to the desired time interval post. **NOTE:** All units are shipped from the factory with the default time setting of 30 minutes.

### Demand Defrost Control

The demand defrost board controls the defrost cycle in response to ambient temperature, outdoor coil temperature and accumulated compressor run time. The heat pump is allowed to operate in the heating mode until the combination of outdoor ambient and outdoor coil temperatures indicate that defrosting is necessary, based on the programmed defrost curve. There are four preprogrammed defrost curves on the board.

- A jumper pin is used to switch between the different curves. The default jumper position is curve 1 and is the recommended setting for most standard applications. See [Table 3](#) for additional defrost curves settings.
- The factory default setting does not include a 30 second compressor delay function and has a 40° F defrost terminate temperature. If additional defrost time is needed, a higher terminate temperature is available by selecting a different demand curve. **NOTE:** The 30 second compressor delay function is optional and based on the demand curve selected.

- The standard defrost cycle will terminate after 13 minutes and 39 seconds or when the coil temperature reaches its terminate temperature, whichever occurs first.
- The defrost board is equipped with a 5 minute Anti-Short Cycle Delay (ASCD). The compressor will not turn on until it reaches the minimum 5 minute off time.
- The control contains a forced - defrost feature, which places the system into defrost mode every 6 hours and 4 minutes, unless the coil temperature is above the selected terminate temperature.
- The system can be manually forced into defrost mode at any time by shorting the **TEST** terminals on the demand defrost board together for more than 9 seconds. The coil temperature sensor does not need to be cold when the unit is forced into defrost. After the **TEST** input is removed, the defrost mode will terminate in 13.7 minutes, if the coil temperature is above the terminate set-point, or when the **Y** input is removed, whichever occurs first.

**NOTE:** If a demand curve is selected which has a 30 second compressor time delay in defrost, the delay is reduced to 10 seconds in TEST mode.

### Optional Outdoor Thermostat

An outdoor thermostat can be installed in the field with 2-stage electric heat by removing the orange wire from the **E** terminal on the terminal block and connecting to the outdoor thermostat. Connect the other side of the outdoor thermostat to **W2** from the thermostat.

### Optional Electric Heater Kits

Optional electric heater kits are available in 5 kw through 20 kw heating capacities. Single package heat pumps are designed to allow optional electric heat to be field installed as required by the building's particular heating load. The options available for each unit are shown in the heater kit installation instructions. A heating/cooling 24V thermostat should be used when an electric heater kit is installed. **NOTE:** A 2-stage heating thermostat is required if installing a 2-stage heater kit. As previously noted, a field installed circuit breaker kit is available as a means of electrical disconnect for the unit. Install the heater kits as directed by the instructions supplied with the heater kit. Follow all cautions and warnings as directed.

JUMPER POSITION	MINIMUM TIME BETWEEN DEFROSTS (MIN)	TERMINATE TEMPERATURE (° F)	30 SECOND COMPRESSOR DELAY FUNCTION
1	20	40	NO
2	20	40	YES
3	20	75	NO
4	20	75	YES

**Table 3. Demand Defrost Curve Profiles**

## START UP & ADJUSTMENTS

### Pre-Start Check List

- ✓ Verify the unit is level and allows condensate to drain.
- ✓ Verify the outdoor coil and top of the unit are free from obstructions and debris, and all equipment access/control panels are in place.
- ✓ Verify that the duct work is sealed to prevent air leakage.
- ✓ Verify that the line voltage power leads are securely connected and the unit is properly grounded.
- ✓ Verify that the low voltage wires are securely connected to the correct leads on the low voltage terminal strip.
- ✓ Verify that the outdoor fan turns freely.
- ✓ Verify that the power supply branch circuit overcurrent protection is sized properly.
- ✓ Verify that the thermostat is wired correctly. The thermostat system mode should be set to OFF and the thermostat fan mode should be set to AUTO.

### Start-Up Procedure

Close all electrical disconnects to energize the system.

---

### CAUTION:

---

If the unit is equipped with a crankcase heater, allow 24 hours prior to continuing the start up procedures to allow for heating of the refrigerant compressor crankcase. Failure to comply may result in damage and could cause premature failure of the system. This warning should be followed at initial start up and any time the power has been removed for 12 hours or longer.

---

### Air Circulation

Leave the thermostat system mode on OFF, and set the fan mode to ON. Blower should run continuously. Check the air delivery at the supply registers and adjust register openings for balanced air distribution. Examine ductwork for leaks or obstruction if insufficient air is detected. Set the thermostat fan mode to AUTO. The blower should stop running.

### Short Cycle Protection

1. With the system operating in cooling mode, note the temperature setting of the thermostat and gradually raise the set-point temperature until the unit de-energizes.
2. Immediately lower the set point temperature of the thermostat to its original setting and verify that the indoor blower is energized.
3. After approximately 5 minutes, verify the compressor and fan energize and the temperature of the discharge air is cooler than the room temperature.

### System Cooling

1. Set the thermostat's system mode to COOL and the fan mode to AUTO. Gradually lower the thermostat temperature setpoint below room temperature and verify the outdoor unit and indoor blower energize.
2. Feel the air being circulated by the indoor blower and verify that it is cooler than ambient temperature. Listen for

any unusual noises. If unusual sounds occur, determine the source of the noise and correct as necessary.

3. Allow the cooling system to operate for several minutes and then set the temperature selector above room temperature. Verify the fan and compressor cycle off with the thermostat. **NOTE:** The blower should also stop unless fan mode is set to ON.

### System Heating

If the unit has been equipped with optional electric heater kits, set the thermostat's system mode to HEAT and the fan mode to AUTO. Verify the compressor and outdoor fan are not energized but that the blower and heaters are. Feel the air being circulated by the indoor blower and verify that it is warmer than ambient temperature. Listen for any unusual noises. If unusual sounds occur, determine the source of the noise and correct as necessary.

## REFRIGERANT CHARGING

---

### WARNING:

---

Single Packaged Heat Pumps are shipped fully charged with R-410A refrigerant and ready for installation. When a system is installed according to these instructions, no refrigerant charging is required. If repairs make it necessary for evacuation and charging, it should only be done by qualified, trained personnel thoroughly familiar with this equipment. Some local codes require licensed installation/service personnel to service this type of equipment. Under no circumstances should the owner attempt to install and/or service this equipment. Failure to comply with this warning could result in property damage, personal injury, or death.

---

The system refrigerant charge can be checked and adjusted through the service ports provided at the front panel. Use only gauge lines which have a Schrader depression device present to actuate the valve. Draw a vacuum on gauge lines to remove air before attaching them to the service ports on the unit.

### IMPORTANT NOTES:

- To achieve rated capacity and efficiency the compressor must be exposed to refrigerant for at least 24 hours prior to running and then must be run for a minimum of 12 hours.
- The refrigerant charging charts are applicable to matched assemblies and at listed airflow for the indoor coil. Assemblies of indoor coils and outdoor units not listed are not recommended. See [Figure 9](#), [Figure 10](#) (page 16), [Figure 11](#), [Figure 12](#) (page 17), [Figure 13](#), [Figure 14](#) (page 18).

### Charging an R-410A Unit in AC Mode (With Outdoor Temperatures Above 65° F)

1. With the system operating at steady-state, measure the liquid refrigerant pressure in psig at the service valve.
2. Measure the liquid refrigerant temperature in Fahrenheit at the service valve.
3. For the temperature measured, determine the required liquid refrigerant pressure from the appropriate charging charts in [Figure 9](#), [Figure 10 \(page 16\)](#), [Figure 11](#), [Figure 12 \(page 17\)](#), [Figure 13](#), [Figure 14 \(page 18\)](#).
4. If the pressure measured in step 1 is greater than the required liquid refrigerant pressure determined in step 4, then there is too much charge in the system. Remove refrigerant and repeat steps 1 through 3 until the system is correctly charged.
5. If the pressure measured in step 1 is less than the required liquid refrigerant pressure determined in step 4, then there is too little charge in the system. Add refrigerant and repeat steps 1 through 3 until the system is correctly charged.

### Charging an R-410A Unit in Heating Mode

Use the steps below for proper charging of unit in heat mode:

1. Evacuate the refrigerant system.
2. Weigh in the proper charge as shown on the unit rating plate (during heating mode operation).
3. Verify the unit is operating properly according to the System Heating section on page 11.

#### Verification of charge in Heat Mode

- For units with a restrictor, use [Table 5 \(page 19\)](#), [Table 6 \(page 19\)](#), [Table 7 \(page 19\)](#), or [Table 8 \(page 20\)](#), as a guide.
- For units with a TXV, the refrigerant system should be evacuated and the proper charge weighed in as shown on the unit rating plate.

**NOTE:** Unit charge MUST be verified in cooling season.

## REPLACEMENT PARTS

Replacement parts are available through your distributor. Please have the complete model and serial number of the unit when ordering replacement parts.

#### ELECTRICAL:

- Capacitors
- Cooil Sensor
- Compressors
- Contactors
- Pressure Switches
- Relays
- Transformers

#### MOTORS:

- Blower Motor
- Fan Motor

#### COMPONENTS:

- Blower Assembly
- Cabinet Panels
- Expansion Valves
- Fan Grille
- Filter/Driers

## HEAT PUMP MAINTENANCE

### **WARNING:**

**To prevent electrical shock, personal injury, or death, disconnect all electrical power to the unit before performing any maintenance or service. Unit may have more than one electrical supply.**

### **CAUTION:**

**Use care when servicing the heat pump or removing components. Personal injury can result from sharp edges present in equipment constructed with sheet metal**

Proper maintenance is important to achieve optimum performance from the heat pump. The ability to properly perform maintenance on this equipment requires certain mechanical skills and tools. If you do not possess these skills, contact your dealer for maintenance. Consult your local dealer about the availability of maintenance contracts. Routine maintenance should include the following:

- Inspect and clean or replace air filters at the beginning of each heating and cooling season, or more frequently if required.
- Inspect the condensate drain and outdoor coil at the beginning of each cooling season. Remove any debris. Clean the outdoor coil and louvers as necessary using a mild detergent and water. Rinse thoroughly with water.
- Inspect the electrical connections for tightness at the beginning of each heating and cooling season. Service as necessary.

### **CAUTION:**

**The unit should never be operated without a filter in the return air system. Replace disposable filters with the same type and size.**

- The motors for the circulating air blower and the outdoor fan are pre-lubricated at the factory. No further oiling is required for the life of this product.

## FIGURES & TABLES

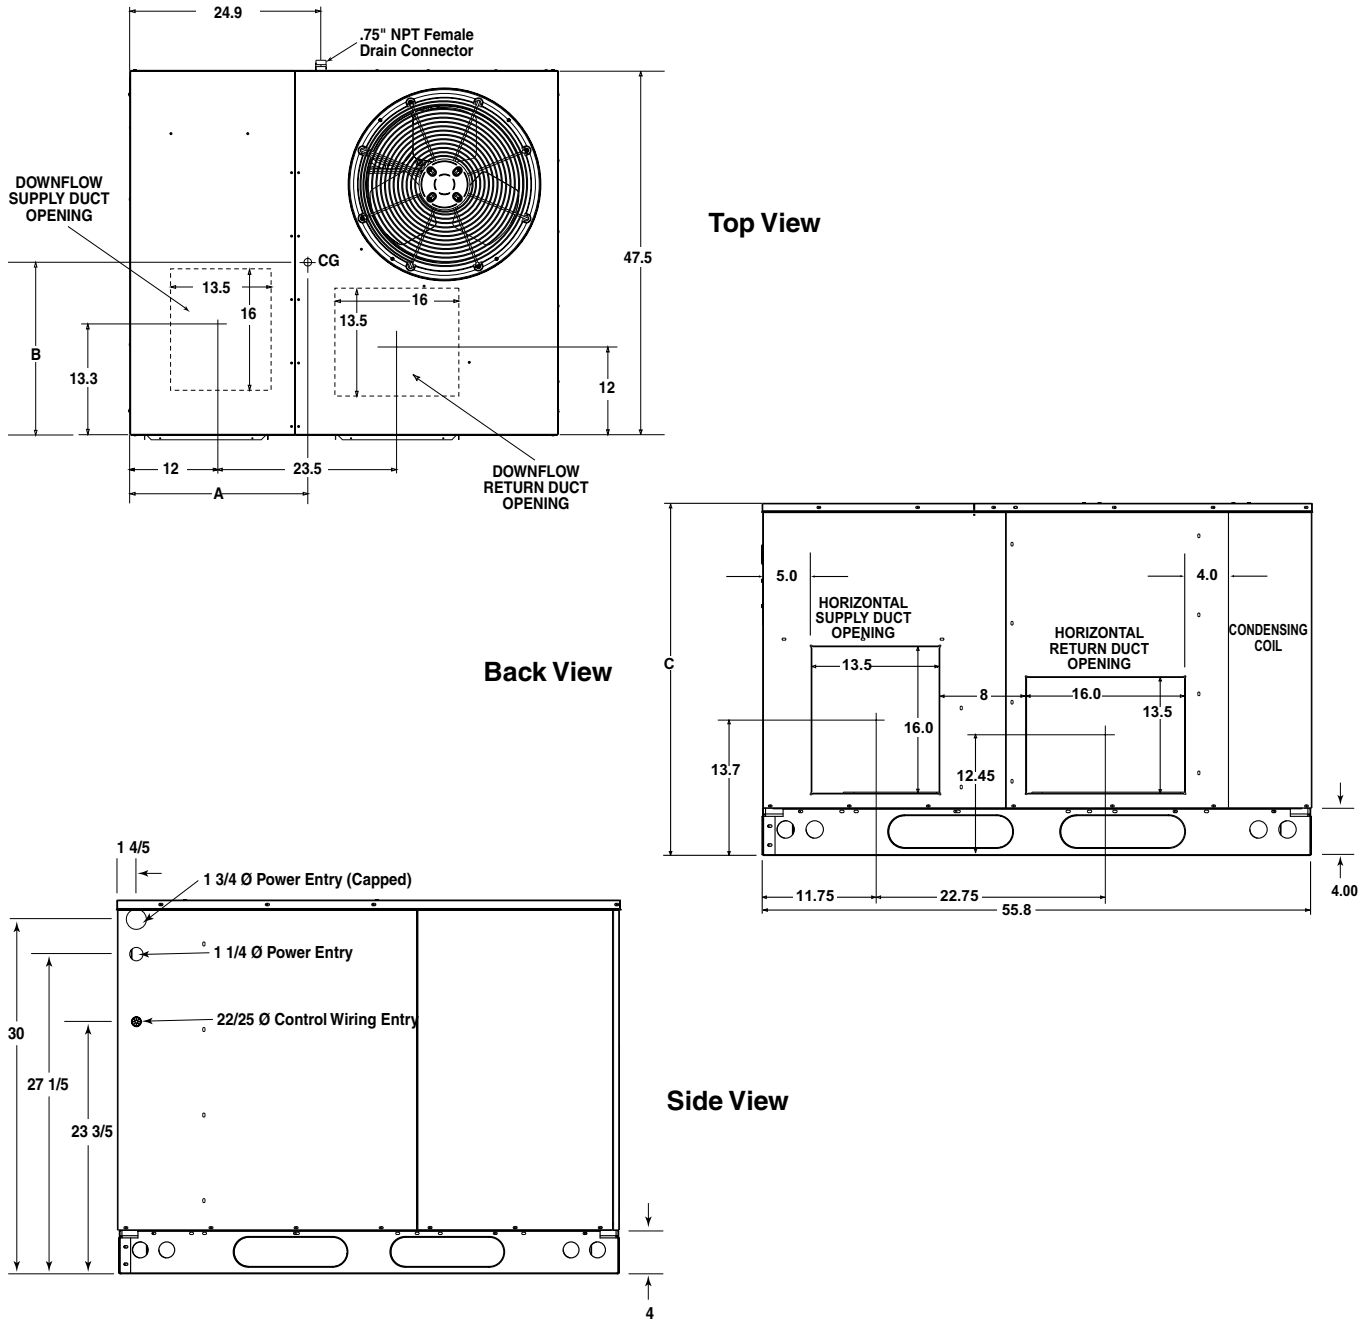



Figure 6. Q6SE Heat pump Dimensions

MODEL NUMBER Q6SE-	UNIT WEIGHT	CENTER OF GRAVITY		HEIGHT -C- (IN INCHES)	
		-A-	-B-	WITH BASE RAILS	WITHOUT BASE RAILS
X24	440	28.0	25.5	39.0	35.3
X30	450	28.0	26.0	39.0	35.3
X36	460	28.0	25.5	39.0	35.3
X42	560	29.5	26.0	43.0	39.3
X48	570	29.5	26.0	43.0	39.3
X60	580	29.5	26.0	43.0	39.3


Table 4. Center of Gravity & Unit Shipping Weights



## Electrical Information

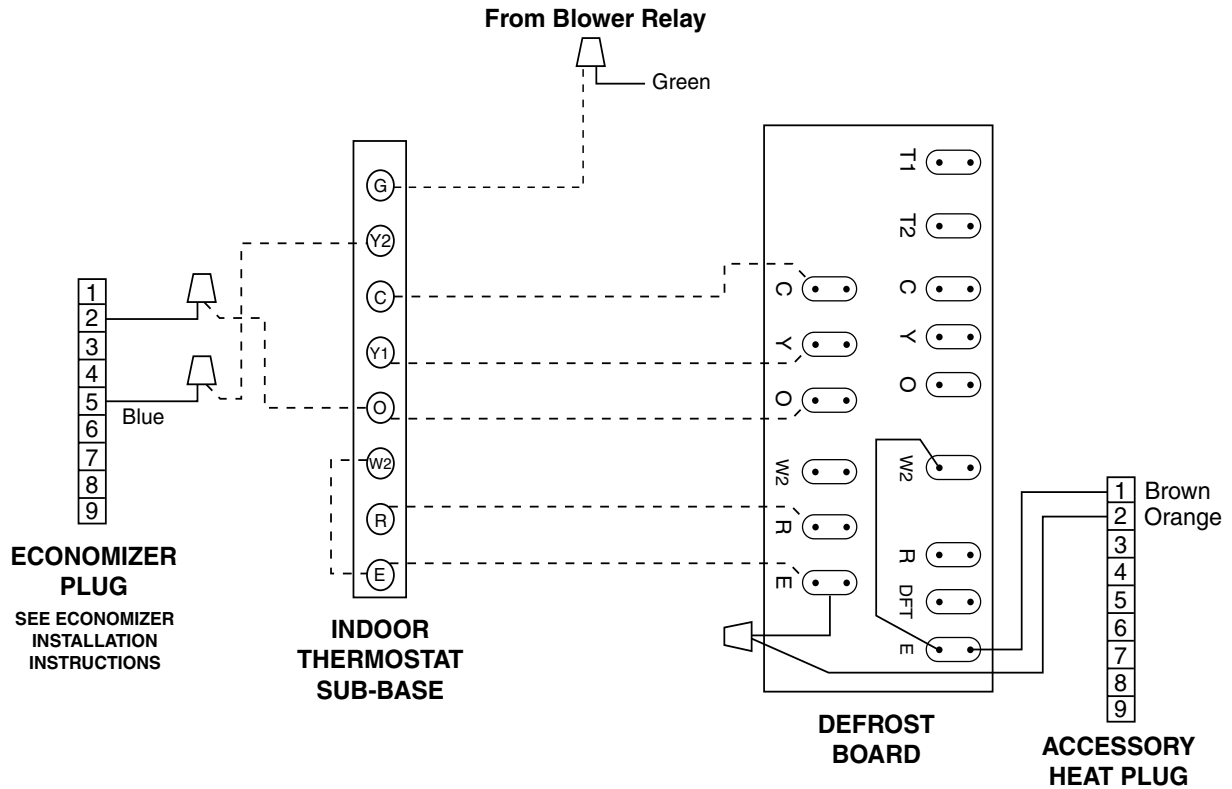

Typical Wiring (Field Supplied) for 1-Stage Cool, 1 Stage Electric Heat

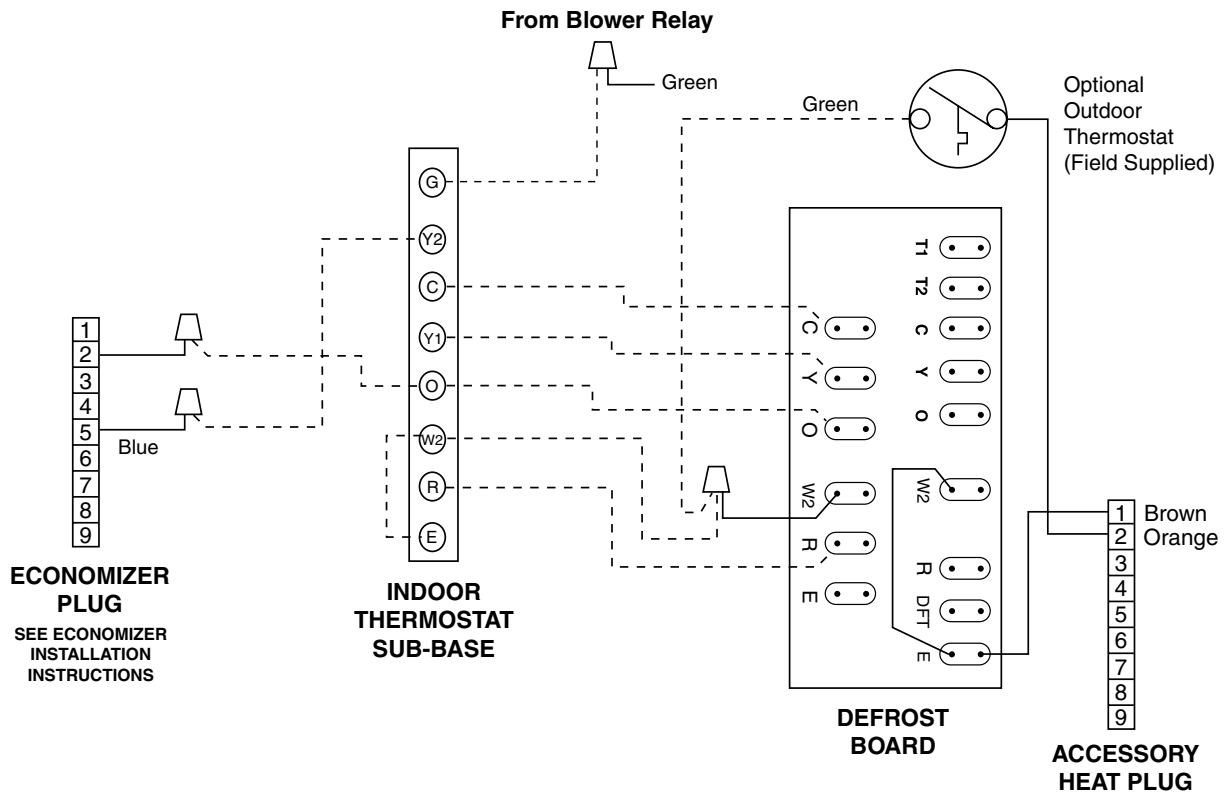

Typical Wiring (Field Supplied) for 2-Stage Cool, 2-Stage Electric Heat with an Optional Outdoor Thermostat

Figure 7. Typical Heat Pump Thermostat Connections 208V / 230V


# WIRING DIAGRAM

## Convertible Packaged Heat Pump

- NOTES:**
1. Disconnect all power before servicing.
  2. For supply connections use copper conductors only.
  3. Not suitable on systems that exceed 150V to ground.
  4. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C.
  5. For supply wire ampacities overcurrent protection, see unit rating plate.

208/230 Volt

Single Phase 60Hz

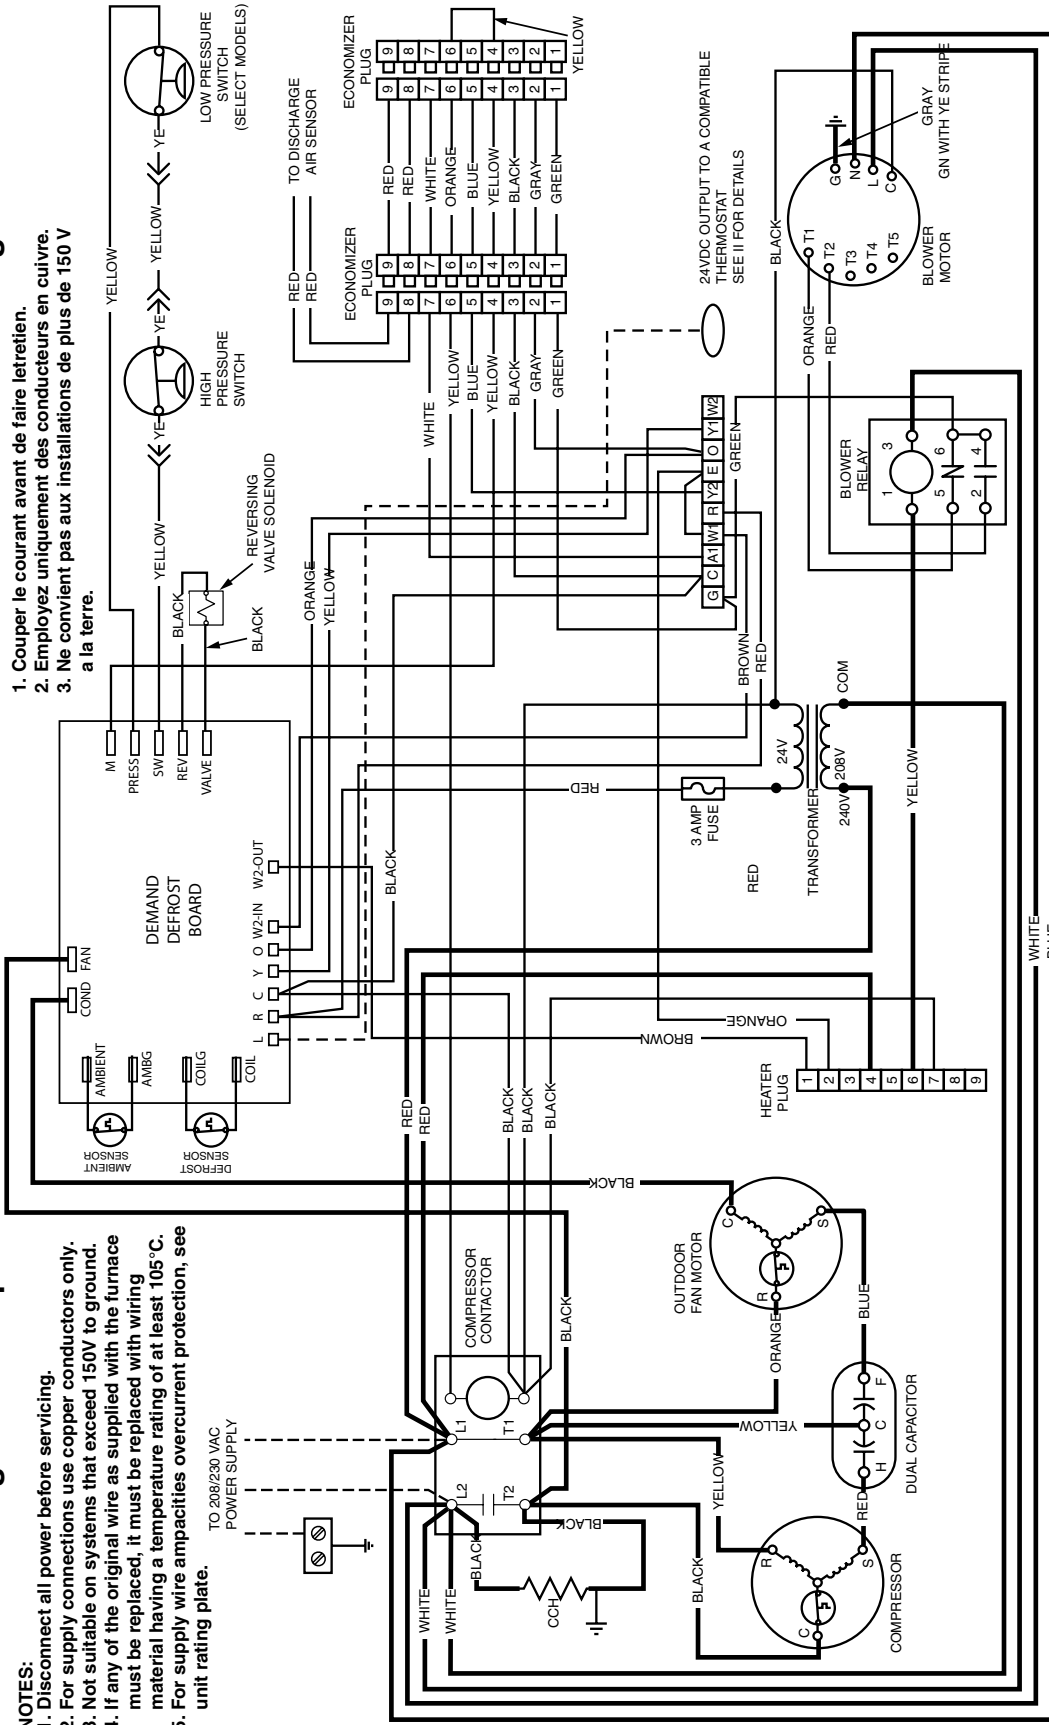

### DEFROST BOARD OPERATION:

1. Heat Pump operates in heating mode until the combination of outdoor ambient and outdoor coil temperatures initiate a defrost cycle. The outdoor coil temperature must be at or below 32°F before the defrost cycle begins.
2. There must be a minimum of 20 minutes between defrost cycles. After this time, temperature conditions must call for defrost continuously for 4 1/2 minutes before a defrost cycle is initiated.
3. The defrost cycle ends when the outdoor temperature reaches 32°F or the defrost terminate time of 13 minutes 39 seconds is reached.

### LEGEND:

- FIELD WIRING: Solid line
- LOW VOLTAGE: Dashed line
- HIGH VOLTAGE: Solid line with a dot

**NOTE:** See Installation Instructions for wiring, application, and information concerning accessory Heat Kits and other options.



1006497A  
05/15

Figure 8. Wiring Diagram for 208/230V Units

## Charging Charts - Cooling

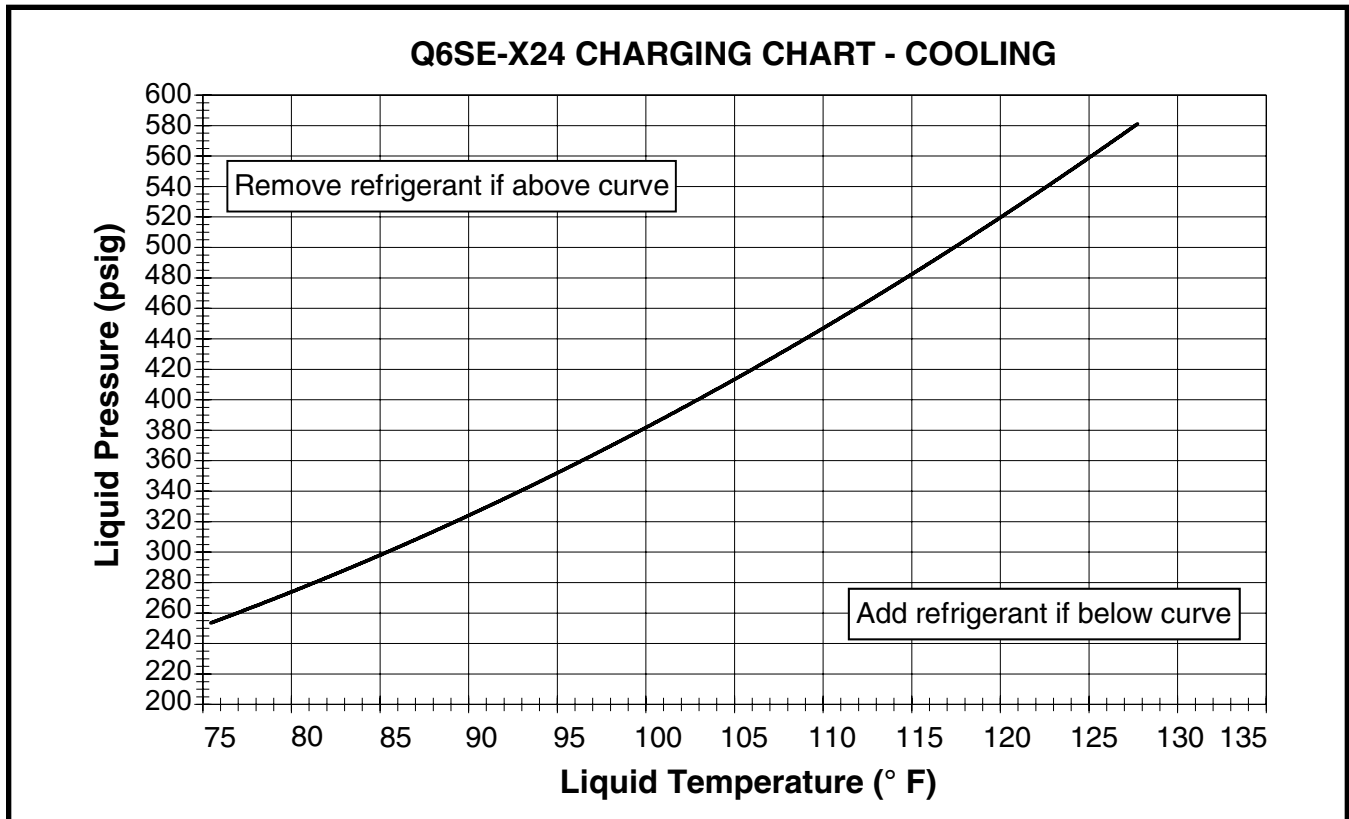


Figure 9. Charging Chart for 2 Ton Units

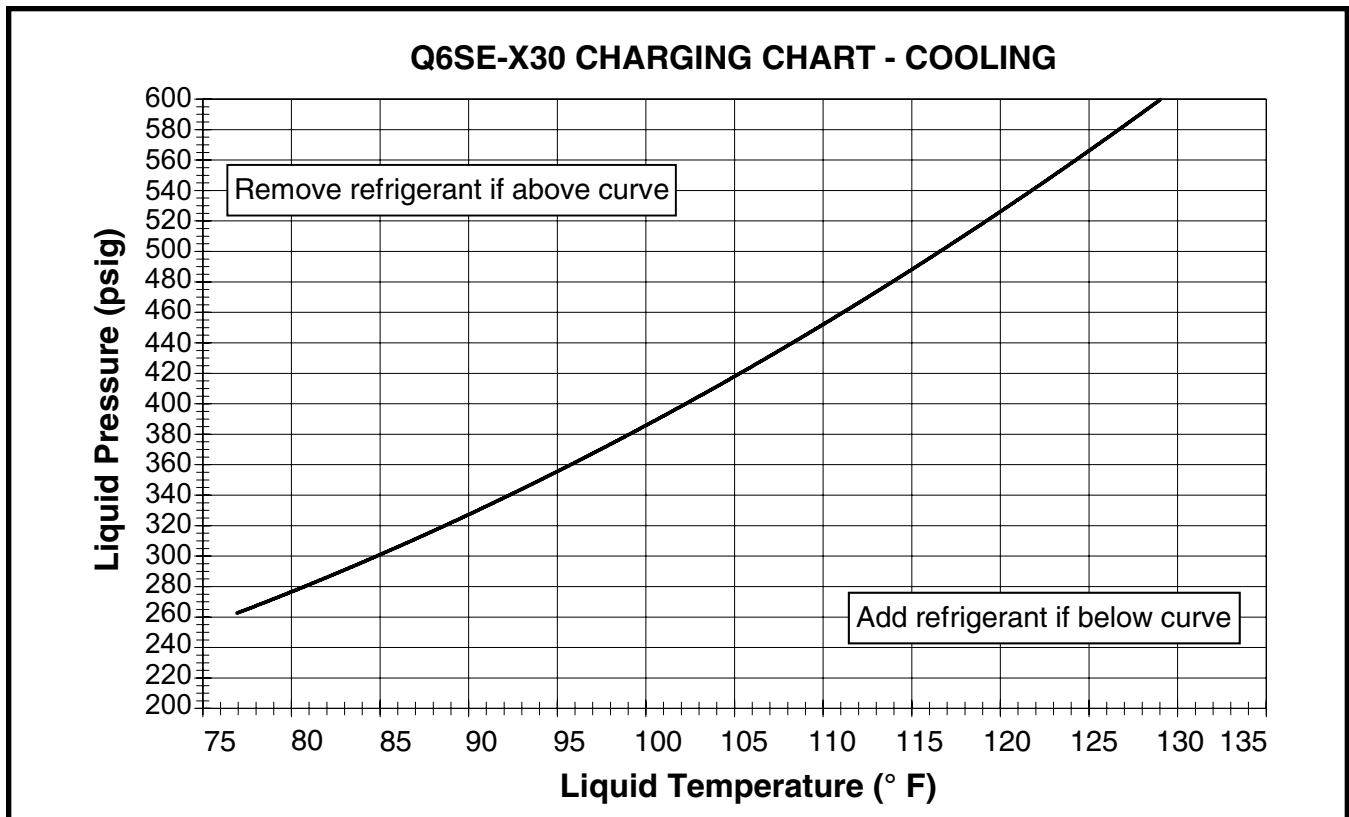


Figure 10. Charging Chart for 2.5 Ton Units

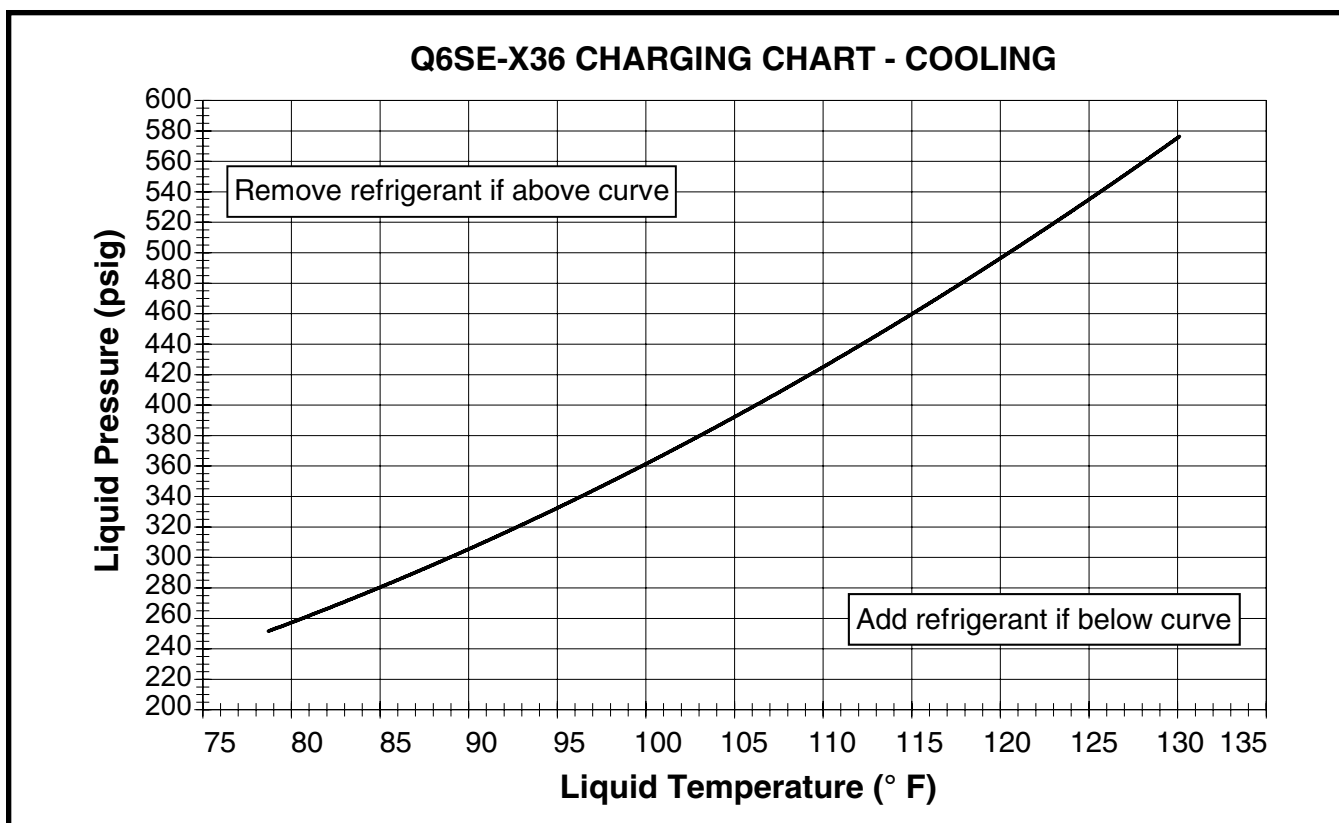


Figure 11. Charging Chart for 3 Ton Units

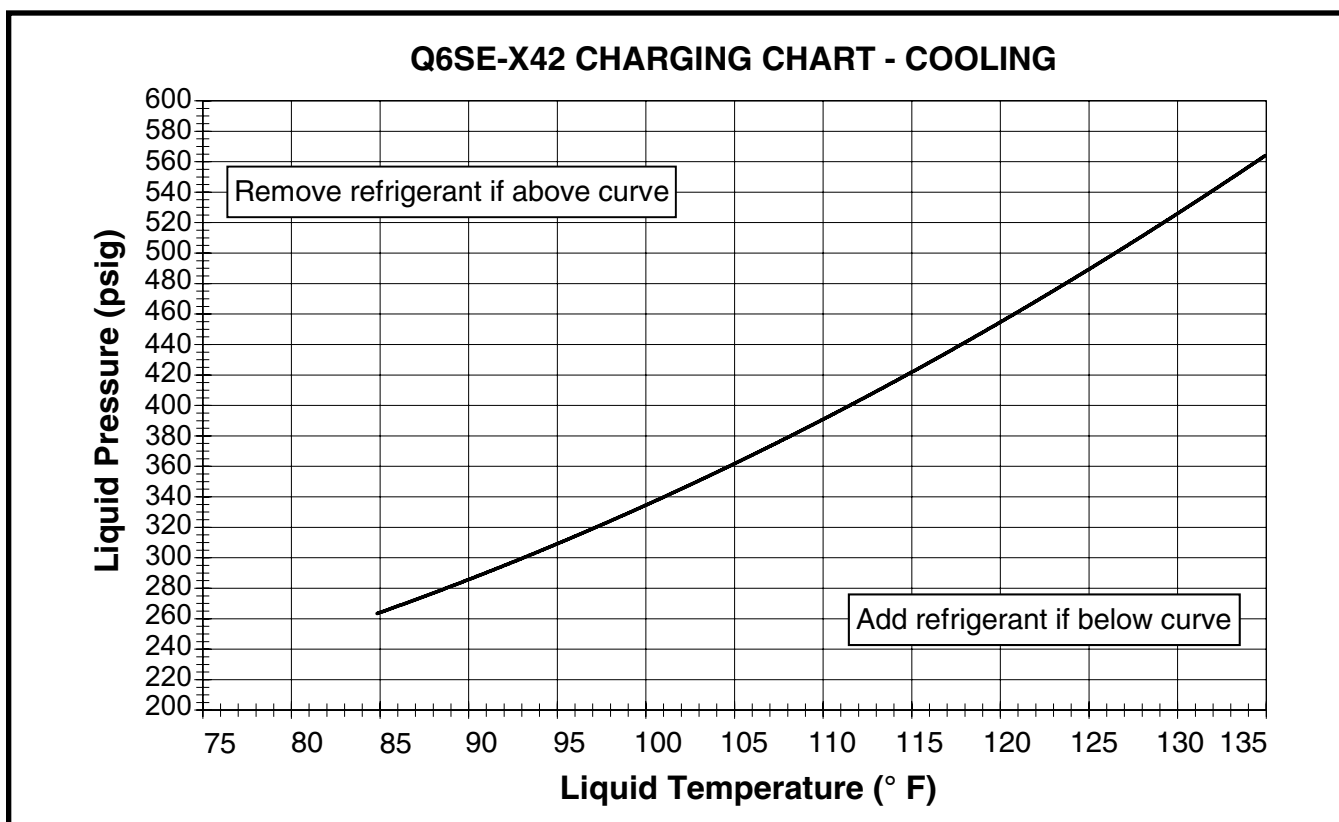


Figure 12. Charging Chart for 3.5 Ton Units

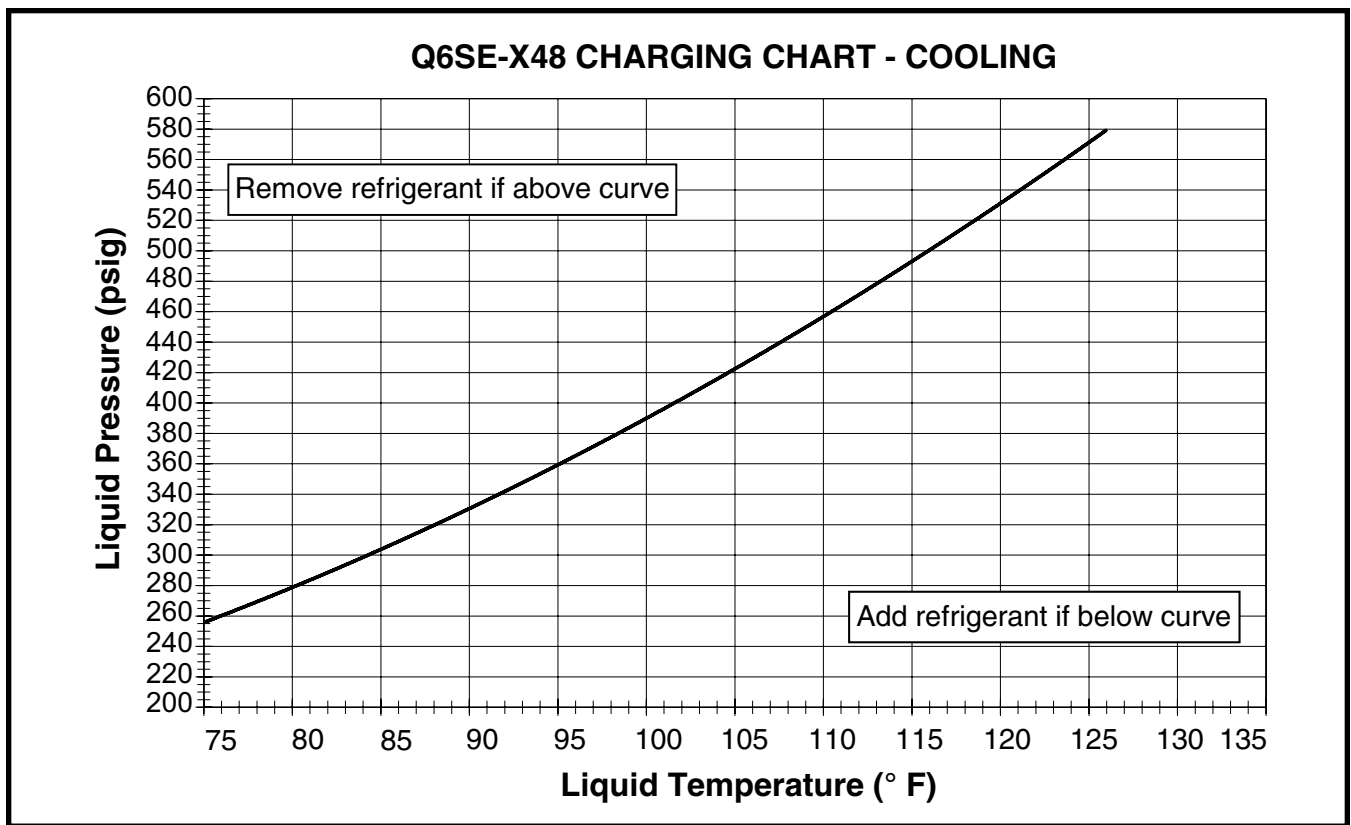


Figure 13. Charging Chart for 4 Ton Units

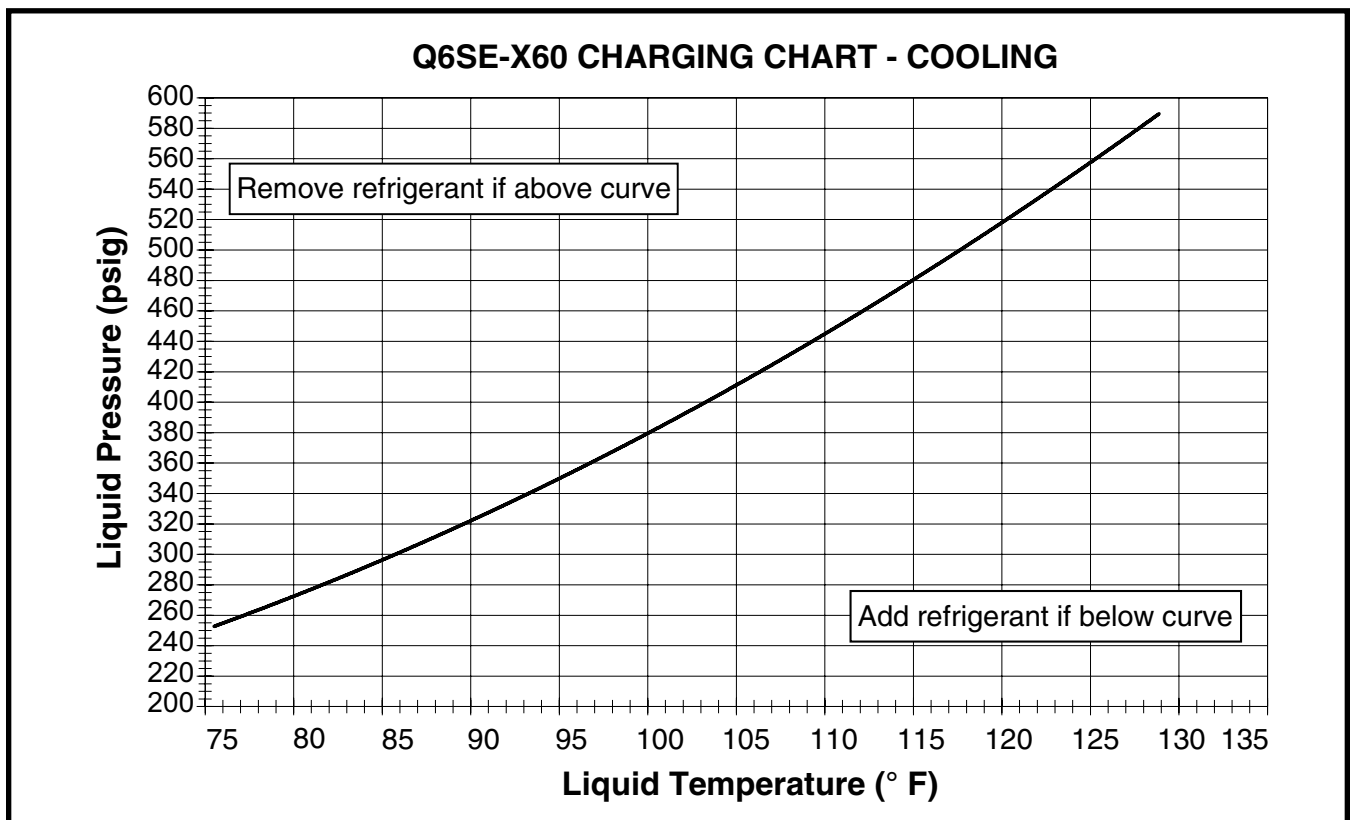


Figure 14. Charging Chart for 5 Ton Units



## Charging Tables - Heating

### LEGEND

Shaded boxes indicate flooded conditions.  
 Rated design values.

### NOTE:

• All pressures are listed psig and all temperatures in °F

X24 SERIES																				
OUTDOOR TEMPERATURE (° F)																				
SUC. PRESS.	0		10			20			30			40			50			60		
	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.
32	202	116	47	225	120	62	249	125	77	272	129	92	285	139	109	309	155	125	334	172
33	209	114	48	231	118	63	254	123	78	276	127	93	292	136	110	316	151	126	341	165
34	216	112	49	237	116	64	258	121	79	280	125	94	299	133	111	323	146	127	348	159
35	223	110	50	243	114	65	263	119	80	283	123	95	306	130	112	330	142	128	355	153
36	230	108	51	249	112	66	268	117	81	287	121	96	313	128	113	337	137	129	362	147
37	237	106	52	255	110	67	273	115	82	291	119	97	320	125	114	344	133	130	369	141
38	244	104	53	261	108	68	278	113	83	294	117	98	327	122	115	351	128	131	376	135

Table 5. Charging Table for 2 Ton Models

X30 SERIES																				
OUTDOOR TEMPERATURE (° F)																				
SUC. PRESS.	0		10			20			30			40			50			60		
	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.
32	202	116	47	225	120	62	249	125	77	272	129	92	285	139	109	309	155	125	334	172
33	209	114	48	231	118	63	254	123	78	276	127	93	292	136	110	316	151	126	341	165
34	216	112	49	237	116	64	258	121	79	280	125	94	299	133	111	323	146	127	348	159
35	223	110	50	243	114	65	263	119	80	283	123	95	306	130	112	330	142	128	355	153
36	230	108	51	249	112	66	268	117	81	287	121	96	313	128	113	337	137	129	362	147
37	237	106	52	255	110	67	273	115	82	291	119	97	320	125	114	344	133	130	369	141
38	244	104	53	261	108	68	278	113	83	294	117	98	327	122	115	351	128	131	376	135

Table 6. Charging Table for 2.5 Ton Models

X36 SERIES																				
OUTDOOR TEMPERATURE (° F)																				
SUC. PRESS.	0		10			20			30			40			50			60		
	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.	SUC. PRESS.	LIQ. PRESS.	DIS. TEMP.
33	199	115	47	224	119	61	248	124	75	272	128	90	286	140	107	312	157	123	337	175
34	206	113	48	230	117	62	253	122	76	276	126	91	293	137	108	319	153	124	344	169
35	213	111	49	235	115	63	258	120	77	280	124	92	300	134	109	326	148	125	351	163
36	220	109	50	241	113	64	262	118	78	283	122	93	307	131	110	333	144	126	358	157
37	227	107	51	247	111	65	267	116	79	287	120	94	314	128	111	340	139	127	365	150
38	234	105	52	253	109	66	272	114	80	291	118	95	321	125	112	347	135	128	372	144
39	241	103	53	259	107	67	277	112	81	294	116	96	328	123	113	354	130	129	379	138

Table 7. Charging Table for 3 Ton Models

X42 SERIES																				
OUTDOOR TEMPERATURE (° F)																				
Suc. Press.	0		10			20			30			40			50			60		
	Liq. Press.	Dis. Temp.	Suc. Press.	Liq. Press.	Dis. Temp.	Suc. Press.	Liq. Press.	Dis. Temp.	Suc. Press.	Liq. Press.	Dis. Temp.	Suc. Press.	Liq. Press.	Dis. Temp.	Suc. Press.	Liq. Press.	Dis. Temp.	Suc. Press.	Liq. Press.	Dis. Temp.
35	211	129	49	242	134	62	274	139	76	306	144	91	329	153	107	367	167	122	404	180
36	218	127	50	248	132	63	279	137	77	309	142	92	336	150	108	374	162	123	411	174
37	225	125	51	254	130	64	284	135	78	313	140	93	343	148	109	381	158	124	418	168
38	232	123	52	260	128	65	288	133	79	317	138	94	350	145	110	388	153	125	425	161
39	239	121	53	266	126	66	293	131	80	320	136	95	357	142	111	395	149	126	432	155
40	246	119	54	272	124	67	298	129	81	324	134	96	364	139	112	402	144	127	439	149
41	253	117	55	278	122	68	303	127	82	328	132	97	371	136	113	409	140	128	446	143

Table 8. Charging Table for 3.5 Ton Models

## Airflow Data

MODEL NUMBER Q6SE-	TAP	EXTERNAL STATIC PRESSURE DROP - INCHES WATER COLUMN															
		0.1		0.2		0.3		0.4		0.5		0.6		0.7		0.8	
<b>X24</b>	Tap T1	823	38.39	784	40.30	712	44.37	646	48.91	580	54.47	510	61.95	436	72.46	-	-
	Tap T2	969	32.60	924	34.19	866	36.48	800	39.49	717	44.06	652	48.46	591	53.46	522	60.52
	Tap T3*	1068	29.58	1010	31.28	947	33.36	906	34.87	814	38.81	743	42.52	674	46.88	617	51.21
	Tap T4**	1188	26.59	1142	27.67	1068	29.58	1022	30.91	954	33.12	861	36.69	803	39.34	763	41.41
	Tap T5	1330	23.75	1274	24.80	1221	25.88	1164	27.14	1105	28.59	1044	30.26	957	33.01	881	35.86
<b>X30</b>	Tap T1	890	35.50	832	37.97	766	41.25	687	45.99	624	50.63	576	54.85	502	62.94	419	75.40
	Tap T2*	969	32.60	924	34.19	866	36.48	800	39.49	717	44.06	652	48.46	591	53.46	522	60.52
	Tap T3**	1188	26.59	1142	27.67	1068	29.58	1022	30.91	954	33.12	861	36.69	803	39.34	763	41.41
	Tap T4	1382	22.86	1334	23.68	1273	24.82	1220	25.90	1164	27.14	1097	28.80	1020	30.97	947	33.36
	Tap T5	1640	19.26	1604	19.70	1547	20.42	1490	21.20	1437	21.99	1381	22.88	1324	23.86	1249	25.30
<b>X36</b>	Tap T1	1137	27.79	1075	29.39	1012	31.22	950	33.26	863	36.61	770	41.03	694	45.52	619	51.04
	Tap T2**	1242	25.44	1187	26.62	1128	28.01	1057	29.89	993	31.82	921	34.30	827	38.20	754	41.90
	Tap T3*	1418	22.28	1370	23.06	1308	24.15	1251	25.25	1204	26.24	1123	28.13	1064	29.69	974	32.44
	Tap T4	1567	20.16	1515	20.85	1459	21.65	1397	22.62	1338	23.61	1272	24.84	1184	26.68	1107	28.54
	Tap T5	1700	18.58	1658	19.06	1596	19.80	1534	20.60	1481	21.33	1421	22.23	1358	23.27	1279	24.70
<b>X42</b>	Tap T1**	1257	25.13	1199	26.35	1133	27.89	1070	29.53	982	32.17	906	34.87	830	38.06	761	41.52
	Tap T2	1374	22.99	1332	23.72	1270	24.88	1220	25.90	1153	27.40	1077	29.34	972	32.50	901	35.07
	Tap T3*	1574	20.07	1520	20.79	1470	21.49	1418	22.28	1356	23.30	1295	24.40	1214	26.02	1095	28.85
	Tap T4	1733	18.23	1678	18.83	1637	19.30	1575	20.06	1528	20.68	1467	21.54	1408	22.44	1334	23.68
	Tap T5	1848	17.10	1795	17.60	1741	18.15	1708	18.50	1641	19.25	1593	19.83	1541	20.50	1477	21.39
<b>X48</b>	Tap T1	952	33.19	901	35.07	864	36.57	728	43.40	672	47.01	583	54.19	508	62.19	-	-
	Tap T2**	1646	19.19	1593	19.83	1520	20.79	1476	21.41	1417	22.30	1349	23.42	1265	24.98	1198	26.37
	Tap T3*	1764	17.91	1705	18.53	1626	19.43	1570	20.12	1525	20.72	1451	21.77	1403	22.52	1304	24.23
	Tap T4	1962	16.10	1916	16.49	1838	17.19	1787	17.68	1720	18.37	1670	18.92	1595	19.81	1537	20.56
	Tap T5	2391	13.21	2334	13.54	2301	13.73	2242	14.09	2180	14.49	2132	14.82	2074	15.23	2017	15.66
<b>X60</b>	Tap T1	1088	29.04	1032	30.61	958	32.98	878	35.98	789	40.04	715	44.19	641	49.29	570	55.43
	Tap T2**	1764	17.91	1705	18.53	1626	19.43	1570	20.12	1525	20.72	1451	21.77	1403	22.52	1304	24.23
	Tap T3*	1962	16.10	1916	16.49	1838	17.19	1787	17.68	1720	18.37	1670	18.92	1595	19.81	1537	20.56
	Tap T4	2106	15.00	2059	15.34	2000	15.80	1944	16.25	1878	16.82	1828	17.28	1751	18.04	1689	18.71
	Tap T5	2391	13.21	2334	13.54	2301	13.73	2242	14.09	2180	14.49	2132	14.82	2074	15.23	2017	15.66

\* Denotes factory set cooling speed

\*\* Denotes factory set electric heating speed

Note: Heat Rise calculated based on 10KW of electric heat

**Table 9. Q6SE Airflow Data**







## INSTALLATION / PERFORMANCE CHECKLIST

<b>INSTALLATION ADDRESS:</b>		
CITY _____	STATE _____	
UNIT MODEL # _____		
UNIT SERIAL # _____		
Unit Installed Minimum clearances per <a href="#">Figure 2 (page 6)</a>	YES	NO
<b>INSTALLER NAME:</b>		
CITY _____	STATE _____	
Has the owner's information been reviewed with the customer?	YES	NO
Has the Literature Package been left with the unit?	YES	NO

VENTING SYSTEM		
Is the vent hood installed?	YES	NO
Is vent hood free from restrictions	YES	NO
Filter(s) secured in place?	YES	NO
Filter(s) clean?	YES	NO

REFRIGERATION SYSTEM		
Was unit given 24 hr warm up period for crankcase heaters (if applicable)?	YES	NO
Stage-1 Liquid Pressure (high side) _____		
Stage-1 Suction Pressure (low side) _____		

ELECTRICAL SYSTEM		
Electrical connections tight?	YES	NO
Line voltage polarity correct?	YES	NO
Rated Voltage: _____ VOLTS		
L1-L2 Volts: _____ VOLTS		
Has the thermostat been calibrated?	YES	NO
Is the thermostat level?	YES	NO
Is the heat anticipator setting correct?	YES	NO

**INSTALLER: PLEASE LEAVE THESE INSTRUCTIONS WITH THE OWNER.**



**IMPORTANT** - This product has been designed and manufactured to meet ENERGY STAR criteria for energy efficiency. However, proper refrigerant charge and proper air flow are critical to achieve rated capacity and efficiency. Installation of this product should follow the manufacturer's refrigerant charging and air flow instructions. Failure to confirm proper charge and airflow may reduce energy efficiency and shorten equipment life.

