


# INSTALLATION INSTRUCTIONS

## INSTALLATION INSTRUCTIONS FOR 547834 / 547835 CONCENTRIC CURB TRANSITION USED WITH R4GM 072 P6SD, Q6SD, R6GD 024-060 UNITS

FORM# 596A-0808 (596A-0298)

The Concentric Curb Transition is designed to drop into the curb and convert the square duct unit connections to round duct. For use with 547830, 547831, 547850, & 547851 roof curbs.

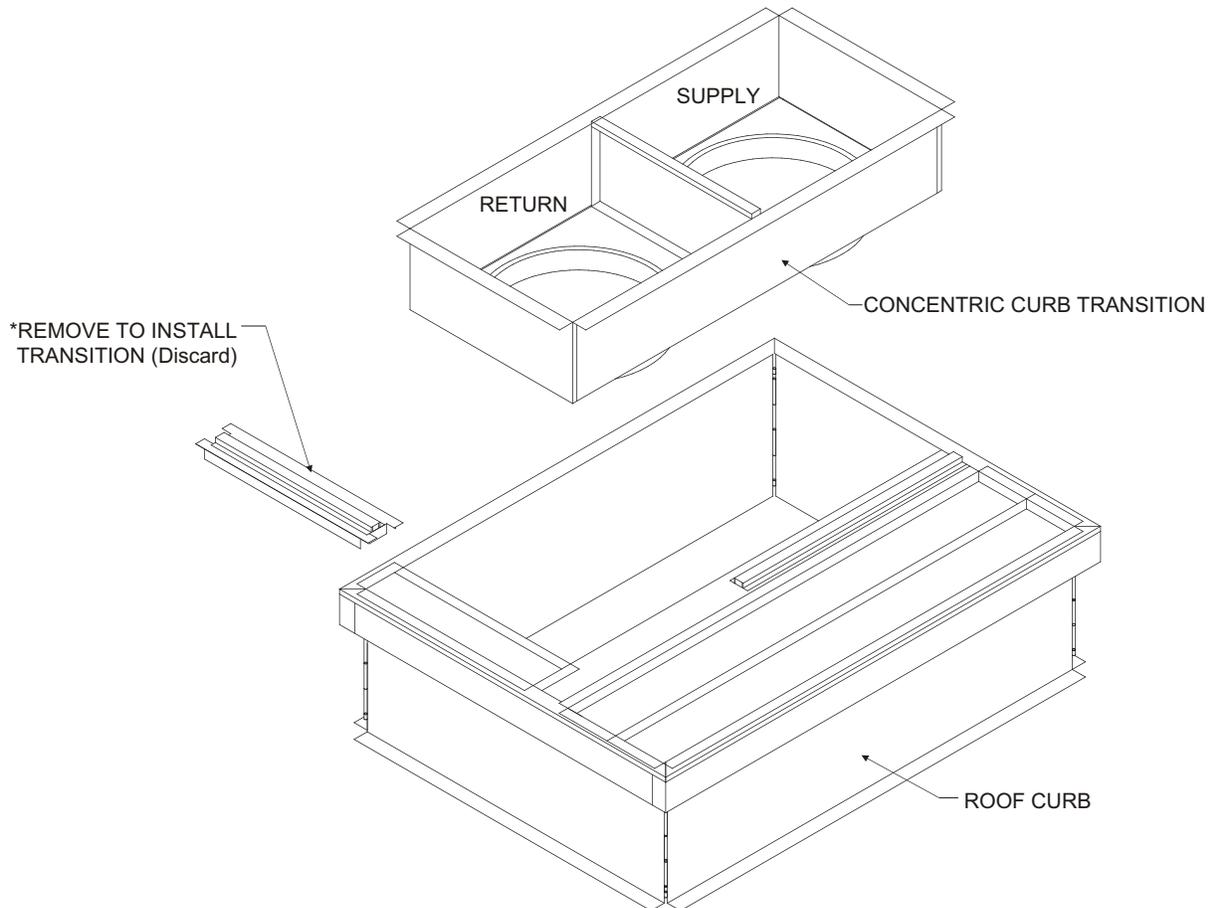

MODEL#	DUCT SIZE
547834	16" ROUND
547835	18" ROUND

### Step 1:

Check for correct part number listed above:

### Step 2:

Attach duct to transition duct connections.

### Step 3:

Install transition in supply/return opening in roof curb.

© Nortek Global HVAC, LLC 2015. All Rights Reserved.

SUPERSEDES 10-26-04  
SEPTEMBER 2, 2008

NEITRN06