

# MAC/MGH Furnace

## Installation Instructions

### Replacement Fan/Limit – Part No. 902909

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. Read all instructions carefully before starting the installation. **NOTE: CONTROL COMES PRE-WIRED FOR MAC FURNACE INSTALLATION. MAKE APPROPRIATE WIRE CHANGES FOR MGH FURNACES (SEE FIGURE 2).**

### INSTALLATION SEQUENCE

#### MAC 1175 FURNACE

1. Remove the cover from the control box.
2. Attach the timer to the outside bottom edge of the control box cover.
3. Remove the bushing from the bottom of the control box.
4. Remove the fan/limit combination control.
5. Install the limit into the opening from the old fan/limit combination control.
6. Remove the wires attached to the old fan/limit control.
7. Run the wires attached to the timer through the bushing at the bottom of the control box and install the bushing.
8. Connect the wires per the wiring diagram. (See Figure 1)
9. Attach the control box cover.
10. **DELAY ON MAKE** dial should be set for 60 seconds.
11. **DELAY ON BREAK** dial should be set for 120 seconds.

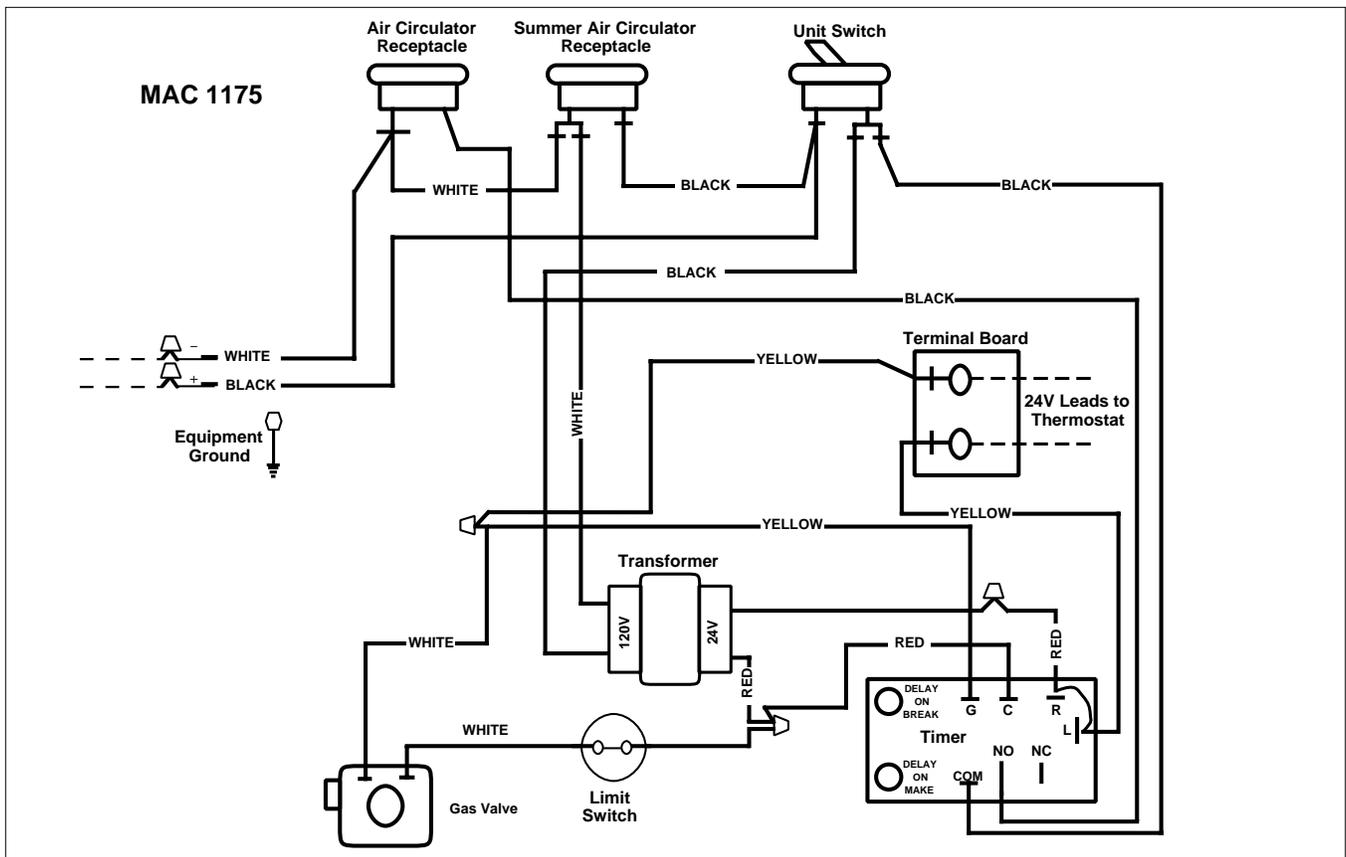


Figure 1. MAC 1175 Wiring Diagram

# INSTALLATION SEQUENCE MGH FURNACE

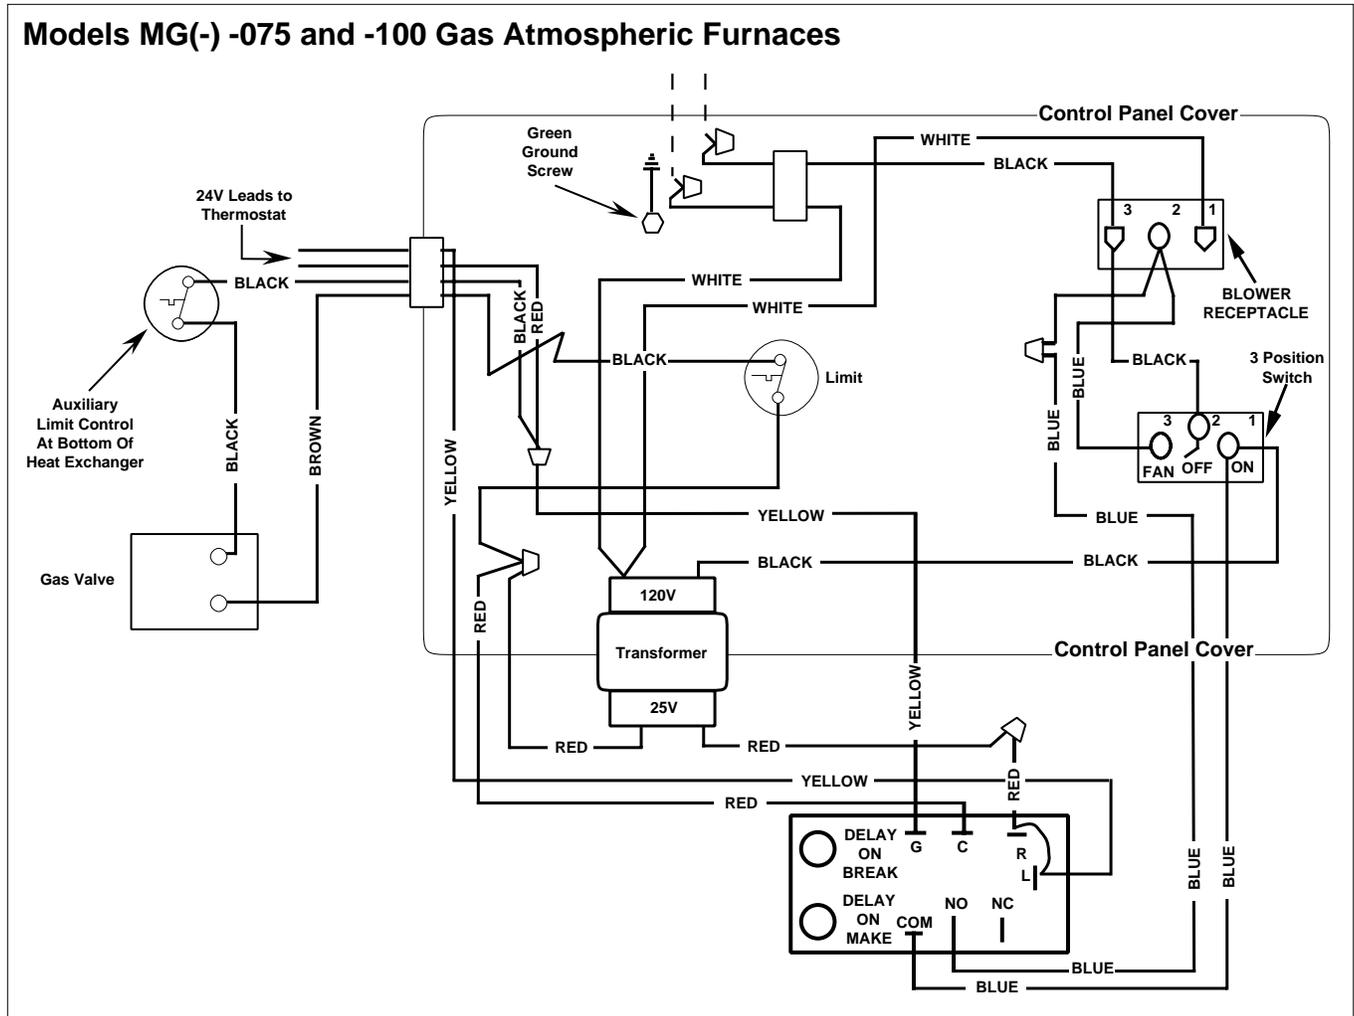


Figure 2. MGH Furnace Wiring Diagram

**INSTALLER:**

**PLEASE LEAVE THESE  
INSTALLATION INSTRUCTIONS  
WITH THE HOMEOWNER.**

