

WIRING DIAGRAM

For Single Stage Furnaces

Refer to the Installation Instructions provided with the furnace for the proper heating and cooling speeds for your application.

Red LED Flash	Error/Condition
	Flash codes stored in memory (auto-erased after 14 days)
1	System Lockout (Retries Exceeded)
2	Pressure Switch Stuck Closed
3	Pressure Switch Stuck Open
4	Open High Temperature Limit Switch
5	Flame Sensed > 4.25 Seconds with Gas Valve De-Energized
6	Open Flame RO Switch
8	Ignitor Relay Error
10	Open Fuse
11	Ignitor Open
12	Inducer Relay Error
	Flash codes NOT stored in memory
7	Low Flame Sense Signal
9	Twinning Fault
Off	Control Failure / No Power / Internal Fault / IRQ Loss Gas Heating Lockout (Gas valve energized when it should be de-energized) Or Gas valve De-energized when it should be Energized
Rapid Flash	Reverse Polarity
Continuous On	Normal Operation

If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature of at least 105° C.

Use copper conductors only.


Cool Motor SPEED DIPSWITCH SETTING (S1-1, S1-2, S1-3)									
	1	2	3	1	2	3	1	2	3
Motor SPEED Cool	Y	T1	T2	T3	T4	T1+T2	T1	T1	T1

Heat Motor SPEED DIPSWITCH SETTING (S2-1, S2-2)						
	1	2	1	2	1	2
Motor SPEED Heat	W	T1	T2	T3	T4	

Fan Motor SPEED DIPSWITCH SETTING (S2-3, S2-4)						
	1	2	1	2	1	2
Motor SPEED Fan	G	T1	T2	T4	T1+T2	

LEGEND:

FIELD WIRING	---
LOW VOLTAGE	—
HIGH VOLTAGE	—

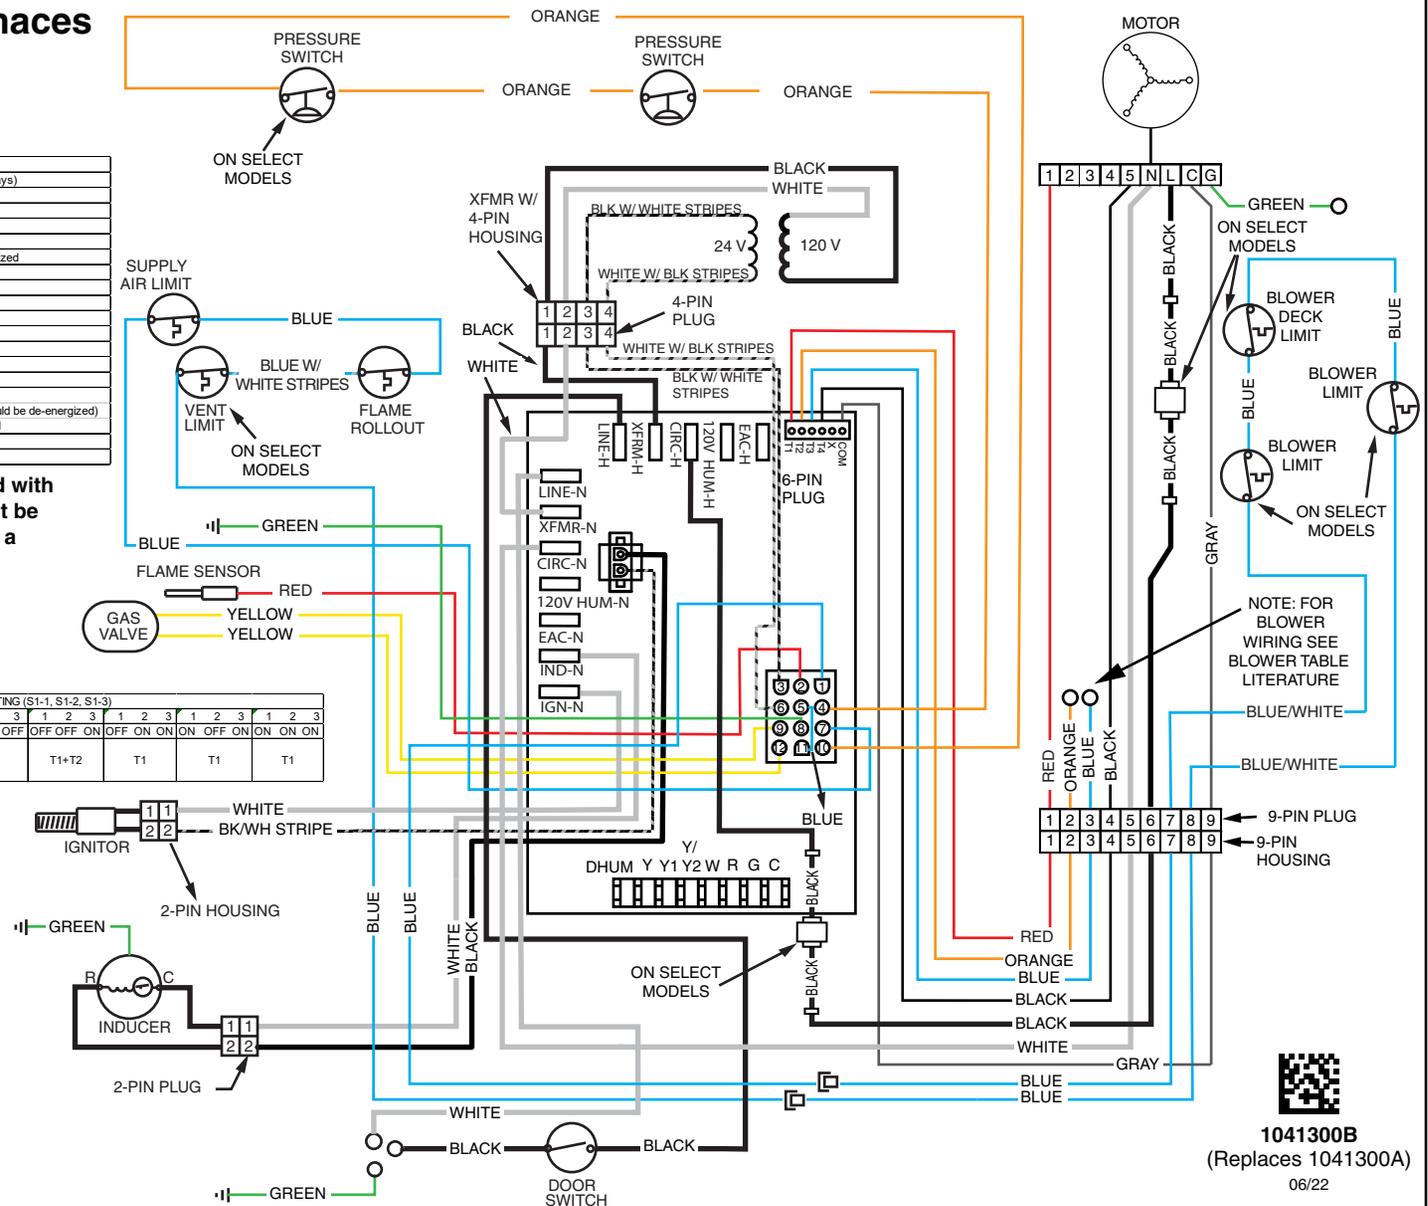

1041300B
(Replaces 1041300A)

06/22